

55255

FORD ESCAPE
MAZDA TRIBUTE

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

9/1/2010

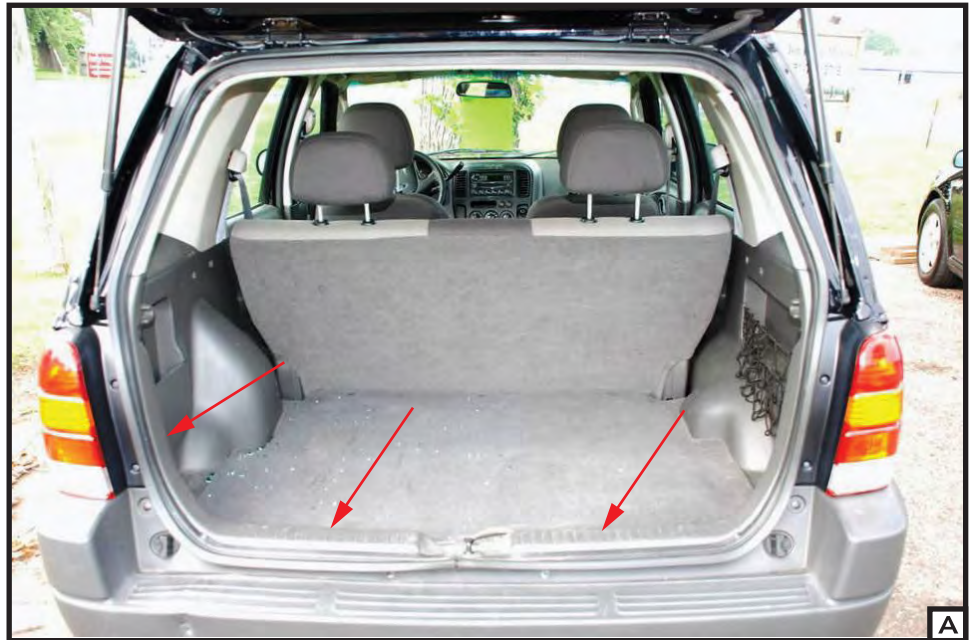

English

1. Open the rear hatch and remove the rear scuff panel (A). On the driver side pull out the rear trim panel to locate the vehicle's OEM tow harness connector (A). The connector will mate with the one on the 4-Flat harness.
2. Insert the 4-Flat harness connector into the vehicle's OEM tow harness connector. Make sure the connector is fully inserted with locking tab in place.
3. Route the 4-flat wire to the center of the vehicle and out the hatch when in use. When not in use roll up and store in an out of the way location in the rear cargo area.
4. Re-install all items removed during install.