

55312

CHEVROLET BLAZER GMC SUBURBAN
CHEVROLET C/K SERIES PICKUP GMC SYCLONE
CHEVROLET S-10 PICKUP ISUZU HOMBRE
CHEVROLET SUBURBAN
GMC C/K SERIES PICKUP
GMC JIMMY
GMC SONOMA PICKUP

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

03/23/09

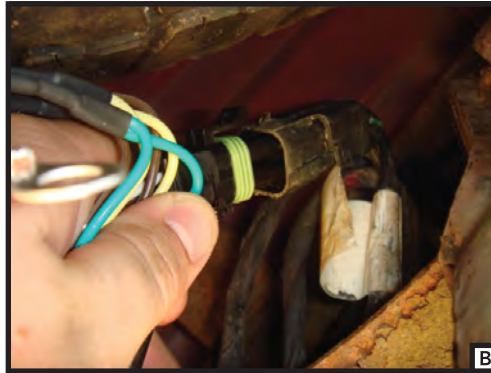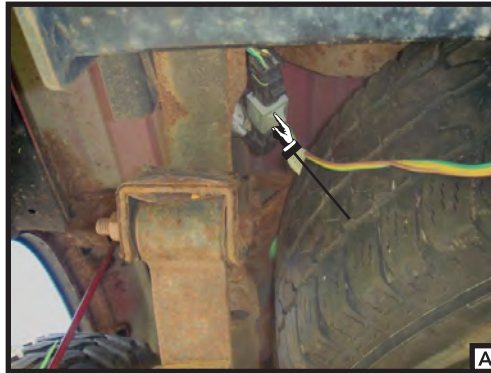

English

1. Locate the vehicles taillight wiring harness location T3 in-between the driver's side frame rail and the spare tire. [A]

2. Separate the vehicles connectors being sure not to damage the locking tabs. [B]
Insert the T-connector in-between the separated connectors making sure the connectors are fully inserted with locking tabs in place. [C]


3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

4. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

5. Secure any loose wires with the cable ties provided.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

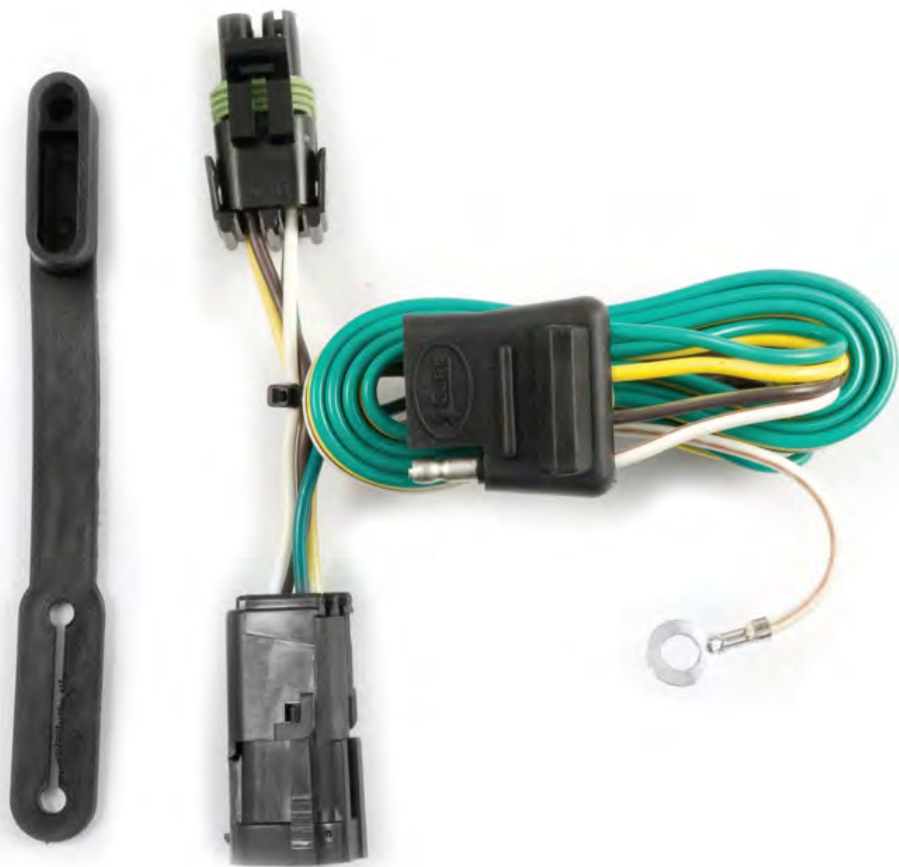

55312