

# 55314

FORD RANGER

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!


Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

4/3/09

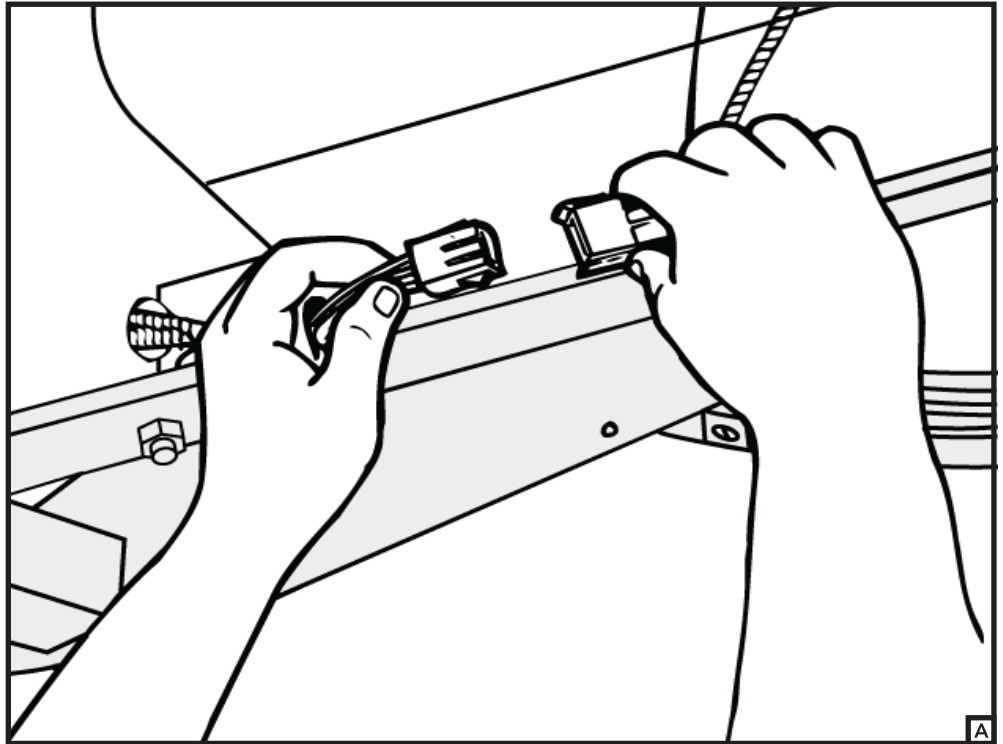

## English

1. Locate the vehicle's tail light wiring harness along the inside of the left rear frame rail. (T3) This harness will have a connection point with connectors matching the ends of the T-connector adapter.
2. Separate the harness connectors, being careful not to break the locking tabs. Check to see that the mating surfaces of the connectors are free of dirt and clean if necessary.
3. If vehicle's harness connectors are gray color, locating tabs will need to be trimmed from the male harness connector and the male end of the T-connector adapter. (See illustration)



4. Insert the T-connector adapter between the harness connectors and lock into place. Be sure that connectors are fully inserted with locking tabs in place. [A]
5. Route the T-connector harness to the center of the vehicle and secure wire to vehicle crossmember or other mounting point using cable ties provided.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surfaces before drilling to avoid damage to vehicle and/or personal injury.