

55317

DODGE DAKOTA
DODGE PICKUP
DODGE RAM FULLSIZE
DODGE RAMCHARGER
PLYMOUTH TRAILDUSTER

WIRING LOCATION GUIDE
GUÍA DE UBICACIÓN DEL CABLEADO
IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

03/20/09

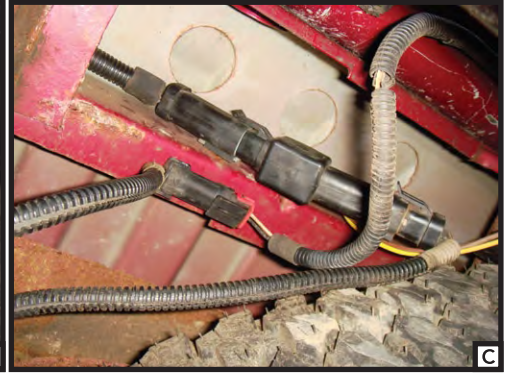

English

1. Starting on the drivers side along the frame rail locate the vehicles taillight wiring harness there will be connectors matching those on the T-connector.**[A]**

2. Separate the vehicles connectors making sure not to damage the locking tabs.**[B]** Insert the the T-connector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.**[C]**

3. Route the T-connector end with the green wire to the passenger side. Make sure to avoid areas that may cut or pinch the wire. Repeat step 2 on the passengers side using the green wire.

4. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.