


INSTALLATION INSTRUCTIONS

⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

APPLICATIONS

Make	Model
Chrysler	Town & Country
Dodge	Caravan
Dodge	Dakota
Dodge	Grand Caravan
Mitsubishi	Raider
Plymouth	Grand Voyager
Plymouth	Voyager

CUSTOM WIRING HARNESS

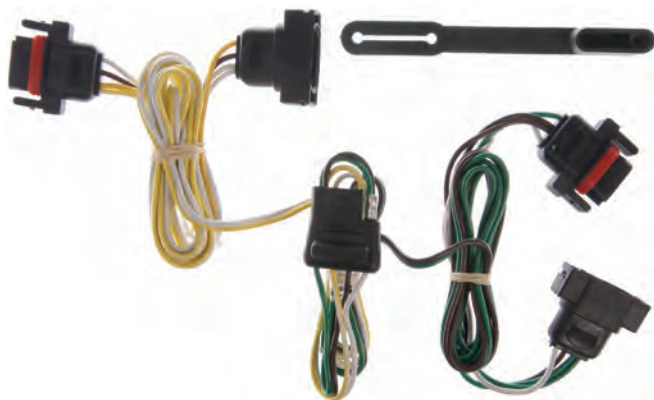

⚠ WARNING ⚠ ⚡

Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

WIRING LOCATION GUIDE

PICKUP TRUCKS (T)

Representative vehicle shown below

T1 - Behind driver side taillight housing

T2 - Behind passenger side taillight housing



SUVS, MINI & FULL-SIZED VANS (S)

Representative vehicle shown below

S1 - Behind driver side taillight housing

S2 - Behind passenger side taillight housing



NOTICE ⓘ ⓘ

All steps must be followed to ensure the wiring harness will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

Phillips screwdriver

INSTALLATION / SAFETY INSTRUCTIONS

All Vans

Step 1

Remove the driver side taillight to locate the vehicle taillight wiring harness connectors. The connectors will be similar to those on the custom wiring harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs (A). Repeat this step on the passenger side.

Step 2

Starting in the center of the vehicle, route the custom wiring harness end with the yellow wire to the driver side tucking the wire between the bumper and the body as you go. Insert the custom wiring harness end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

Route the custom wiring harness end with the green wire to the passenger side. Repeat step 2 on the passenger side using the harness end with the green wire.

Step 3

Reinstall all items removed during install. Install the provided 4-flat dust cover to help prevent corrosion.

Dodge Dakota

Step 1

Remove the two Phillips screws securing the driver side taillight assembly. Locate the vehicle taillight wiring harness connectors. The connectors will be similar to those on the custom wiring harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs. Repeat this step on the passenger side (B,C).

Step 2

Insert the custom wiring harness end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place (D).

Step 3

Route the custom wiring harness end with the green wire to the passenger side behind the removed scuff panels. Repeat step 2 on the passenger side using the harness end with the green wire (E).

Step 4

Reinstall all items removed during install. Install the provided 4-flat dust cover to help prevent corrosion.

