

# 55353

NISSAN PATHFINDER  
NISSAN PICKUP

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

01/27/09

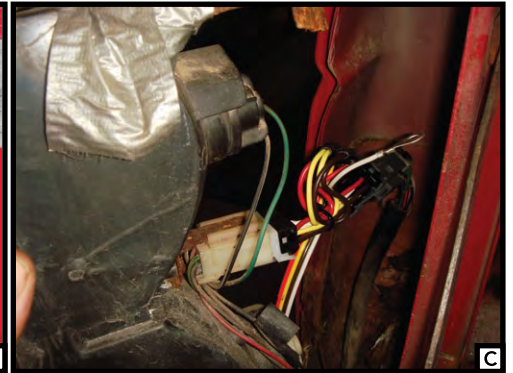

## English

1. Open the tailgate and on the drivers side remove the two hex head bolts securing the taillight assembly. **[A]** Remove the taillight assembly separate the connectors making sure not to damage the locking tabs. **[B]** Repeat on the passenger side.
2. On the driver's side place the T-connector end with the yellow wire between vehicle harness and the taillight assembly make sure the connectors are fully inserted with locking tabs in place. **[C]**
3. Route the green wire and the 4-Flat wire down through the opening under the taillight assembly. **[D]** Then along the backside of the bumper to the passenger side and up through the opening under the taillight assembly. Repeat step 2 using the green wire. Re-assemble the taillights on both sides.
4. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.
5. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.
6. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



55353