

55364

CHRYSLER 300M
CHRYSLER CONCORDE
CHRYSLER INTREPID (CANADA ONLY)
CHRYSLER LHS
DODGE INTREPID

WIRING LOCATION GUIDE
GUÍA DE UBICACIÓN DEL CABLEADO
IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.





¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

02/04/09

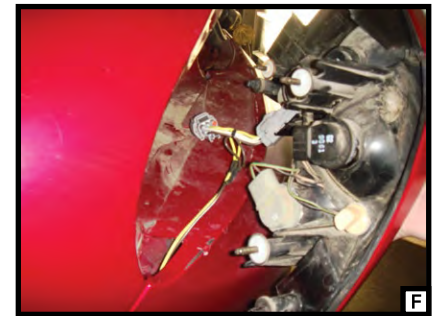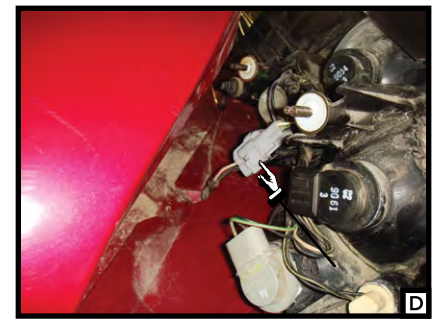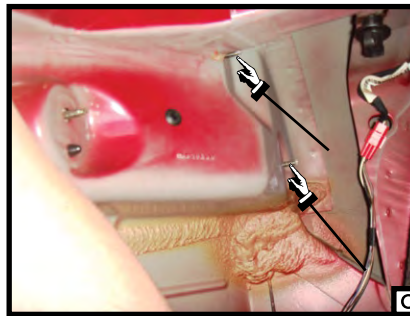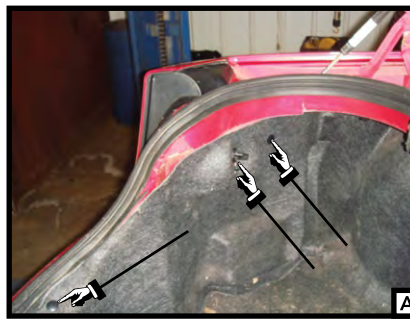

English

1. Open the trunk on the drivers side remove the plastic wing nut and trim fasteners holding on the trunk liner.[A] Pull back on the trunk liner to expose two more plastic wing nuts.[B] Remove the last two plastic wing nuts and remove the taillight to expose the vehicles taillight wiring harness.[C] Separate the vehicles connectors.[D] Repeat on the passenger side.

2. On the drivers side route the T-connector end with the yellow wire up behind the bumper and thru the opening under the taillight assembly.[E] Insert the T-connector end with the yellow wire in-between the separated connectors.[F]

3. Route the T-connector end with the green wire to the passenger side behind the bumper. Repeat step 2 using the green wire on the passenger side. Re-install the taillights and trunk lining.


4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

6. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

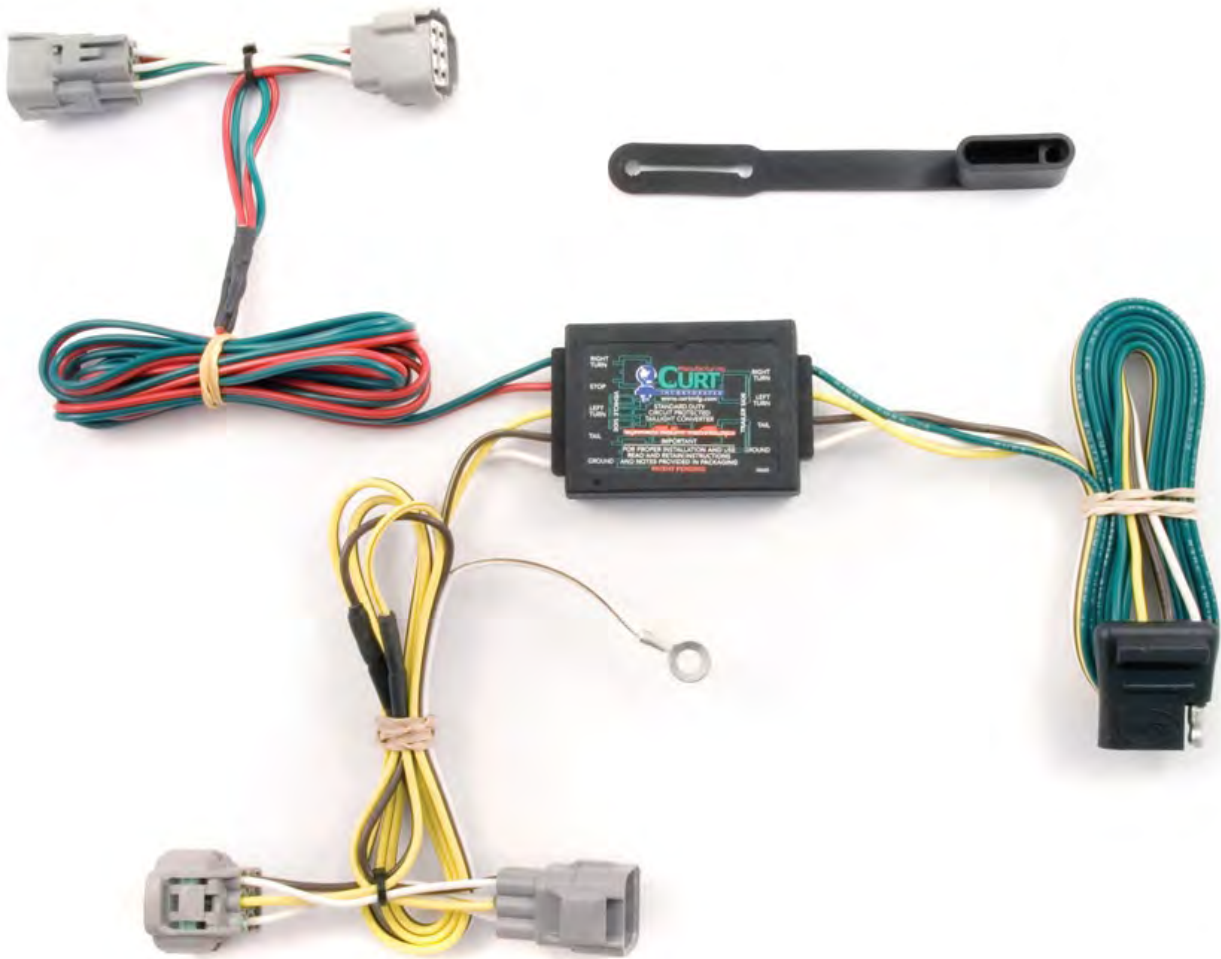

55364