

# 55368

DODGE RAM VAN

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

10/14/08

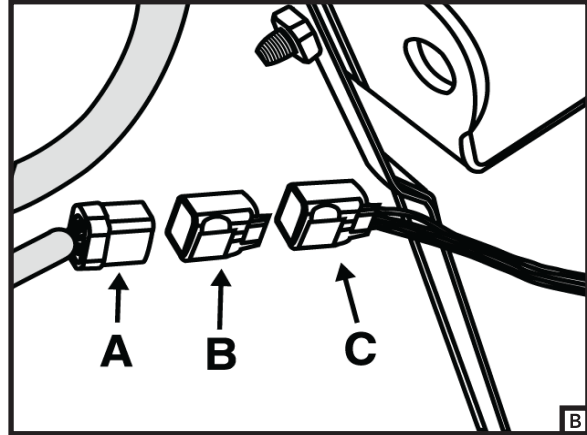

## English

1. Locate the tow vehicle's trailer harness connector. This harness is located under the vehicle, behind the bumper, on the driver's side of the vehicle.

2. Remove protective cap [B] (and save) from connector [A]; check to see that the mating surfaces of the connectors are free of dirt. Clean if necessary.


3. Connect the T-connector adapter end [C] to the vehicle's connector [A]. Be sure that the T-connector is fully inserted with locking tabs in place.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

## Español

## Français

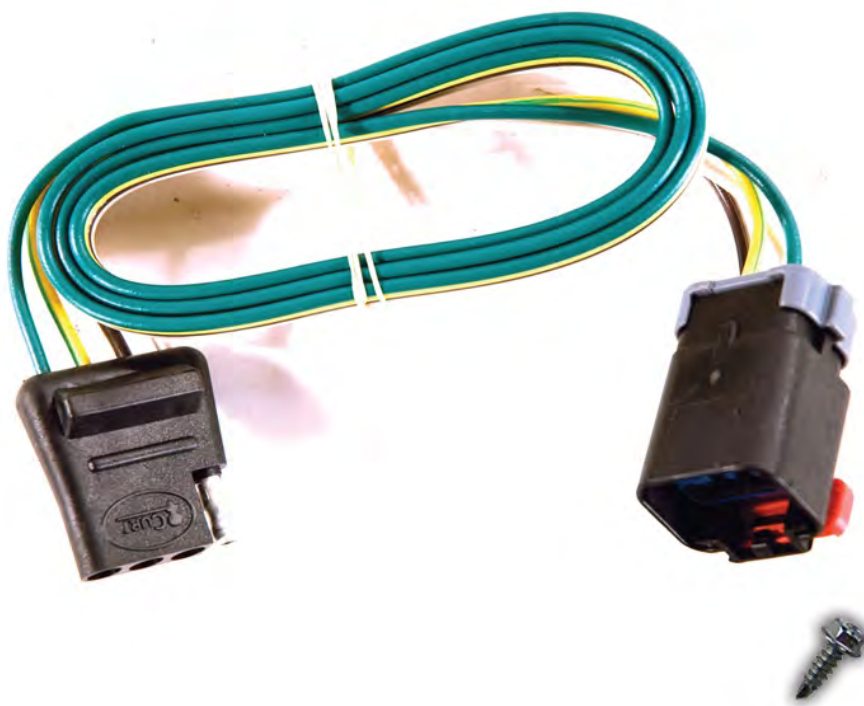

55368