


# 55434

CHEVROLET COBALT (4DR)  
CHEVROLET COBALT SS (4DR)  
PONTIAC G5 PURSUIT (4DR)  
PONTIAC G5 PURSUIT GT (4DR)

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS

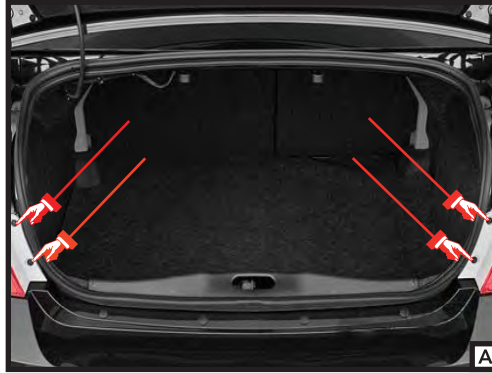

### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

### ¡DEBE LEERSE PRIMERO!


Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.


4/21/09

## English

1. Open the trunk and remove one plastic wing nut on each side of the trunk located behind the taillights. Carefully pull back the carpet on both sides to expose the second set of plastic wing nuts. Remove these wing nuts and set aside. Locate the taillight screws on both sides located outside of the vehicle next to the trunk weather seal.  Using a 9/32" socket carefully remove the screws holding the taillight assemblies. Remove the taillight assemblies being careful not to damage the alignment pins, unplug the taillight connectors and set aside.
2. Beginning on the drivers side plug the T-connector end with the yellow wire in-between the separated connectors. Make sure the connectors are fully inserted with the locking tabs in place.
3. Route the T-connector end with the green wire down through the opening below the taillight, across the bumper and up through the opening on the passengers side. Repeat step 2 on the passenger side using the green wire.
4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.
5. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

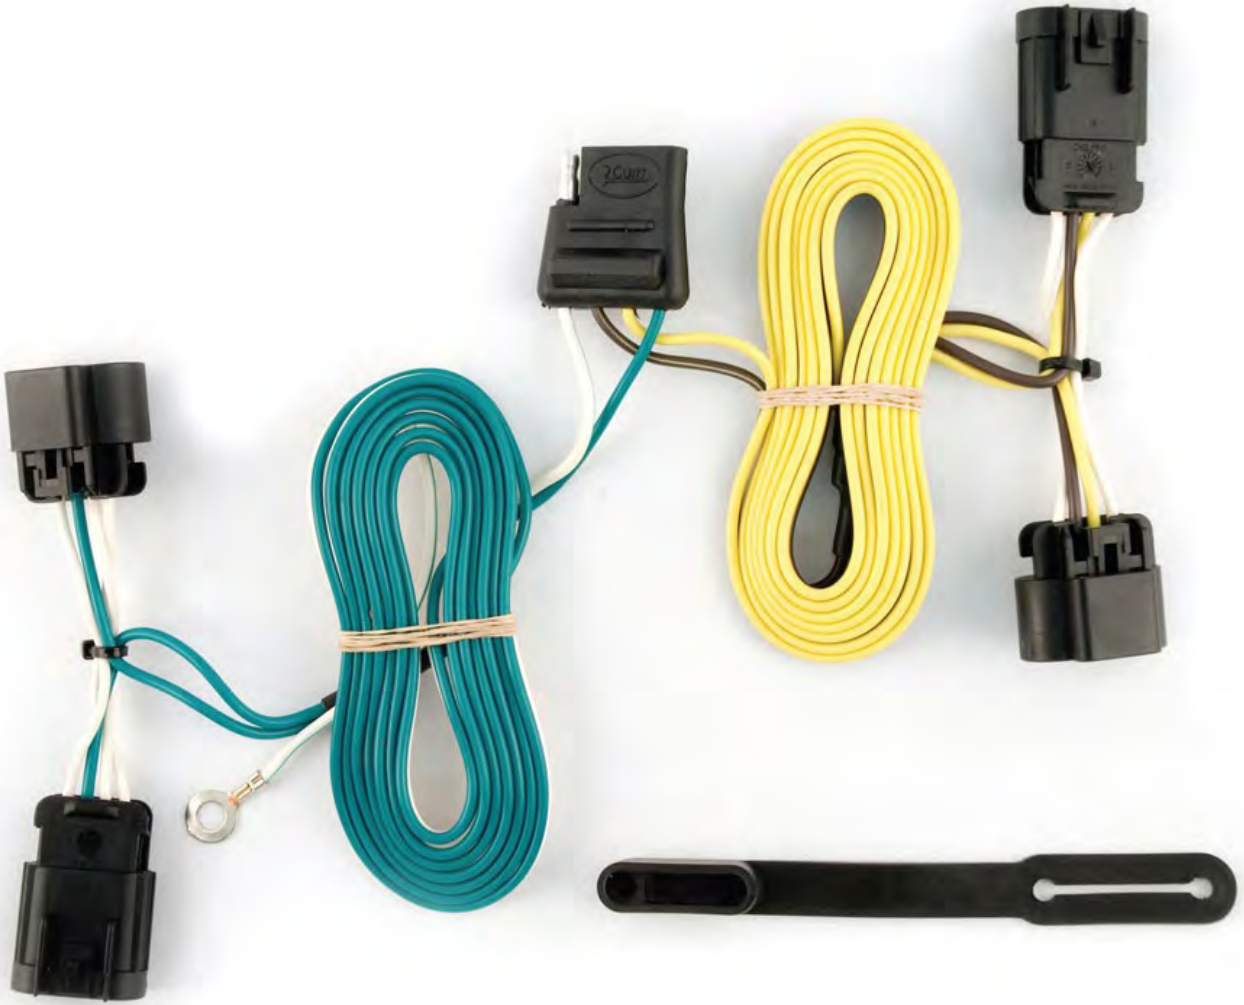

55434