

# 55502

ACURA TSX  
HONDA ACCORD

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

3/10/09

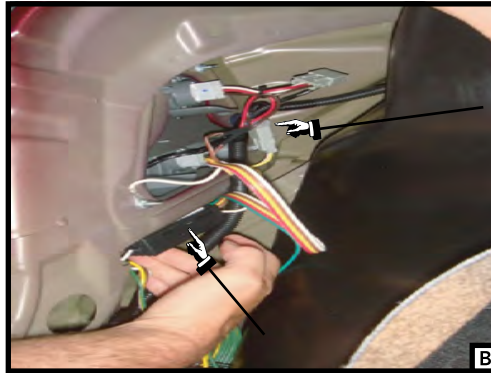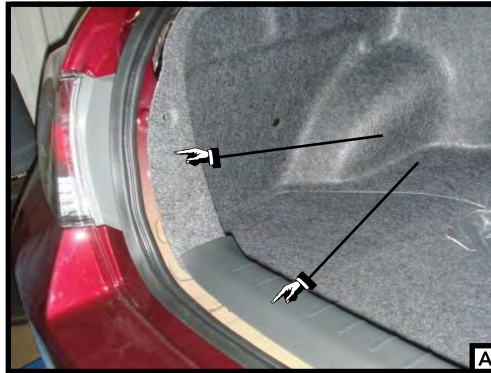

## English

1. Open trunk and remove threshold panel. Partially remove the felt trunk liner on driver's side (P3), exposing the taillight wiring. **[A]**

2. The harness will have a connection point with connectors matching the ends of the T-connector adapter. Separate the harness connectors, being careful not to break the locking tabs.

3. Insert the T-connector between the harness connectors and lock into place. **[B]** Route the single connector with the green wire to the 2-way connector just below the threshold on driver's side of the car. **[C]**  
Note: Be sure that the connectors are fully inserted with locking tabs in place.

4. Secure the black converter box using the double-sided tape to a suitable location as shown. **[B]** Locate a suitable grounding point near the connectors. Drill a 3/32" pilot hole and secure white wire with ring terminal using screw provided.

6. Reposition the trunk liner and reattach the threshold panel.

### WARNING!

Verify miscellaneous items may be hidden behind or under and surfaces before drilling to avoid damage to vehicle and/or personal injury.



55502