

# INSTALLATION INSTRUCTIONS

**⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER**

## APPLICATIONS

Make	Model
Chevrolet	Express 1500
Chevrolet	Express 2500 / 3500
GMC	Savana 1500
GMC	Savana 2500 / 3500

## WIRING LOCATION GUIDE

### SUVS, MINI & FULL-SIZED VANS (S)


Representative vehicle shown below

**S3** - Behind driver side rear access panel

**S4** - Behind passenger side rear access panel



## CUSTOM WIRING HARNESS

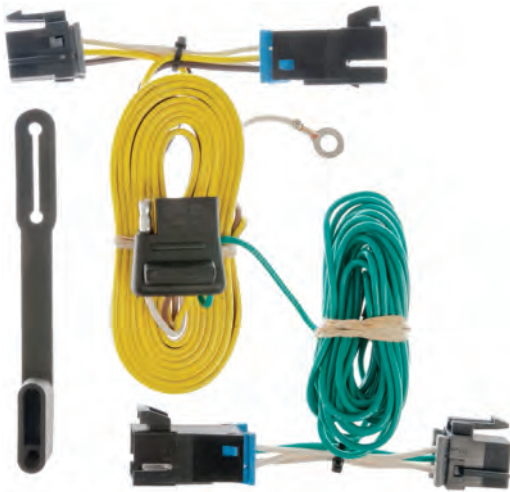

## NOTICE

All steps must be followed to ensure the wiring harness will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

## TOOLS NEEDED

Ratchet  
10mm socket

## ⚠ WARNING

Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

# INSTALLATION / SAFETY INSTRUCTIONS

## Step 1

Locate vehicle battery on the driver side under the hood and disconnect the negative battery terminal.

## Step 2

Remove the rear trim fascia and interior trim panels, if equipped, near the rear entry doors (A,B).

## Step 3


Locate the vehicle taillight wiring harness connectors. The connectors will be similar to those on the custom wiring harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs (C).

## Step 4

Insert the custom wiring harness end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place (D).

## Step 5

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

 **WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

## Step 6

Route the custom wiring harness end with the green wire to the passenger side behind the removed trim panels. Enough wire has been provided to route the wire under the threshold plate or above the rear cargo doors. Repeat steps 2 and 3 on the passenger side using the harness end with the green wire.

## Step 7

Tuck the green wire under the floor trim panel. Replace the vehicle rear trim panels.

## Step 8

Reinstall all items removed during install and reconnect negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.

