


INSTALLATION INSTRUCTIONS

⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

APPLICATIONS

Make	Model
Honda	Ridgeline

CUSTOM WIRING HARNESS

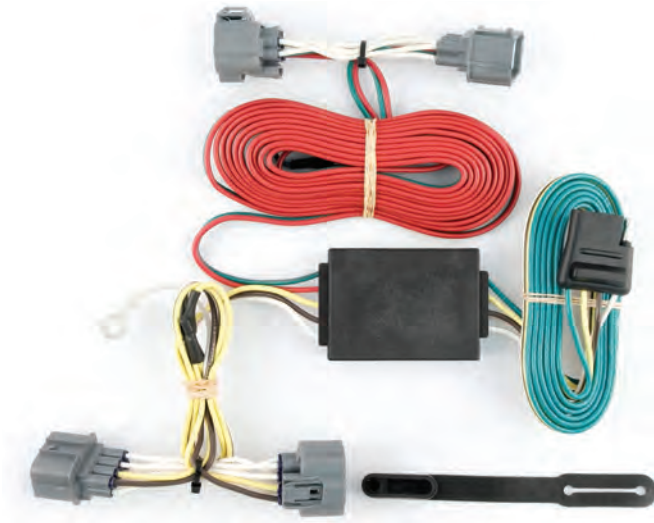

WIRING LOCATION GUIDE

PICKUP TRUCKS (T)

Representative vehicle shown below

T1 - Behind driver side taillight housing

T2 - Behind passenger side taillight housing



NOTICE

All steps must be followed to ensure the wiring harness will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

- Ratchet
- 10mm socket
- Panel trim removal tool

⚠ WARNING

Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

- Signal Circuits - 3.0 amps per side
- Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Open the vehicle tailgate. Remove the 10mm bolts securing the taillights (A). Carefully pull rearward on the taillight assembly taking care not to damage the alignment tabs on the back (B).

Step 2


Behind the removed taillights locate the vehicle taillight wiring harness connectors (C). The connectors will be similar to those on the custom wiring harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs.

Step 3

Starting on the driver side, insert the custom wiring harness end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place (D).

Step 4

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

 **WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

Step 5

Route the custom wiring harness end with the green wire to the passenger side behind the removed scuff panels. Repeat steps 2-3 on the passenger side using the harness end with the green wire.

Step 6

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape.

Step 7

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

Step 8

Reinstall all items removed during install. Install the provided 4-flat dust cover to help prevent corrosion.

