

# 56032

FORD F-250 & F-350 SUPERDUTY

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement fileté.

4/13/09




## English

1. Locate the vehicles taillight wiring harness it is located under the vehicle just behind the rear bumper in the center of the vehicle. **A** The harness connectors will be similar to those on the T-connector harness. **B**
2. Separate the connectors being sure not to damage the locking tabs. **C** Insert the T-connector end in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place. **D**
3. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

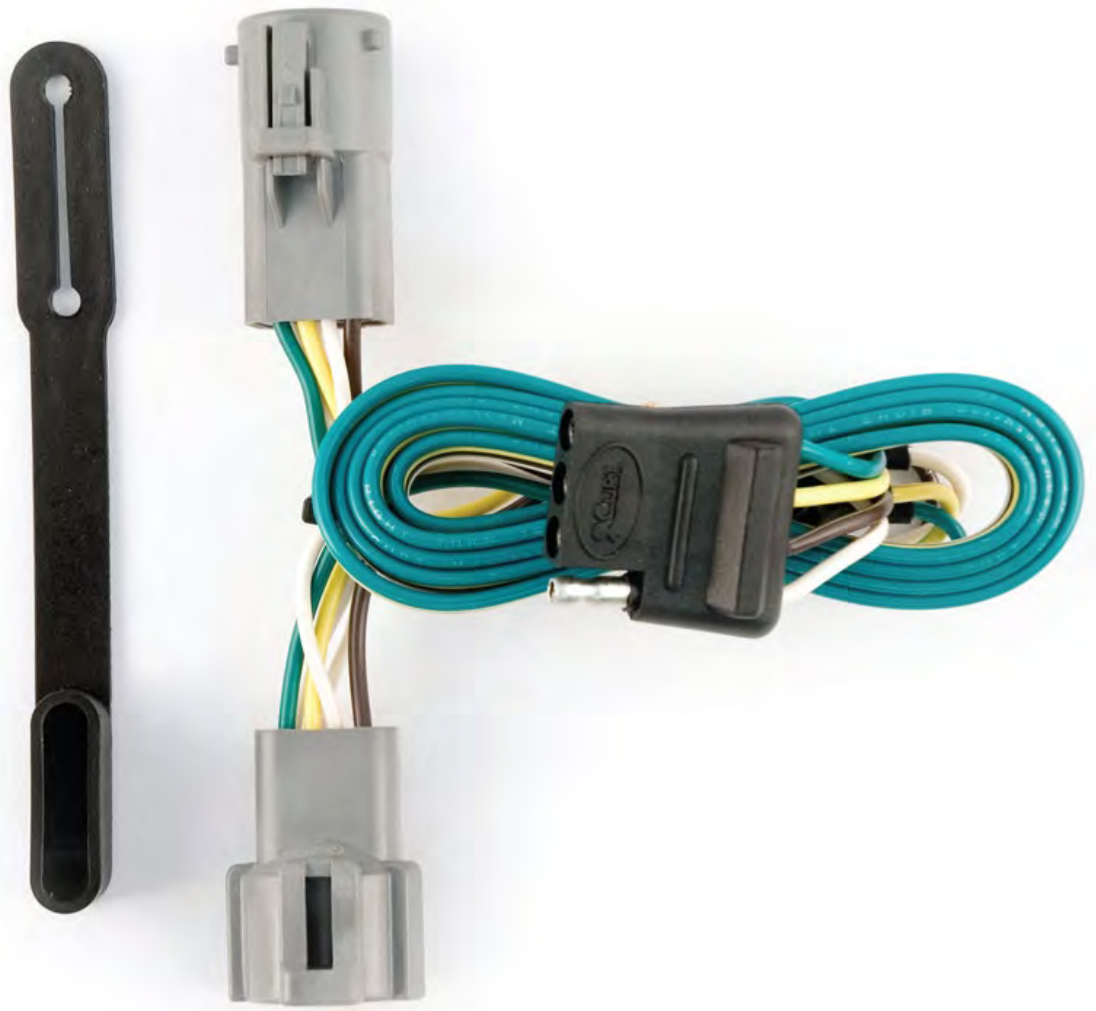

56032