

# 56058

KIA AMANTI

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

10/16/08




## English

1. Open trunk and remove threshold panel. Partially remove the felt trunk liner on driver's side, exposing the taillight wiring. **A** **B**
2. Separate the harness connectors, being careful not to break the locking tabs.
3. Insert the T-connector between the harness connectors and lock into place. (Note: the single plug-in for the right turn function is on the driver's side). Be sure that the connectors are fully inserted with locking tabs in place.
4. On the driver's side, locate existing ground stud. Loosen bolt, place screw eyelet on stud and re-tighten bolt. Make sure all other ground connections are secure when removing and reattaching the ground stud.
5. Secure the black converter box and trailer wiring with double sided tape, cable ties and/or locate a suitable mounting position and drill a 3/32" hole and secure with screw provided using mounting tab on converter to prevent damage or rattling.
6. Reposition the trunk liner and reattach the threshold panel.

**WARNING!**  
Verify miscellaneous items that may be hidden behind or under any surfaces before drilling to avoid damage to vehicle and/or personal injury<sup>1</sup>

## Español

## Français

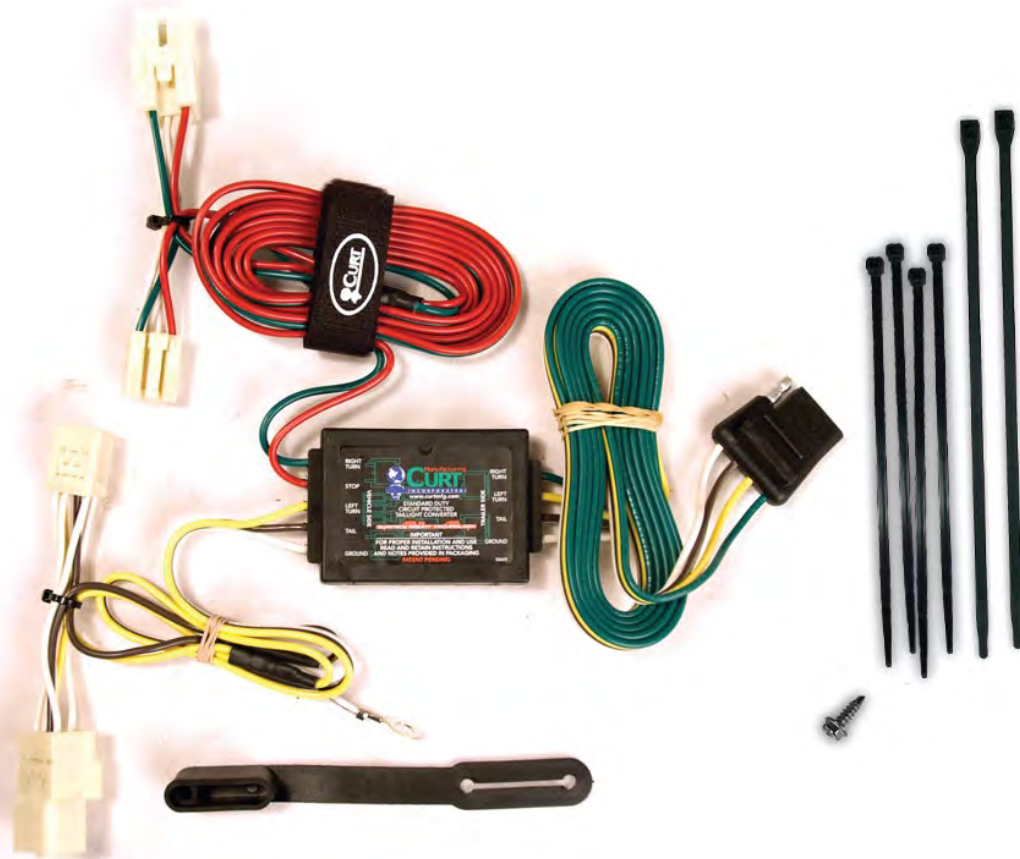

56058