

56073

FORD FREESTAR
MERCURY MONTEREY

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

10/30/08

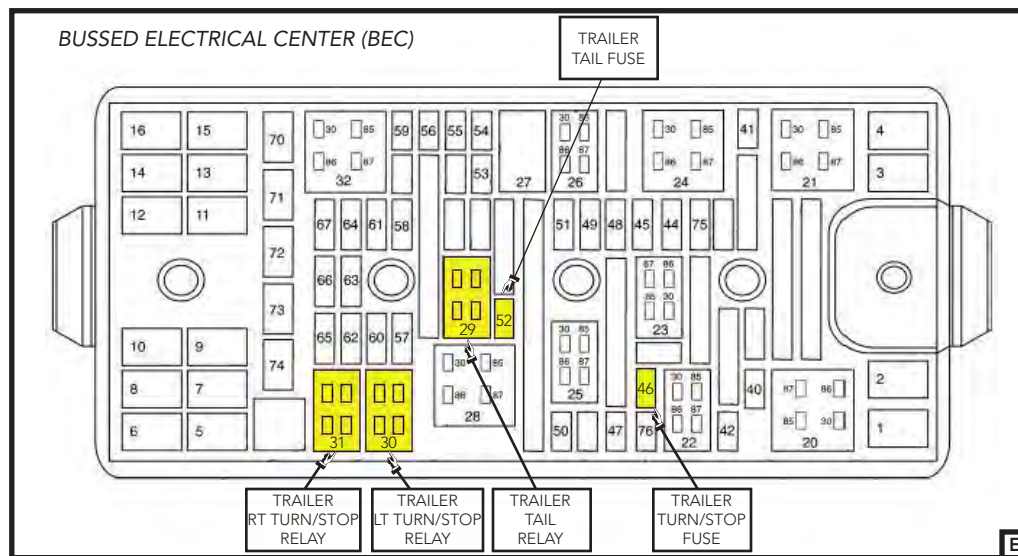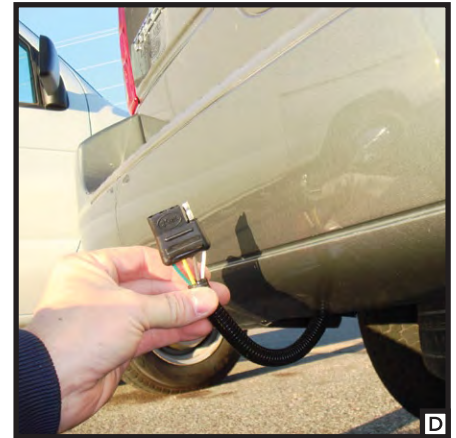

English

1. Locate the vehicles taillight wiring harness behind the rear bumper(S6). **[A]**

2. Remove the protective dust cover from the factory harness connector. The connector will be similar in appearance to that on the T-connector harness. Clean away any dirt, dust or debris from the connector. **[B]**

3. Insert the T-connector harness end into the factory harness connector. Firmly press the ends together until the locking tabs engage. **[C]**

Español

Français

English

4. Secure the T-connector wires to the vehicle using cable ties.^[D]
5. At the front of the vehicle, locate the main fuse center on the drivers side of the engine compartment.^[E]
6. Carefully remove the fuse panel cover and insert (3) relays into 29,30, and 31. Insert (2) 20 amp mini fuses into positions 46 & 52. Refer to the label on the inside of the fuse panel cover for position locations.^[E]
(RELAYS AND FUSES NOT INCLUDED)
7. Replace and secure the fuse panel cover into its original position.

WARNING!
Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

Español

Français

