

# 56145 CHRYSLER 300C

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

6/15/2011

## English

1. Open the trunk. Remove all trunk floor covers (A). Remove the rear scuff panel by pulling out on the bottom and up on the top (B). On both sides of the trunk remove the plastic fastener and cargo loop holding the felt trunk liner in place (C).

2. On the driver's side pull back on the felt trunk liner to locate the vehicle's taillight wiring harness connectors (D). The connectors will be similar to those on the T-Connector harness. Separate the connectors taking care not to damage the locking tabs. Insert the T-Connector end with the yellow wire between the separated connectors (E). Make sure the connectors are fully inserted with locking tabs in place.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure the eyelet of the white ground wire using the screw provided.

4. Locate a flat spot and adhere the black converter box to the frame of the vehicle using the double-sided tape provided.

5. Route the the T-Connector end with the green wire to the passenger side behind the removed scuff panel. Repeat Step 2 on the passenger side using the T-Connector end with the green wire. Use the provided cable ties to secure any loose wires.


6. Route the black power wire to the fuse panel near the battery. Remove the fuse panel's cover and remove the nut securing the red battery cable(F).

Place the fuse holder's ring terminal over the stud and replace the nut. Install the 10 amp fuse provided in the fuse holder and close the fuse holder's cap.

7. Reinstall all items removed during install.

8. Route the 4-flat out from under the felt trunk liner to the center of the vehicle when in use. Roll up and store in an out of the way location when not in use.

**INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813**

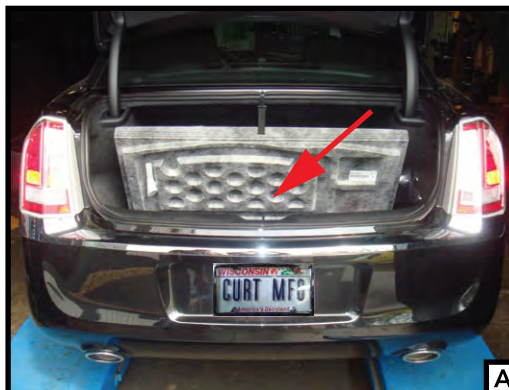

A



B



C



D



E



F

