


# INSTALLATION INSTRUCTIONS

DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE'S LAMP LOAD RATING, WHICHEVER IS LOWER

## 56229 USCAR REPLACEMENT VEHICLE END WITH 24" WIRES

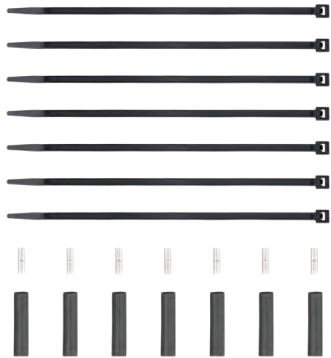

### TOOLS NEEDED

- Wire stripper
- Crimping tool
- Heat gun


### WARNING

Avoid heating the gas tank, fuel lines, brake lines or other flammable materials when heating the heat shrink.

## INSTALLATION


### Step 1

Strip the insulation to reveal 0.25" of bare wire (A).

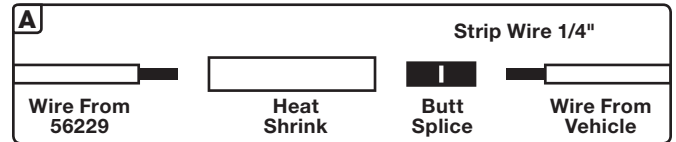


### Step 2

Place the heat shrink on the wire as shown below (B). Crimp the butt splice.

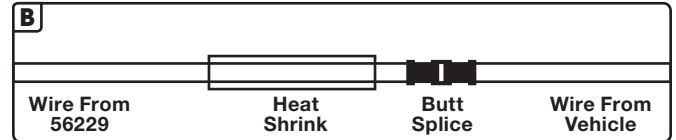

### Step 3

Position the heat shrink over the splice (C) and heat using a heat gun or similar device.

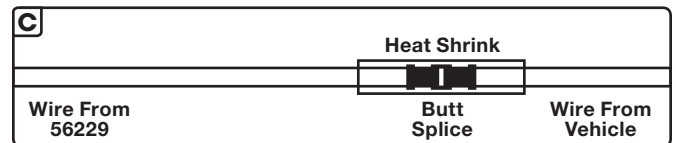

## WIRING GUIDE

