## 11119 / 247119


## PONTIAC SOLSTICE AND SATURN SKY


3/25/2008


WILL NOT FIT GXP OR REDLINE


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.

\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*



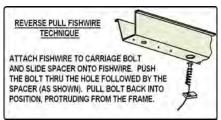

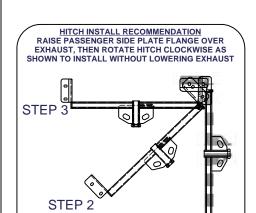

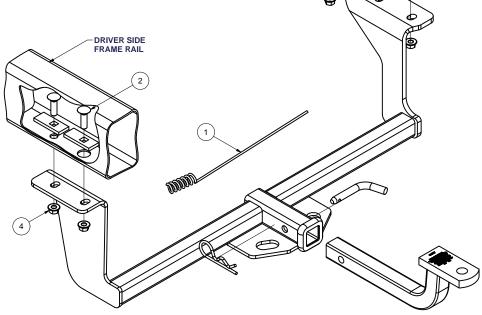

PASSENGER SIDE FRAME RAIL

HITCH WEIGHT: 38 LBS.

INSTALL TIME: 30 MINUTES

INSTALL NOTES:

- NO DRILLING REQUIRED - FISHWIRING REQUIRED

## **INSTALLATION STEPS**

- Fishwire carriage bolts and spacers into position. (NOTE: fishwire forwardmost holes using rearward holes, then fishwire remaining fasteners as described above.)
- 2) To install hitch without lower exhaust, the passenger side must be raised first with the flange placed over the exhaust. While raising the hitch, rotate main body clockwise into position. Passenger side plate must be located between the carbon canister and exhaust hanger. Install supplied hex flange nuts.
- 3) Torque all 7/16" fasteners to 50 lb-ft.

STEP 1

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.