

**11243****92-98 MAZDA 929 SEDAN**

12/10/2012

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT &amp; 200 LBS. TONGUE WEIGHT.


**\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\***

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

**\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\***

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	3	3/8 - 16 x 1 1/4	HEX BOLT
2	3	3/8"	FENDER WASHER
3	7	3/8"	LOCK WASHER
4	7	3/8 - 16	HEX NUT
5	4	3/8-16 X 1 1/2	HEX BOLT
6	2	CM-11243-SP	.188 x 1.00 SPACER

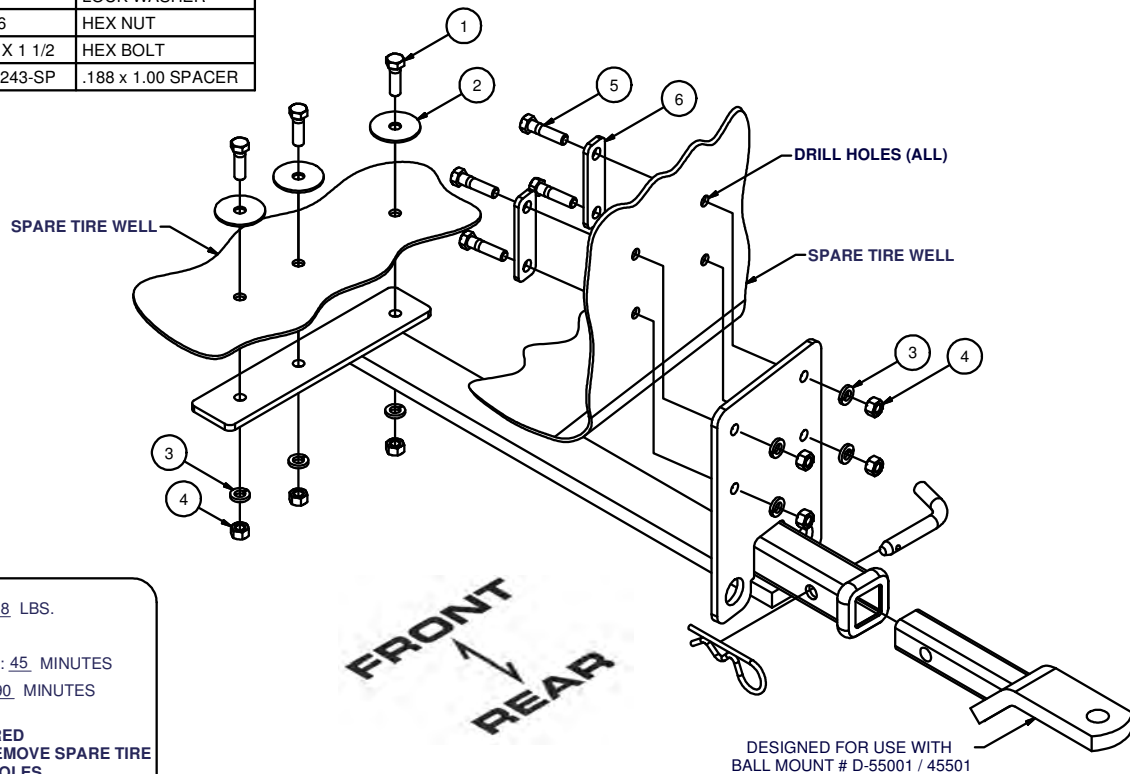

HITCH WEIGHT: 18 LBS.

**INSTALL TIME**

PROFESSIONAL: 45 MINUTES

NOVICE (DIY): 90 MINUTES

**INSTALL NOTES:**

- DRILLING REQUIRED
- TEMPORARILY REMOVE SPARE TIRE
- SILICONE SEAL HOLES

**INSTALLATION STEPS**

1. This hitch will bolt to the vertical body panel at the rear bumper, and to the bottom of the spare tire well. Note the two raised ribs near the center panel.
2. Holes for the hitch will be drilled in the vertical body panel from the inside of the car. Remove the spare tire temporarily and make clearance to the inside metal surface of the raised ribs. Mark and drill four 1/8" diameter holes in the ribs as shown. Make certain the hole pattern is centered across the car. Position the hitch on the car and confirm the rear bracket holes and match 1/8" pilot holes. If the hole pattern is correct, open these four holes in ribs to 13/32" diameter.
3. Bolt the hitch in place outside the ribs using fasteners as shown. The CM-11243-SP plates must be used inside the trunk opposite the hitch.
4. Complete the installation by drilling three 13/32" diameter holes in three places for hitch floor bracket at the bottom of the spare tire well. Use fasteners with fender washers inside the trunk opposite the hitch bracket.
5. Use silicone sealant to seal hardware installed through spare tire well.
5. Torque all 3/8" fasteners to 45 lb-ft.

**PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.