11491

SCION xD 1.8L SINGLE EXHAUST


7/20/2011

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2.000 LBS, TRAILER WEIGHT & 200 LBS, TONGUE WEIGHT. ***DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.***

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY AUXILIARY STABILIZING STRAPS.

** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY**

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

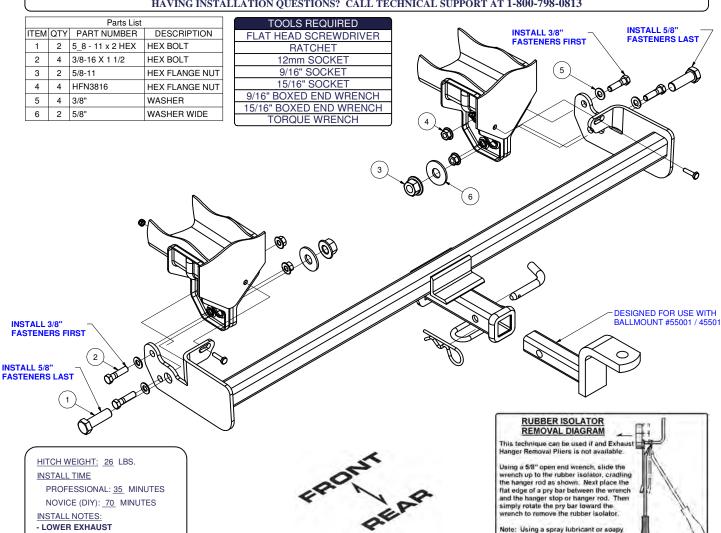

INSTALLATION STEPS

- UNFASTEN LOWER FASCIA

- NO DRILLING REQUIRED

1. Remove underbody panel by removing (7) push-button fasteners (if present) and return to owner.

water on the hanger rod and the rubb isolator helps removal.

- 2. Remove (2) 8mm existing fasteners from frame as shown.
- 3. Lower exhaust by removing (3) rubber isolators.

(**NOTE:** Spraying a lubricant or soapy water on the metal hanger rod and rubber isolator helps removal.)

- 4. Raise hitch into position over exhaust and install supplied and existing fasteners as shown.
- 5. Torque all 8mm fasteners to 17 lb-ft, all 3/8" fasteners to 30 lb-ft, and all 5/8" fasteners to 150 lb-ft.
- 6. Re-install rubber isolators and exhaust removed in step 2.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing LLC is liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.