## 11507

## 85-87 AUDI S QUATTRO

## 12/10/2012


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 1,500 LBS. TRAILER WEIGHT & 150 LBS. TONGUE WEIGHT.

\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\*

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

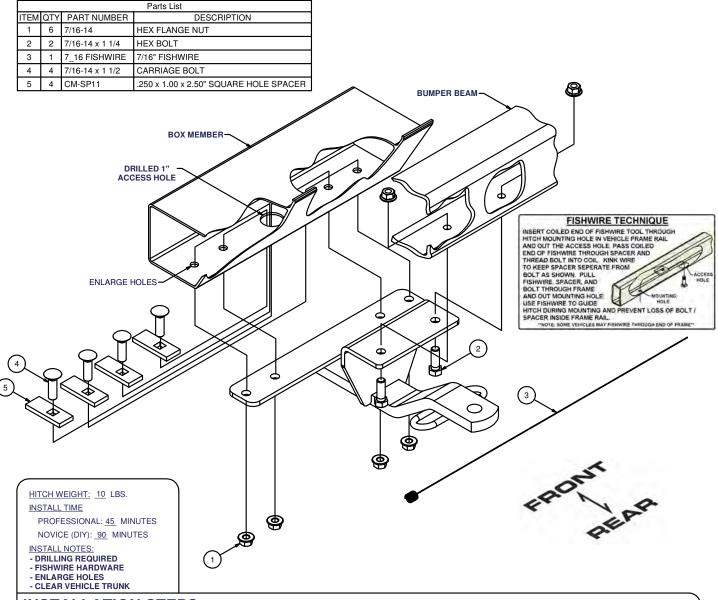

## **INSTALLATION STEPS**

- 1. Remove contents from trunk of vehicle. On the outside, locate and mark the center of the vehicle.
- Enlarge holes in vehicle to 7/16" diameter. Drill a 1.125" diameter or larger access hole in vehicle box member. Fishwire carriage bolts and CM-SP11 spacers through box member and out enlarged holes as shown. (See FISHWIRE TECHNIQUE diagram)
- 3. Raise the hitch into position as shown. To ease installation, the flexible bumper fascia my be temporarily moved out of position. Install 7/16" hex bolts and hex flange nuts as shown.
- 4. Torque all 7/16" fasteners to 70 lb-ft.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.