



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com



Dee Zee Running Board Installation Instructions

Congratulations on your purchase of a quality Dee Zee product. Dee Zee is recognized as having the highest quality running boards and accessories on the market today. We have earned this reputation by offering our customers a product they can be proud to place on their vehicles. Dee Zee meets all the criteria of manufacturing a custom-fit product which guarantees it to be the easiest product to install.

Note: Please take time to read all of the instructions before beginning this installation.

Warning! It is the sole responsibility of the vehicle owner to check for tire clearance.

Warning! It is unlawful and dangerous to ride on running boards or side box boards while vehicle is in motion.

Cleaning instructions: To maintain the finish of your Dee Zee running boards, clean with a mild detergent and use a high grade automotive type wax. DO NOT USE ABRASIVE CLEANERS ON THIS PRODUCT!













If you should happen to have any questions with this product or you have an installation question, please feel free to call us at:

1-800-779-8222

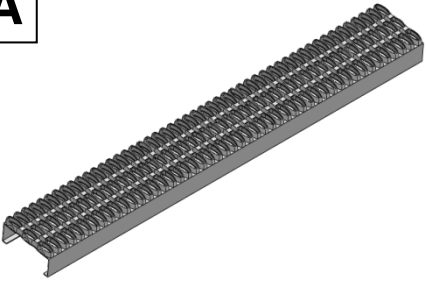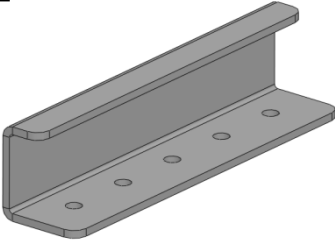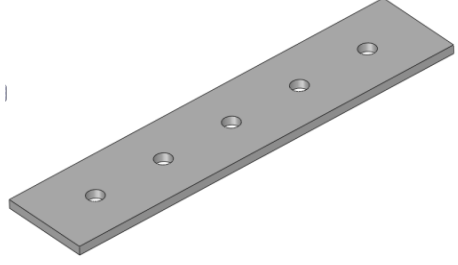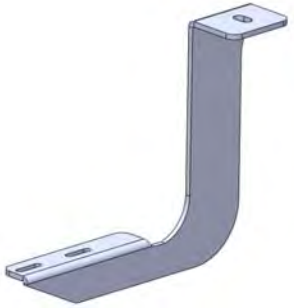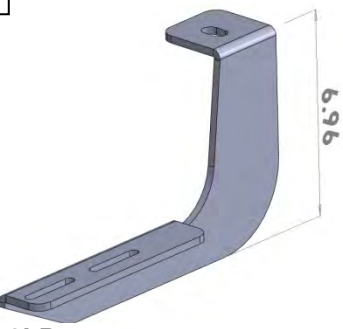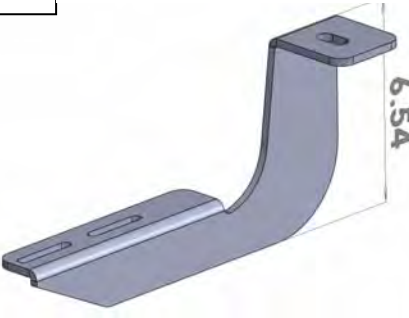If you would like to find out more information on Dee Zee's products, please feel free to visit our website at:


WWW.DEEZEE.COM

DZ 1552 / DZ 1553 (1999 – Current) Chevy Silverado Extended / Crew Cab


<p>A Running Boards</p>  <p>K2013P / K2014P X2/X2</p>	<p>B End Caps</p>  <p>EC RSP X4</p>	<p>C Strap Bracket</p>  <p>B 1791P X10</p>	
<p>D Rear Driver's side mounting bracket</p>  <p>B 1579LP EXT CAB B 1576LP CREW CAB X1</p>	<p>E Front Driver's side mounting bracket</p>  <p style="text-align: right;">6.96</p> <p>B 1572LP X1</p>	<p>F Middle Driver's side mounting bracket</p>  <p style="text-align: right;">6.54</p> <p>B 1580LP X1</p>	
<p>G Front Passenger's side mounting bracket</p>  <p>B 1572RP X1</p>	<p>H Rear Passenger's side mounting bracket</p>  <p>B 1580RP X1</p>	<p>I Rear Passenger's side mounting bracket</p>  <p>B 1579RP EXT CAB B 1579RP CREW CAB X1</p>	<p>J 1/4 flat washer</p>  <p>PN 72B X40</p>
<p>K 1/4 hex head bolt</p>  <p>PN 96B X20</p>	<p>L 1/4 hex nut</p>  <p>PN 71B X20</p>		

Tools Required


Ratchet / Wrench
7/16"
21m

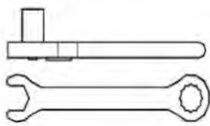


1

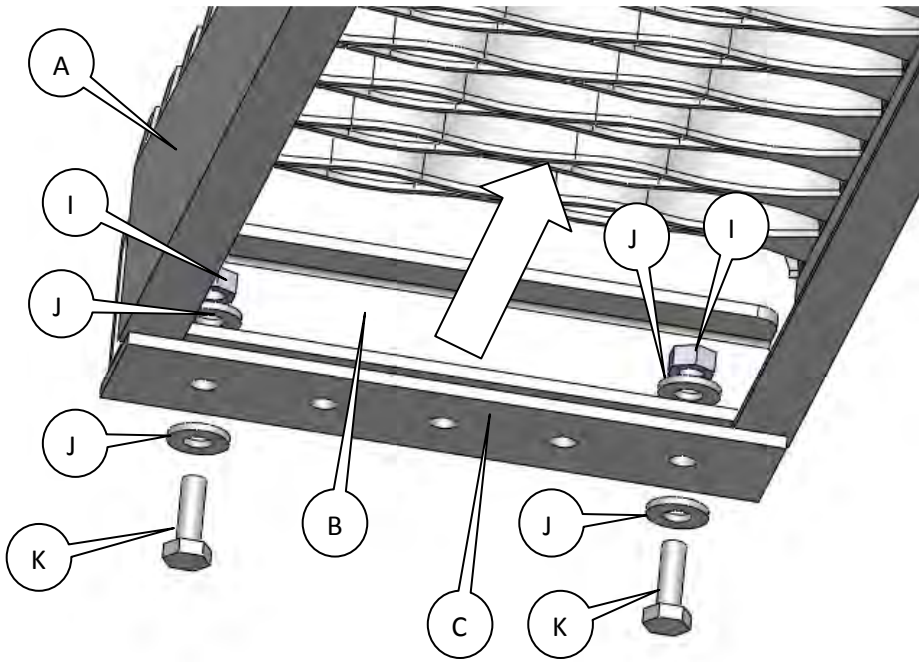

X4

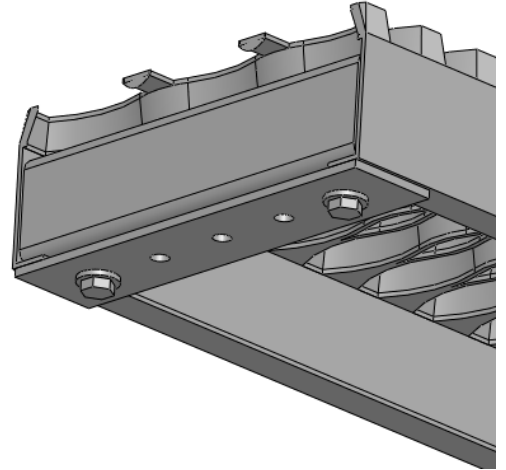

2

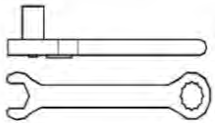


21m

Front Body Mount



3


Middle Body Mount

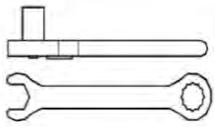

21m

4

Rear Body Mount

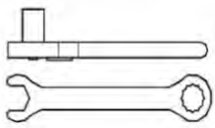

21m

5

Front Body Mount

(Driver Side shown)



6

Middle Body Mount



7

Rear Body Mount



8

