



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com



Dee Zee Running Board Installation Instructions

Congratulations on your purchase of a quality Dee Zee product. Dee Zee is recognized as having the highest quality running boards and accessories on the market today. We have earned this reputation by offering our customers a product they can be proud to place on their vehicles. Dee Zee meets all the criteria of manufacturing a custom-fit product which guarantees it to be the easiest product to install.

Note: Please take time to read all of the instructions before beginning this installation.

Also note: Your vehicle may have features that will interfere with the installation of this product. If this situation happens, please call our help line (1-800-779-2102) and we will assist you.

Cleaning instructions: To maintain the bright finish of your Dee Zee running board clean with a mild detergent and use a high grade automotive type wax. **DO NOT USE ABRASIVE CLEANERS ON THIS PRODUCT!**



If you should happen to have any questions with this product or you have an installation question, please feel free to call us at:


1-800-779-8222

If you would like to find out more information on Dee Zee's products, please feel free to visit our website at:

WWW.DEEZEE.COM

NXt RUNNING BOARD (2009-Current) Dodge Ram All cab styles excluding Regular Cab

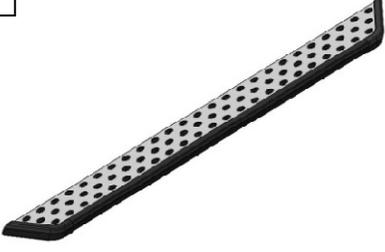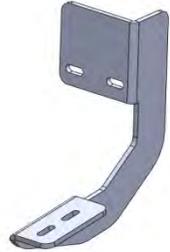
<p>A NXt BOARD</p>  <p>Various X2</p>	<p>B BRACKET</p>  <p>B 1828LP X3</p>	<p>C BRACKET</p>  <p>B 1828RP X3</p>
---	--	--
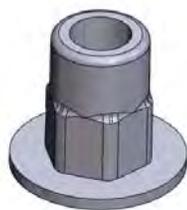
<p>D Install tool</p>  <p>PN 685 X2</p>	<p>E M8 nut insert</p>  <p>PN 686 X12</p>	<p>F 8mm X 25mm Flange Head Bolt</p>  <p>PN 525 X12</p>
---	---	---

<p>G 8mm X 25mm Flange Head Bolt</p>  <p>PN 526 X12</p>	<p>H</p>  <p>FGT 01 0.2EA</p>	
---	--	--

Tools Required





Ratchet / Wrench
15mm / 13mm

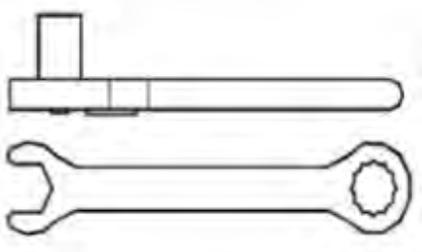




1

NOTE: FOR STANDARD CAB APPLICATIONS, MIDDLE BRACKET LOCATION IS NOT AVAILABLE. PROCEED AS DIRECTED USING FRONT AND REAR MOUNTING LOCATIONS. EXTRA BRACKETS AND HARDWARE MAY BE DISCARDED.

Front - Passenger

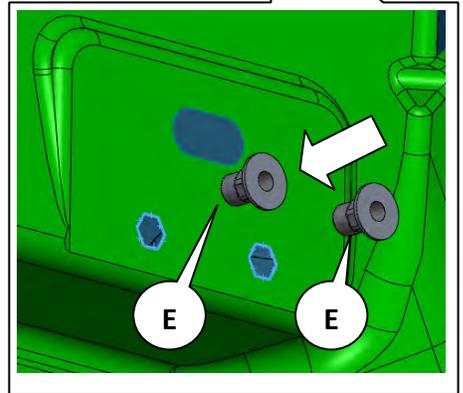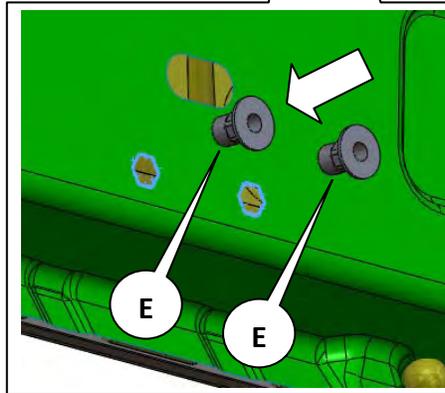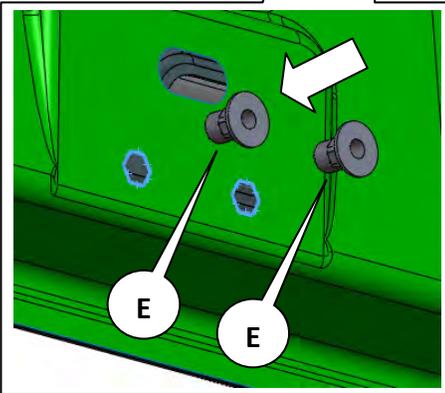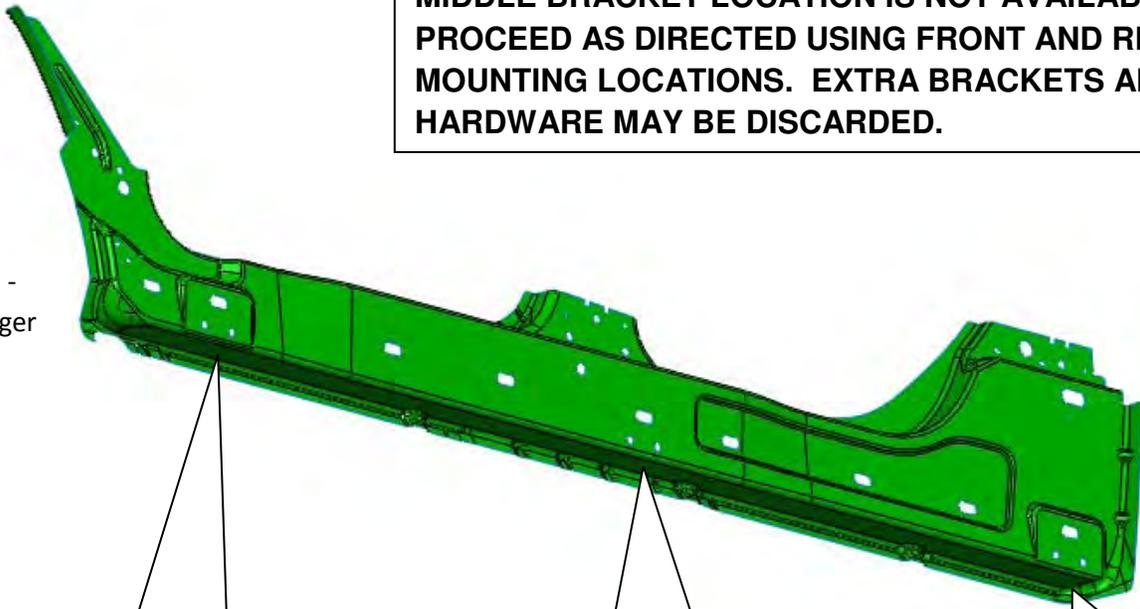


2

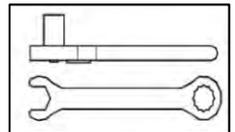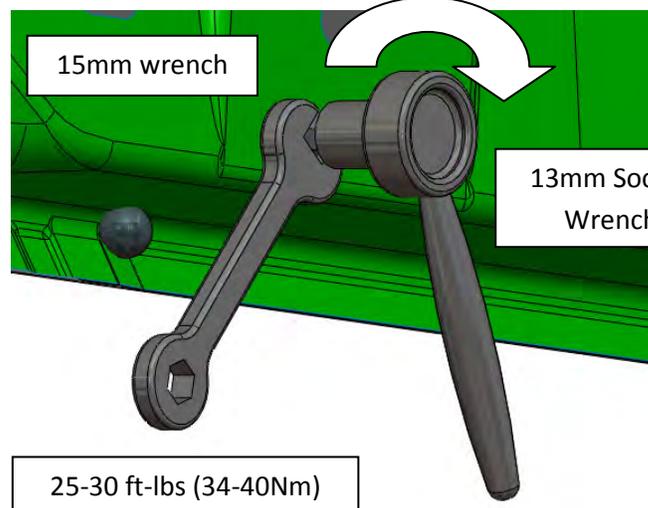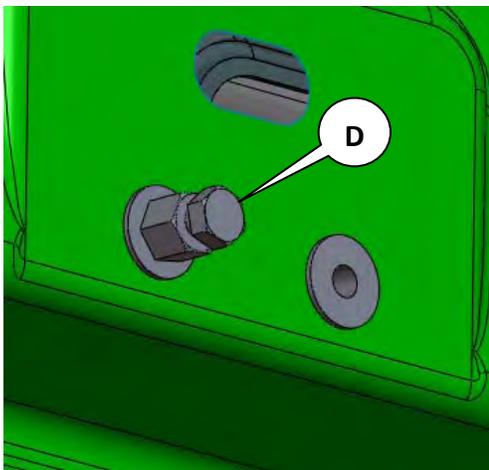





X6

3

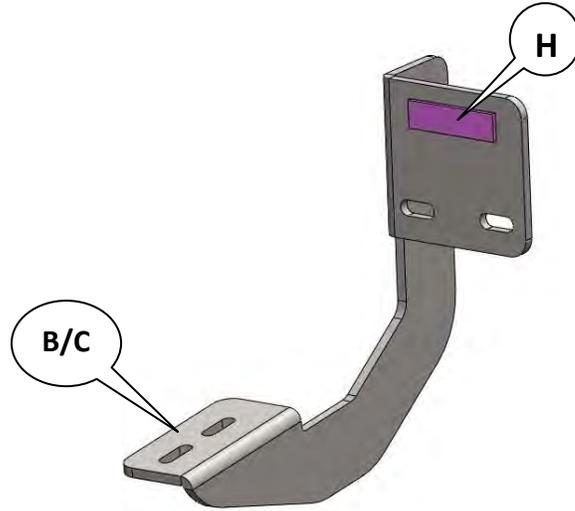


X6

4

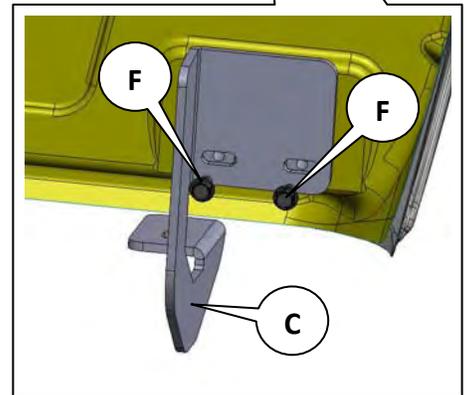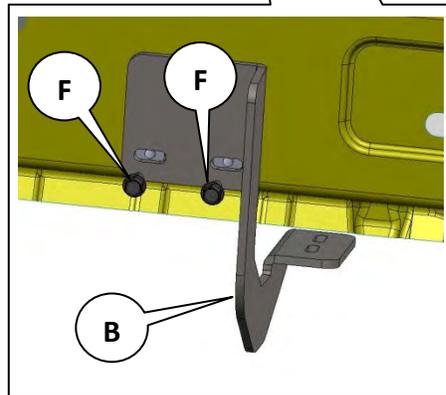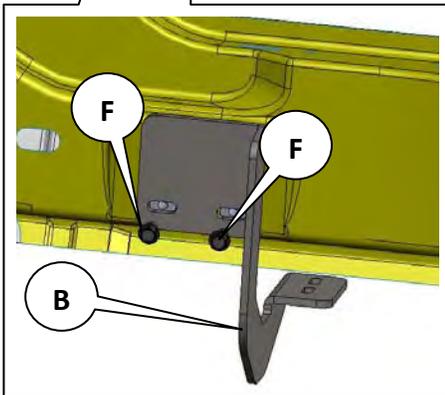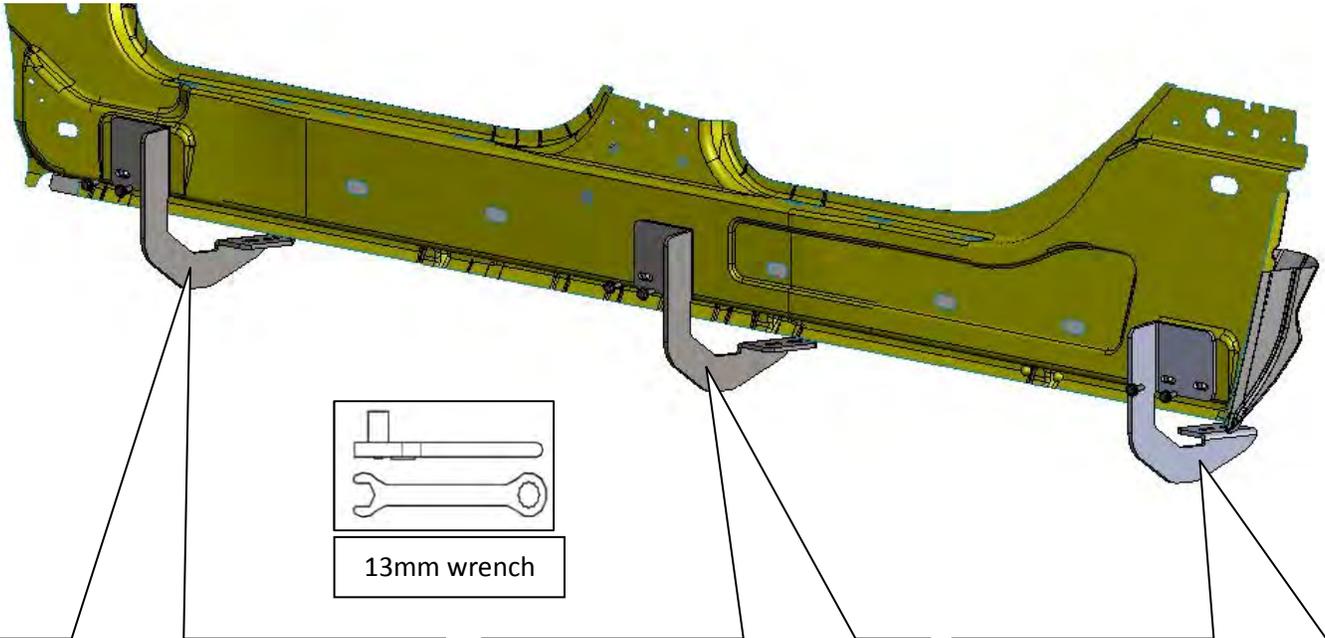

5

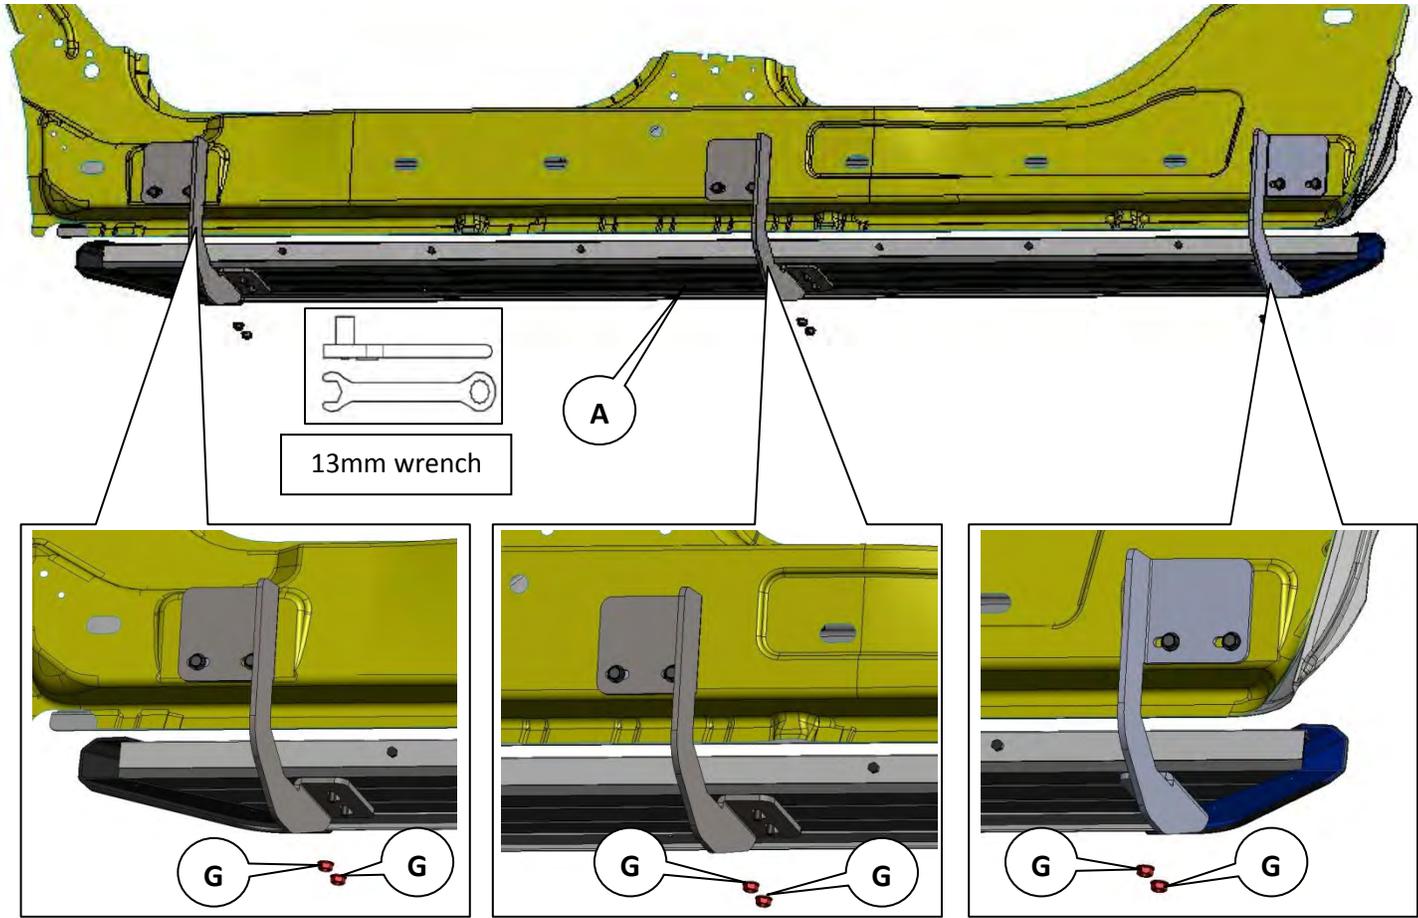

6

REPEAT STEPS 1-5 FOR DRIVER SIDE.