



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com



Dee Zee Nerfstep Installation Instructions

Congratulations on your purchase of a quality Dee Zee product. Dee Zee is recognized as having the highest quality running boards and accessories on the market today. We have earned this reputation by offering our customers a product they can be proud to place on their vehicles. Dee Zee meets all the criteria of manufacturing a custom-fit product which guarantees it to be the easiest product to install.

Note: Please take time to read all of the instructions before beginning this installation.

Cleaning instructions: To maintain the bright finish of your Dee Zee nerfsteps, clean with a mild detergent and use a high grade automotive type wax. **DO NOT USE ABRASIVE CLEANERS ON THIS PRODUCT!**


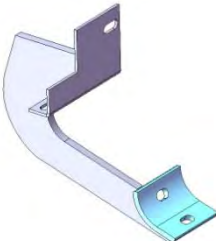
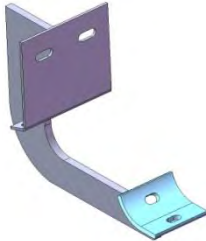



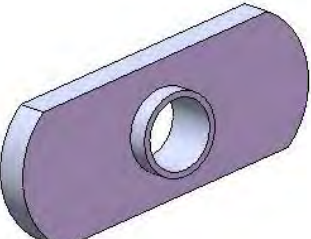
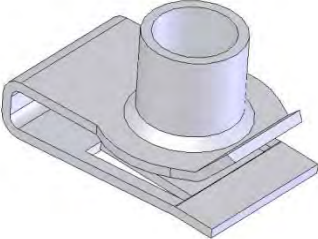



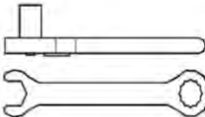
If you should happen to have any questions with this product or you have an installation question, please feel free to call us at:

1-800-779-8222

If you would like to find out more information on Dee Zee's products, please feel free to visit our website at:

WWW.DEEZEE.COM

**DZ 17006 / DZ 17506
(1997 – 2003) Ford F150 Supercrew Pickup**

<p>A Nerfstep</p>  <p align="right">1LH / 1RH</p>	<p>B Front Rocker Panel Mounting Bracket Driver Side</p>  <p align="right">X1</p>	<p>C Middle / Rear Rocker Panel Mounting Bracket Driver Side</p>  <p align="right">X2</p>
<p>D Front Rocker Panel Mounting Bracket Passenger Side</p>  <p align="right">X1</p>	<p>E Middle / Rear Rocker Panel Mounting Bracket Passenger</p>  <p align="right">X2</p>	<p>F 8mm x 25mm Flange Head Bolt</p>  <p align="right">X18</p>
<p>G 8mm Threaded Plate</p>  <p align="right">X12</p>	<p>H 8mm U-nut</p>  <p align="right">X6</p>	<p>I 5/16" Washer</p>  <p align="right">X6</p>
<p>J 6mm Hex Flange Bolt</p>  <p align="right">X12</p>	<p>K 6mm Washer</p>  <p align="right">X12</p>	<p>Tools Required</p>  <p align="center">Ratchet / Wrench 13mm / 10mm</p>

1

Locate the existing hole location shown below. There will be three sets of hole locations (Front / Middle / Rear). Place an 8mm u-clip (G) into the hole location as shown below. You may have to peel the black vinyl tape off of the inside rocker panel to locate the holes.



Front Location



Middle Location



Rear Location

2

Place the front driver side mounting bracket (B) up to the front rocker panel location. Secure the top hole of the mounting bracket to the 8mm clip using an 8mm x 25mm hex flange bolt (F) and 5/16" washer (I). Secure the bottom of the mounting bracket to the rocker panel using an 8mm x 25mm hex flange bolt (F), 5/16" washer (I), and 8mm threaded plate (G).



3

Place the middle / rear driver side mounting bracket (C) up to the middle / rear rocker panel locations. Secure the top hole of the mounting bracket to the 8mm clip using an 8mm x 25mm hex flange bolt (F) and 5/16" washer (I). Secure the bottom of the mounting bracket to the rocker panel using an 8mm x 25mm hex flange bolt (F), 5/16" washer (I), and 8mm threaded plates (G).



4

Place the nerfstep up to the mounting brackets. The bent end of the nerfstep will go to the front of the vehicle. Secure each of the mounting brackets to the nerfstep using 6mm hex flange bolts (H) and 6mm washers (I). Tighten into place using a 10mm wrench / or socket. Now tighten all of the fasteners until snug.