



**Before returning this product  
to the store of purchase**

**Contact Dee Zee if you experience the following problems:**

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

**1.800.779.2102**

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

**[www.deezee.com](http://www.deezee.com)**



## Dee Zee Running Board Installation Instructions

*Congratulations on your purchase of a quality Dee Zee product. Dee Zee is recognized as having the highest quality running boards and accessories on the market today. We have earned this reputation by offering our customers a product they can be proud to place on their vehicles. Dee Zee meets all the criteria of manufacturing a custom-fit product which guarantees it to be the easiest product to install.*

**Note:** Please take time to read all of the instructions before beginning this installation.

**Warning!** Please check for wiring or other obstructions before drilling any holes into the vehicle. If it is necessary to drill any holes into the vehicle, Dee Zee recommends putting a sealant or rust inhibitor around all holes drilled into the body of the vehicle.

**Warning!** It is the sole responsibility of the vehicle owner to check for tire clearance.

**Warning!** It is unlawful and dangerous to ride on running boards or side box boards while the vehicle is in motion.

**Cleaning Instructions:** To maintain the bright finish of your Dee Zee running boards, clean with a mild detergent. For our stainless steel products and accessories, the application of a high grade automotive type wax is recommended.

**If you should happen to have any questions with this product or you have an installation question, please feel free to call us at:**




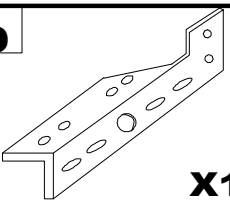
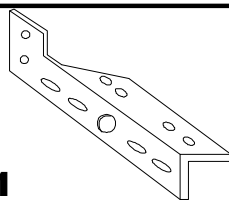

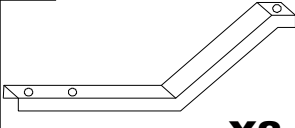
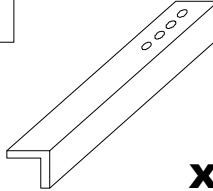
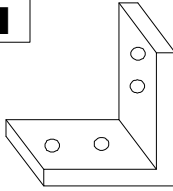





**1-800-779-8222**

**If you would like to find out more information on Dee Zee's products please feel free to visit our website at:**







**WWW.DEEZEE.COM**


# Dee Zee Britetread Running Boards

DZ 2018 / DZ 20-8018  
87-97 Ford Super Cab P/U


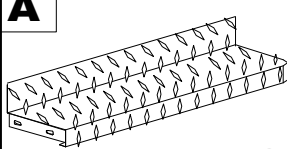
<b>A</b>  <b>X2</b>	<b>B</b>  <b>X2</b>	<b>C</b>  <b>X2</b>	<b>D</b>  <b>X1</b>	<b>E</b>  <b>X1</b>
<b>F</b>  <b>11 3/4"</b> <b>X2</b>	<b>G</b>  <b>X2</b>	<b>H</b>  <b>X2</b>	<b>I</b>  <b>X2</b>	<b>M</b>  <b>1/4" x 1"</b> <b>X12</b>
<b>N</b>  <b>1/4" x 1"</b> <b>X8</b>	<b>P</b>  <b>1/4" x 3/4"</b> <b>X32</b>	<b>S</b>  <b>1/4"</b> <b>X44</b>	<b>T</b>  <b>1/4"</b> <b>X44</b>	

Tools Required:  
Outils Nécessaires:

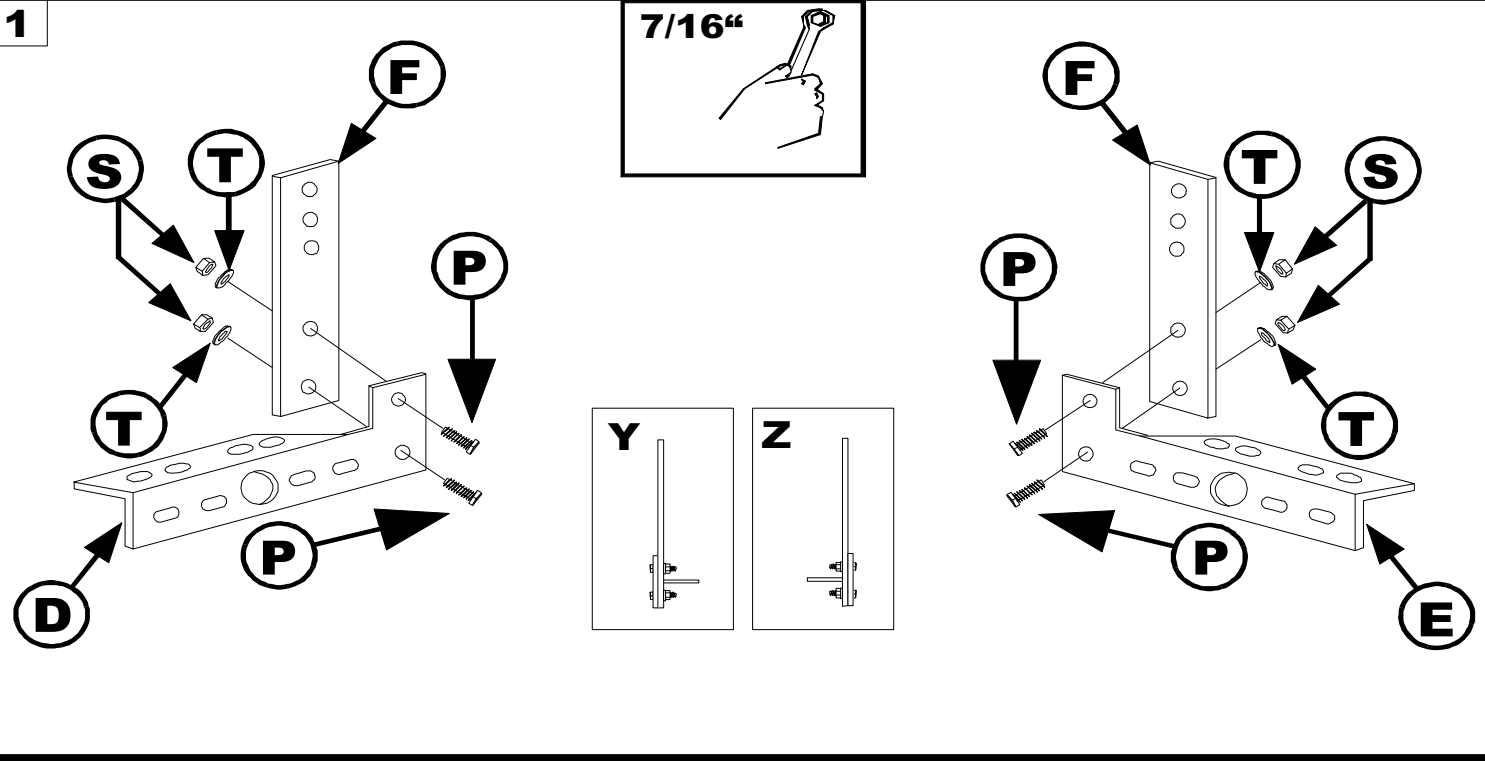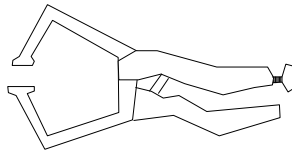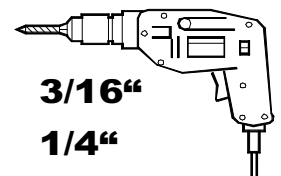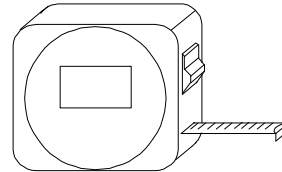
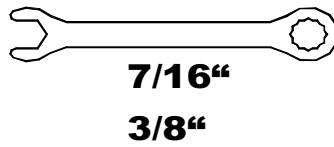


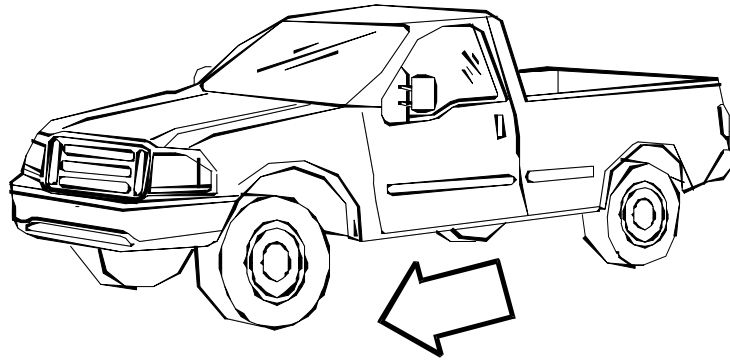




**2**






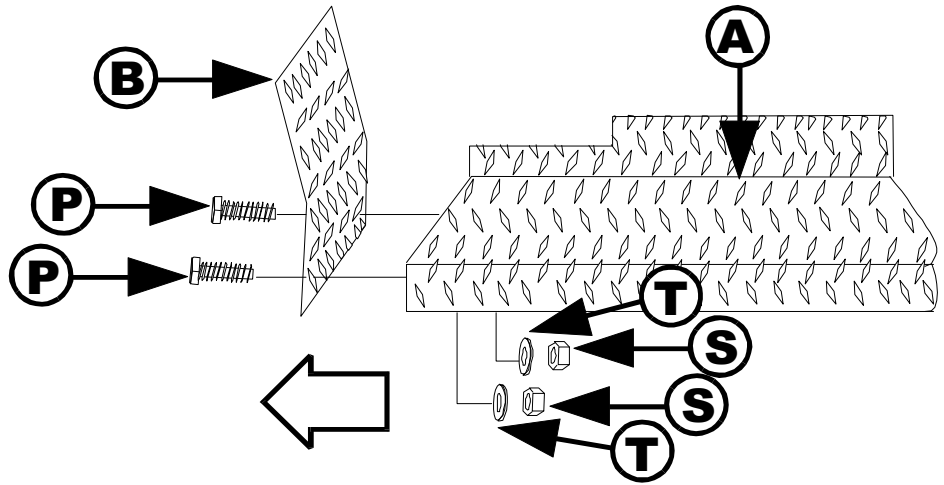
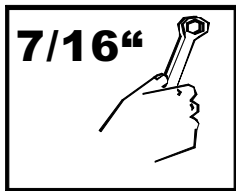


**3**

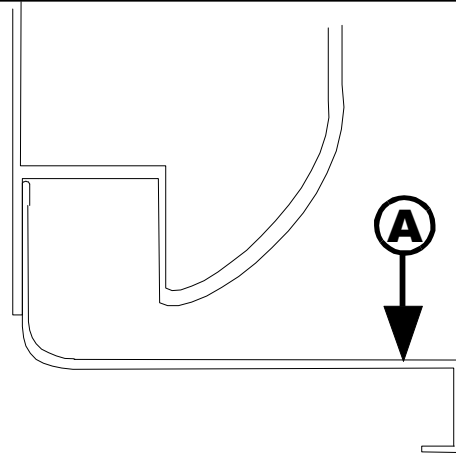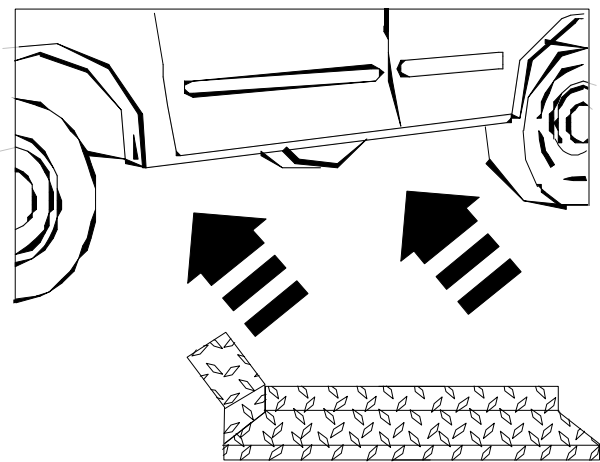


**4**

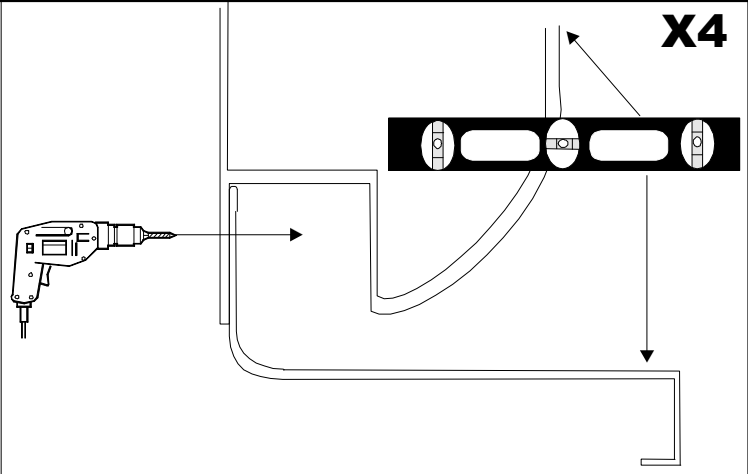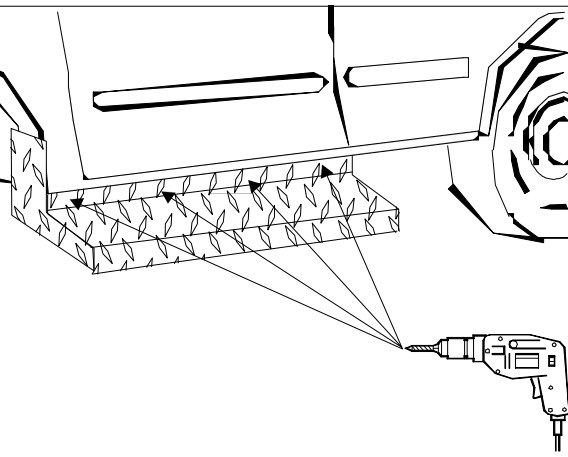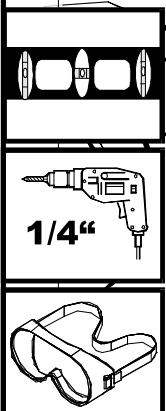

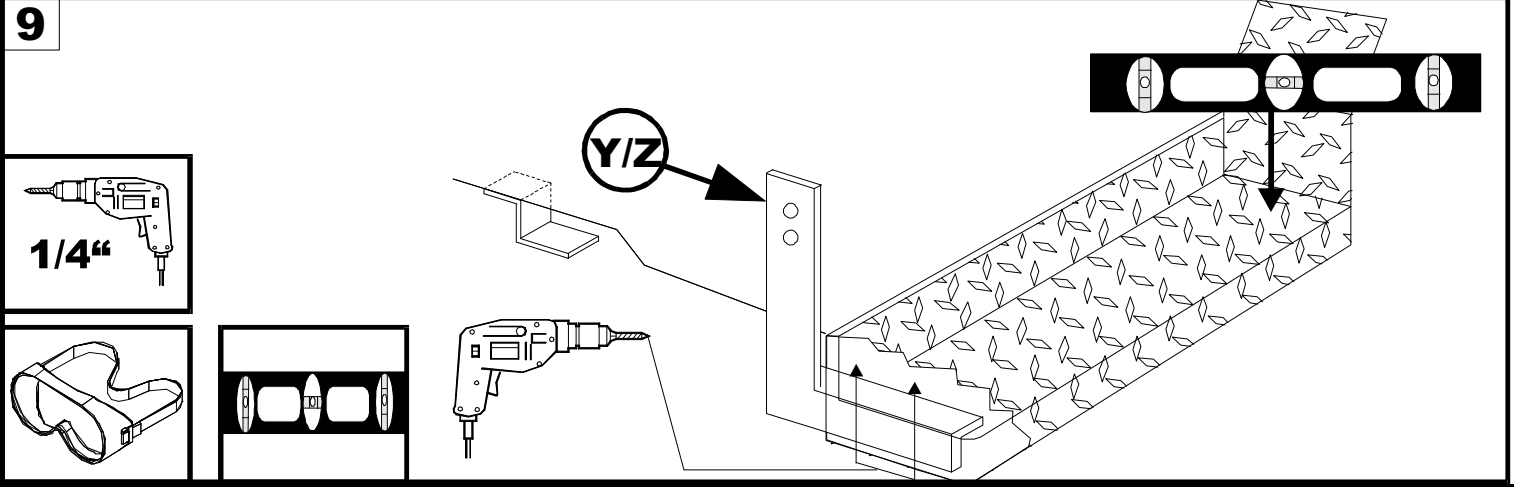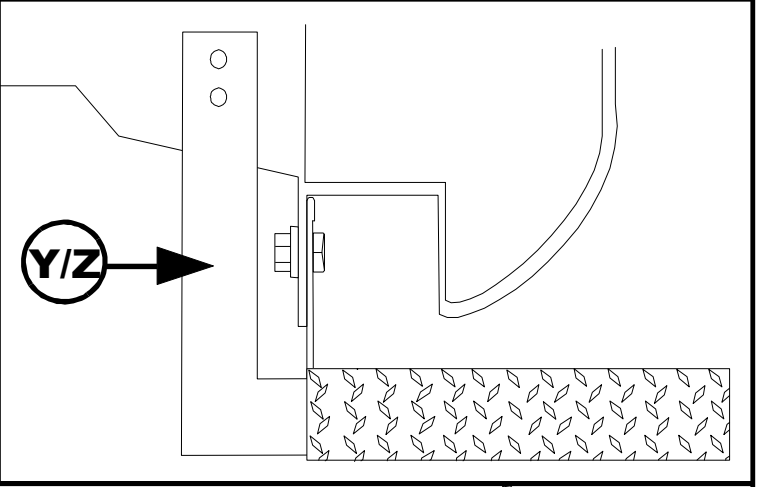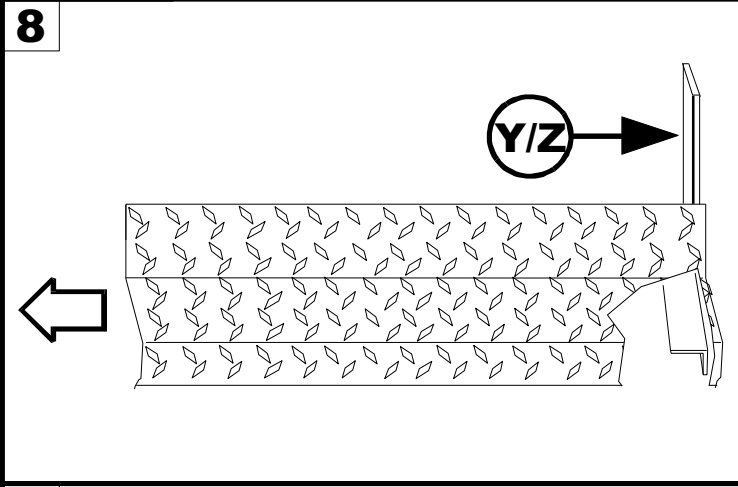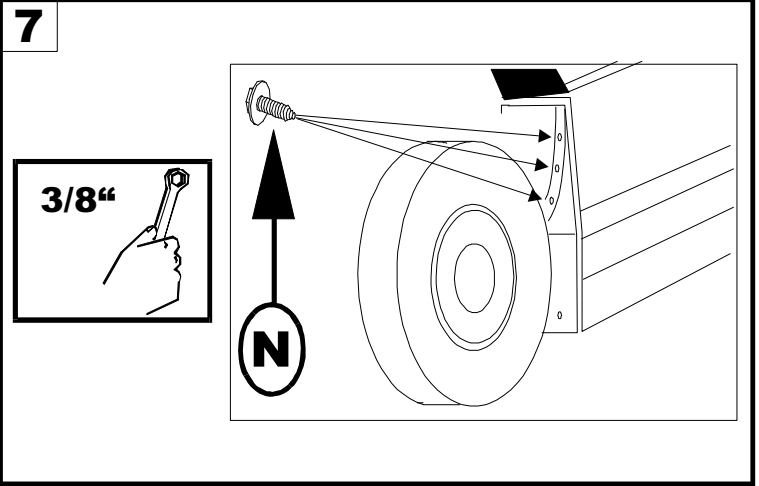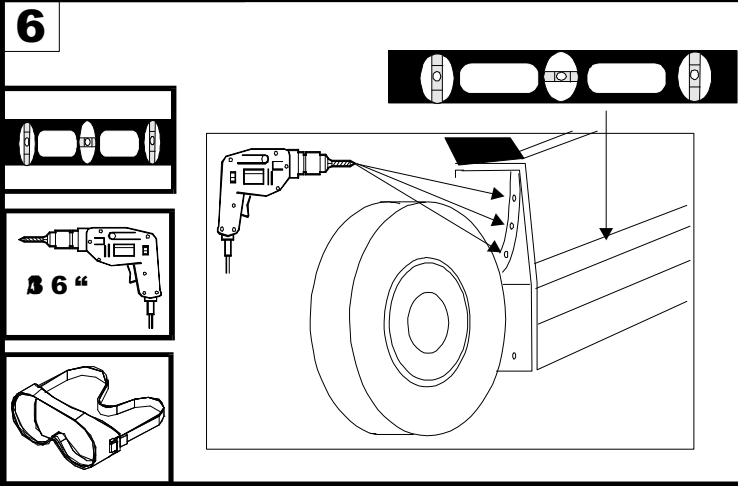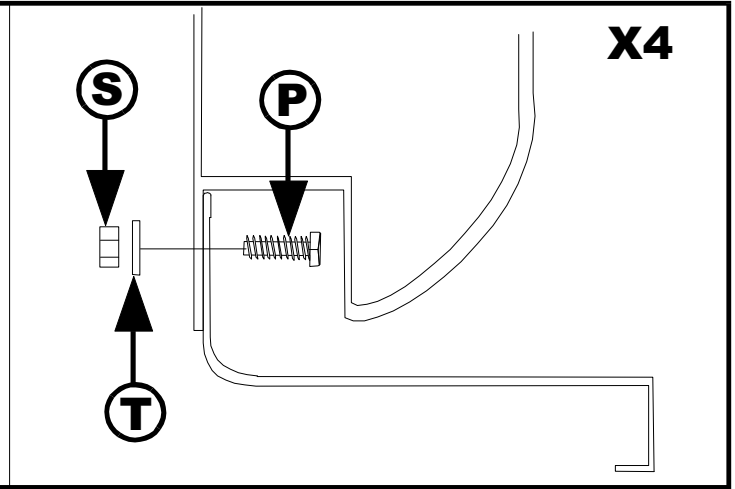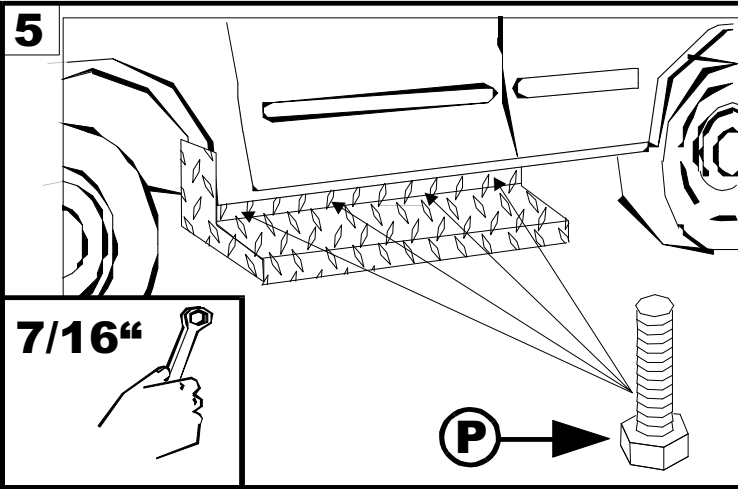


10

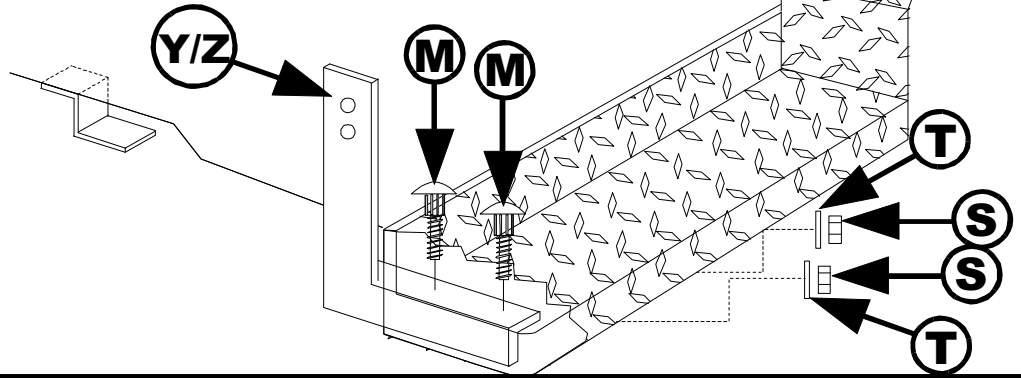




7/16"




11

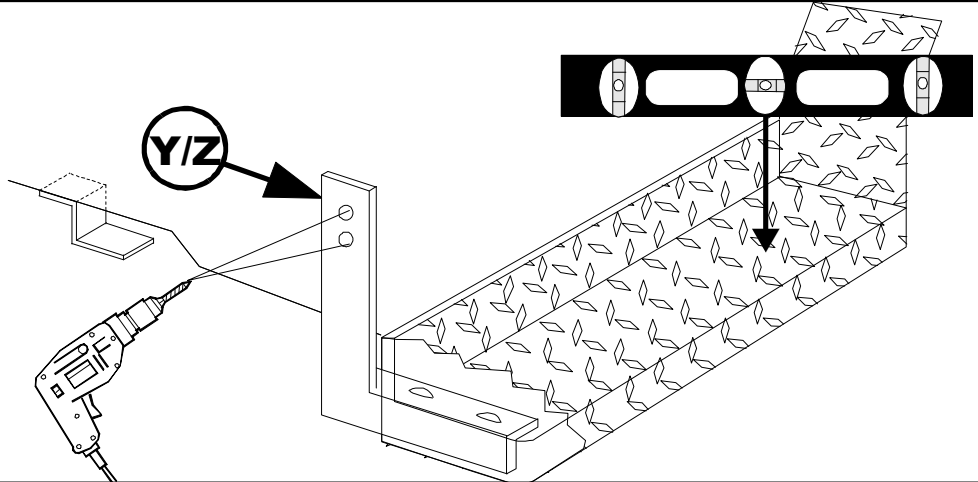

1/4"

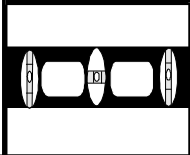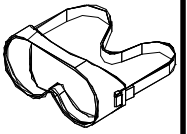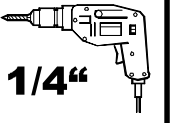


12

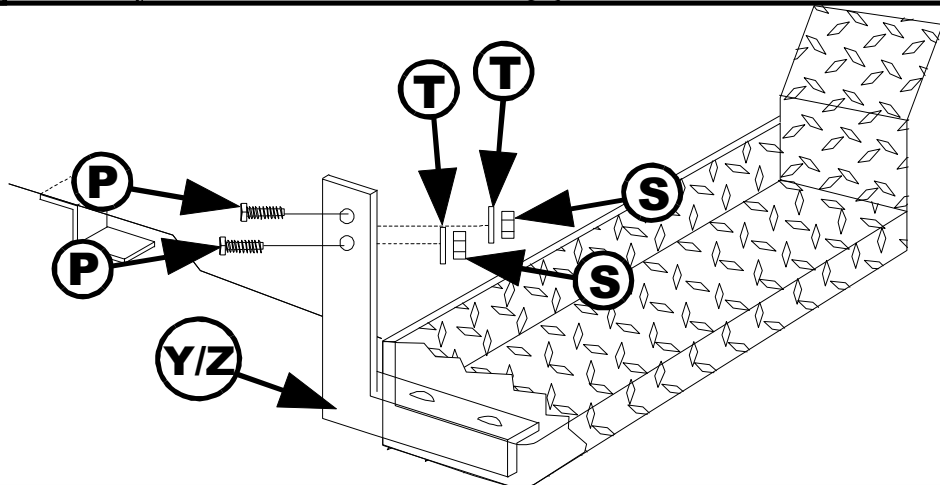



7/16"







13




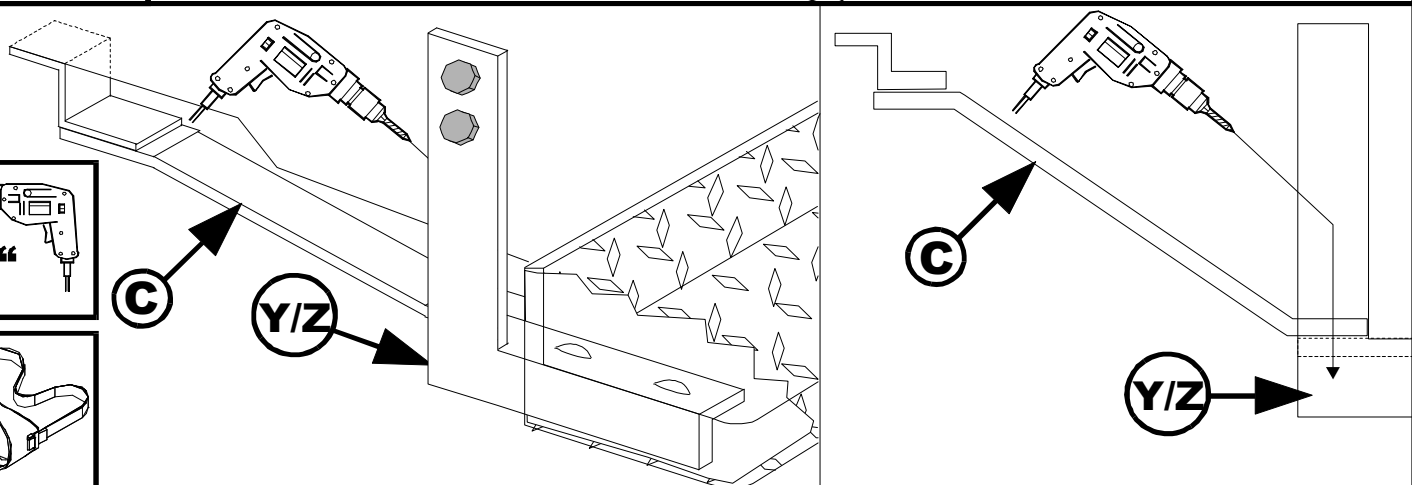


1/4"

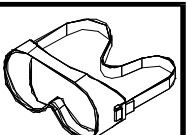
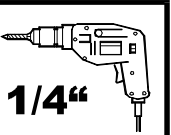


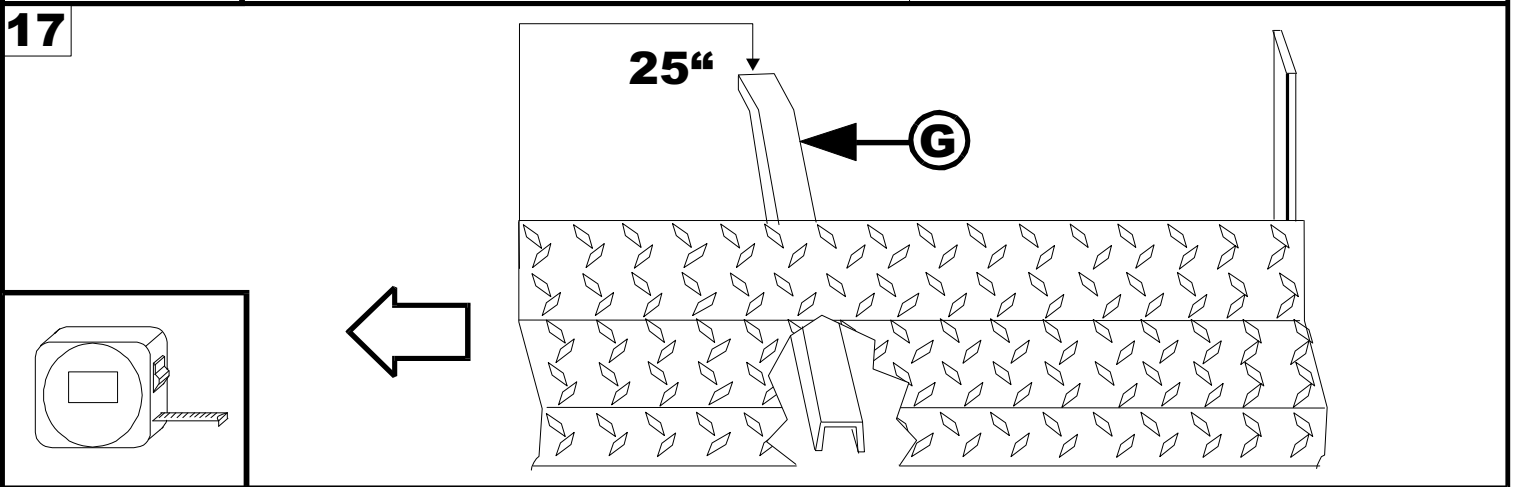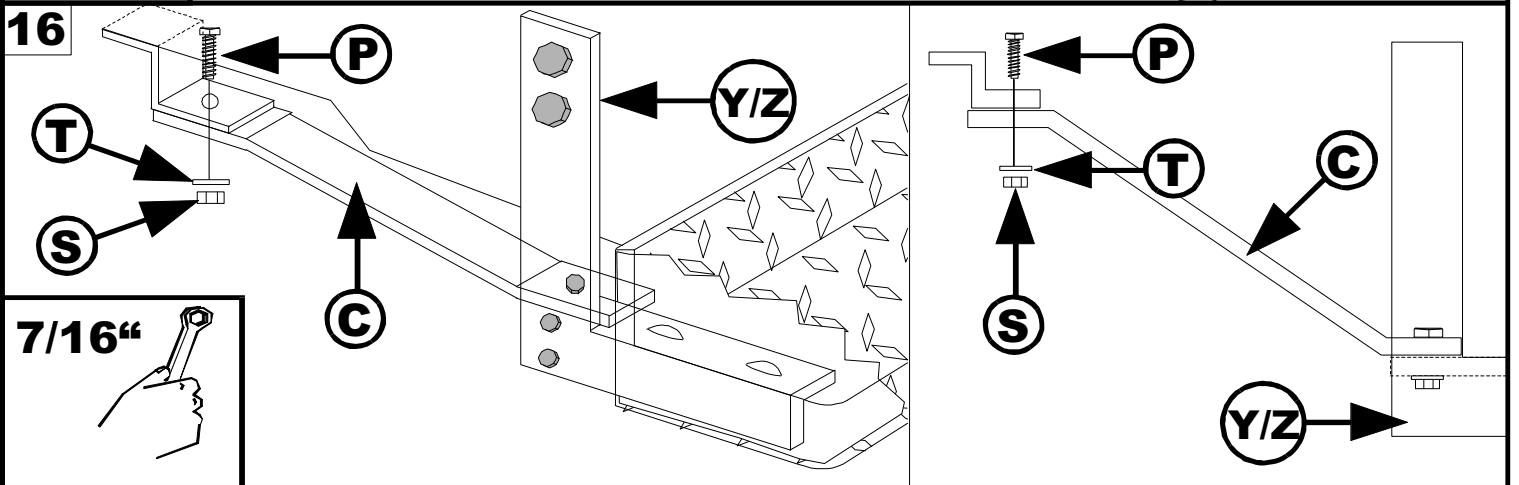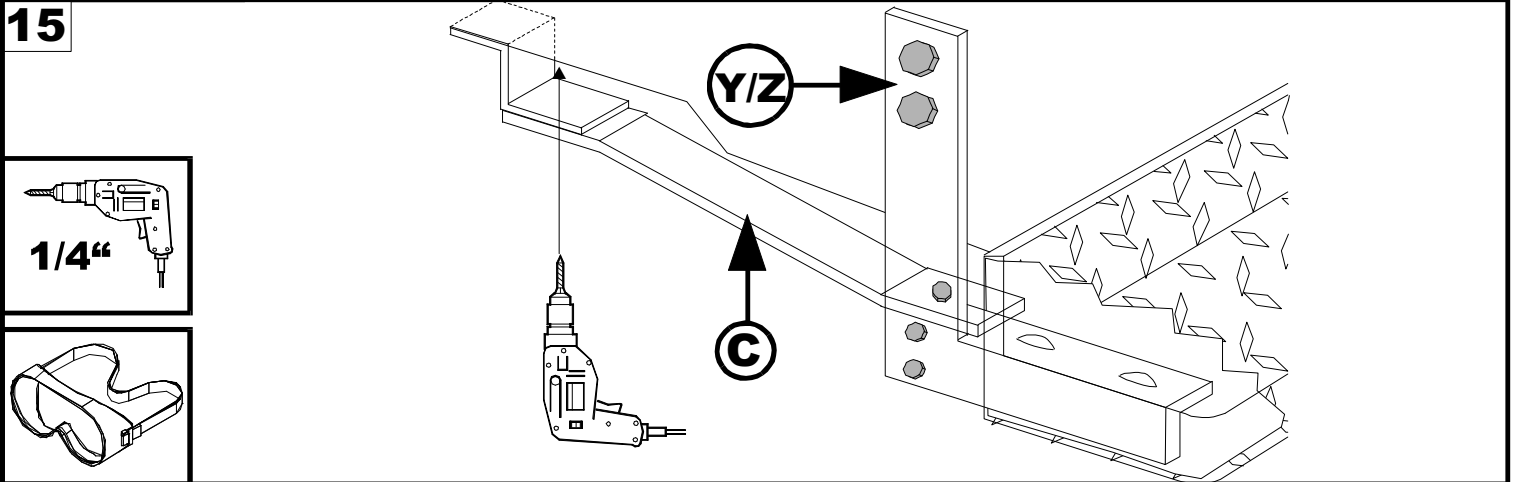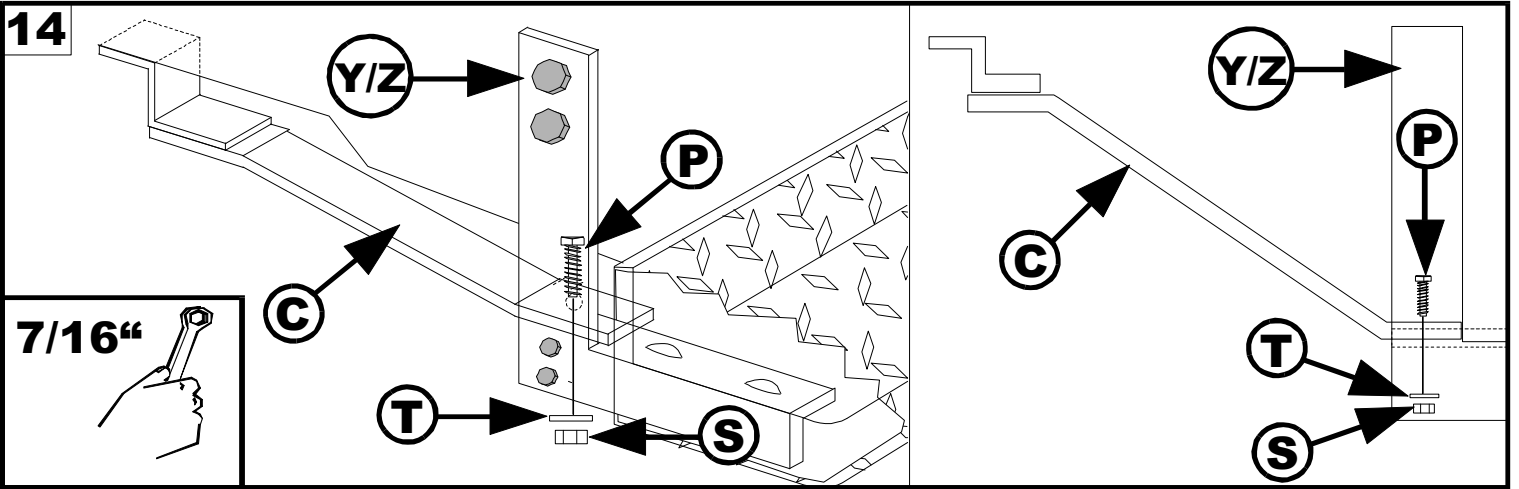





18

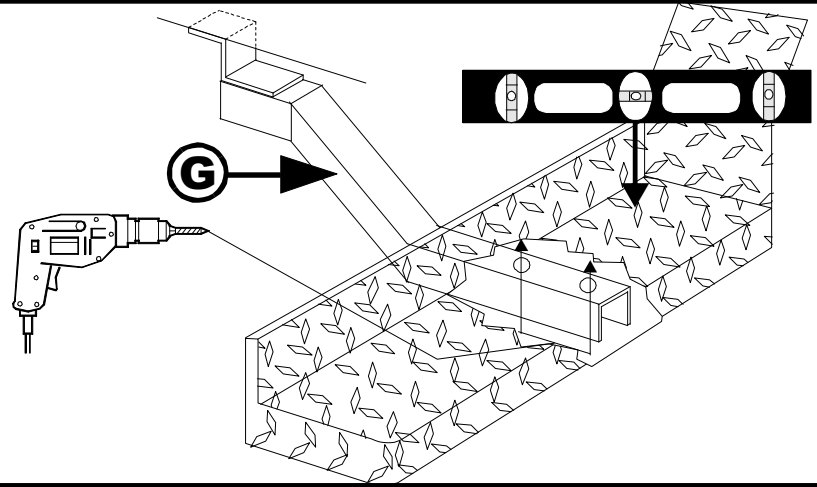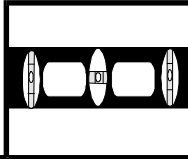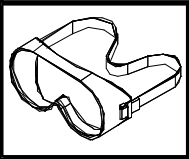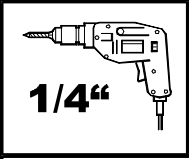



19

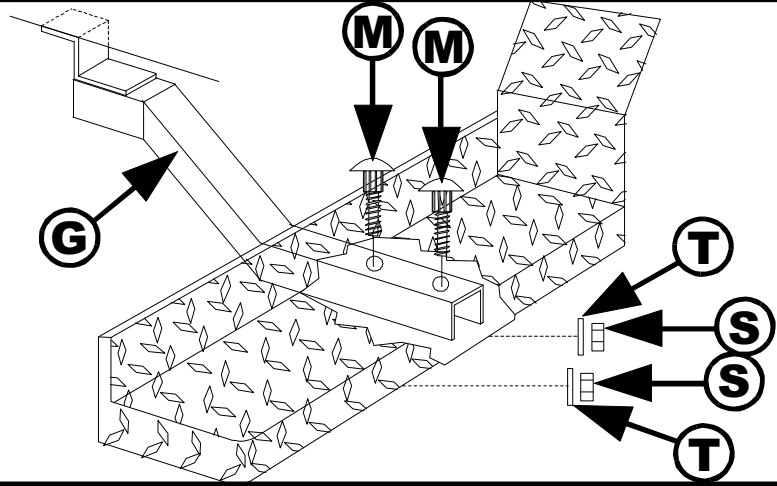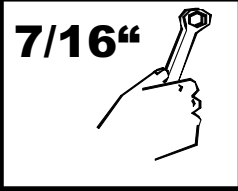

20

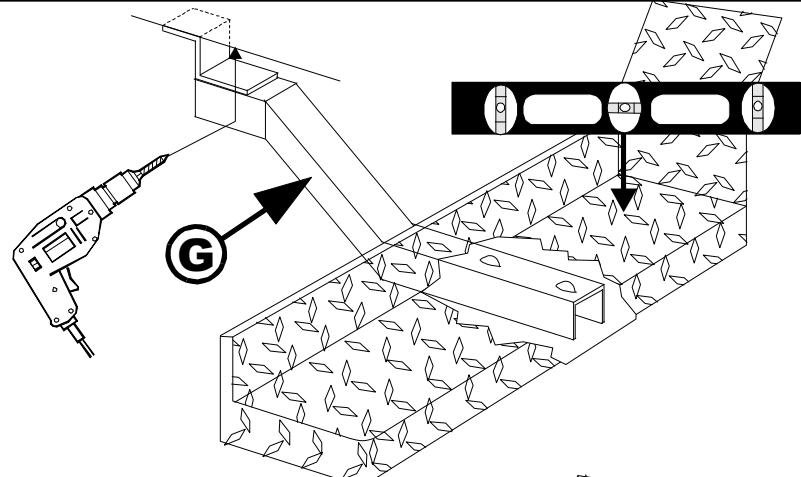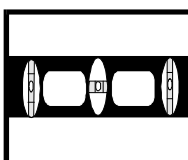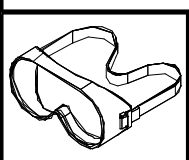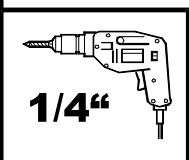




21

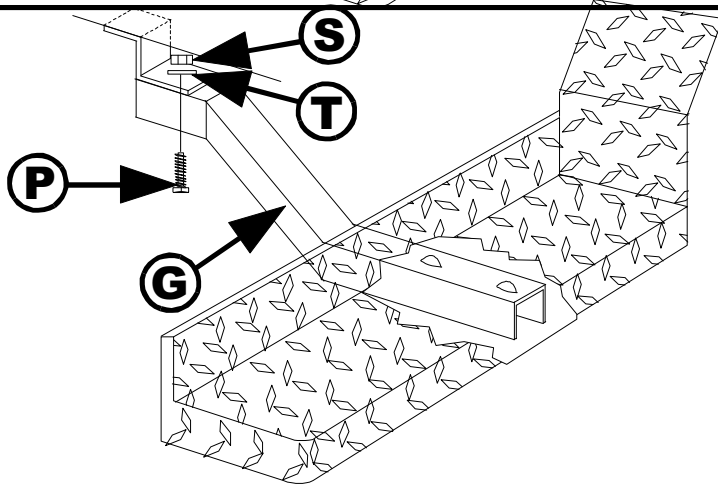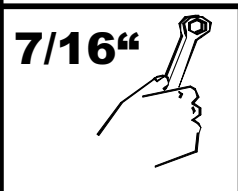







22


56"

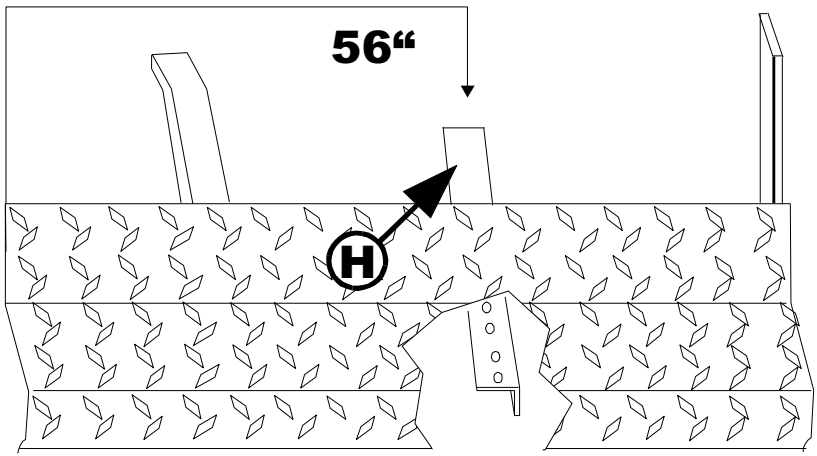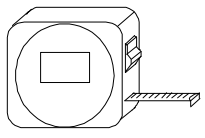




23

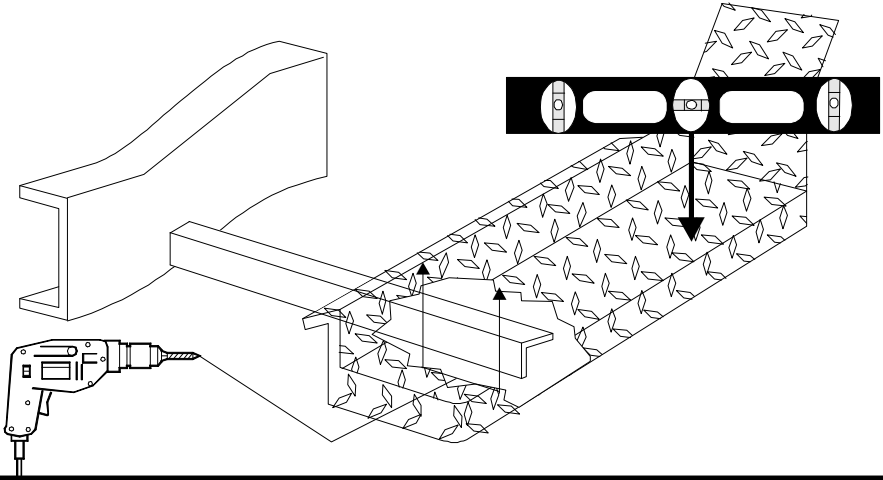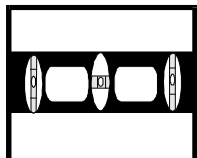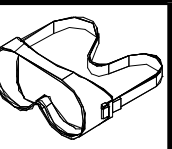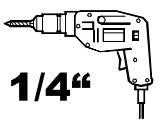


24

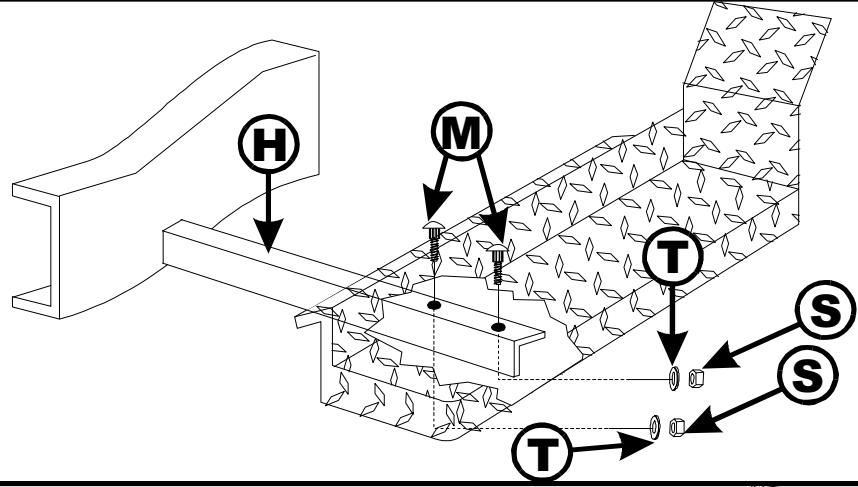



25

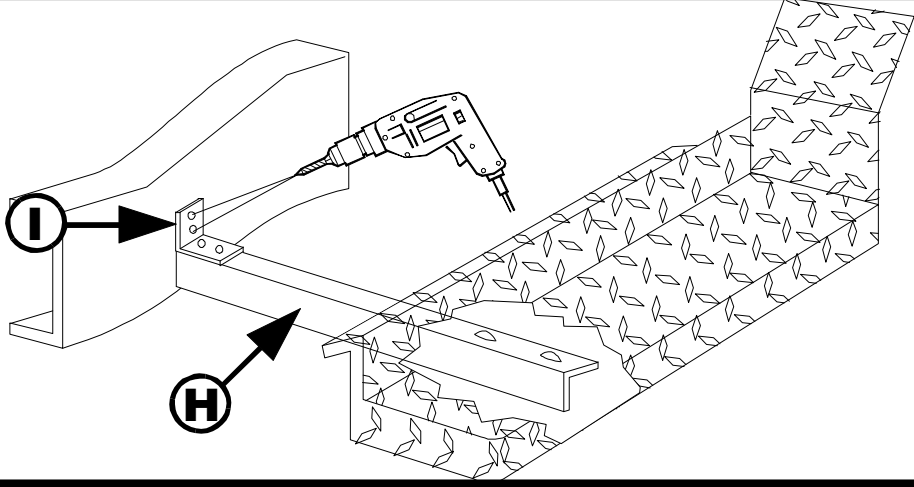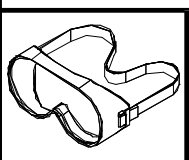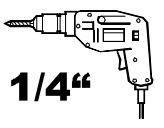

26

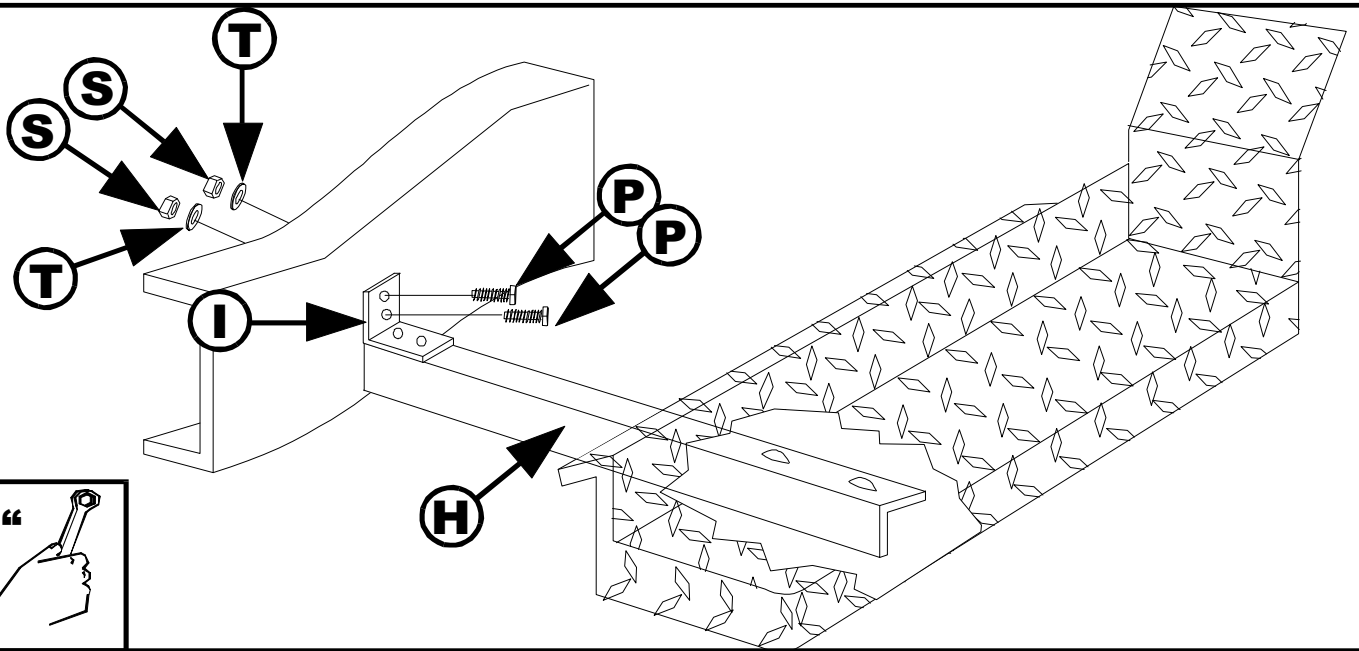

27

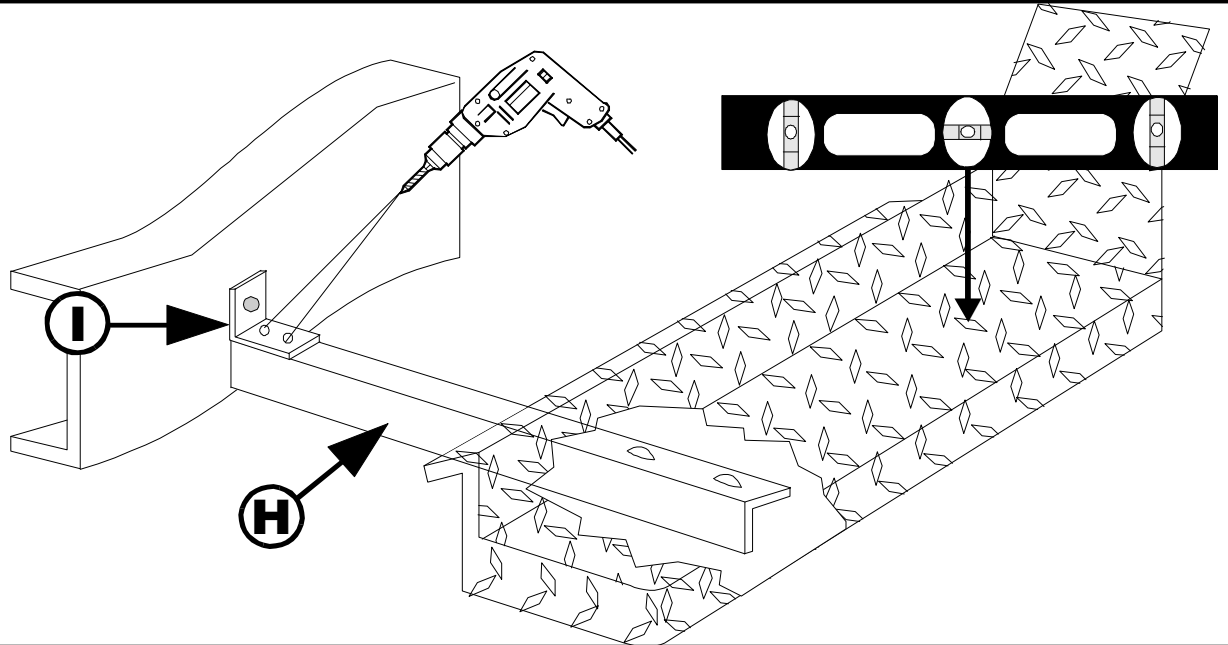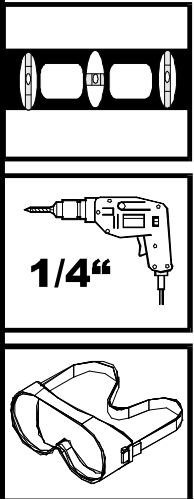

28

