



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com/warranty.php

INSTALLATION INSTRUCTIONS

SIDE BAR PART#DZ 370111/370112/370113

95-99 Chevy/GMC Tahoe/Yukon 2 Dr.

92-94 Blazer/Jimmy 2 Dr

88-00 Chevy/GMC Pickup

Step One: Locate hardware and check contents with the hardware listed below.

| QTY | DESCRIPTION |
|-----|--------------------------------------|
| 4 | 12mm x 120mm x 1.75mm hex bolts, 8.8 |
| 4 | 12mm flat washers, zinc plated |
| 4 | 12mm split lock washers, zinc plated |
| 4 | 12mm x 50mm hex bolt, zinc plated |
| 4 | 12mm flat washers, zinc plated |
| 4 | 12mm split lock washers, zinc plated |
| 1 | front support bracket, left side |
| 1 | front support bracket, right side |
| 1 | rear support bracket, left side |
| 1 | rear support bracket, right side |

Step Two: Locate the left side bar, one front support bracket, left side, one front support bracket, right side, two plastic rings, two 12mm hex bolts, 12mm flat washers and two 12mm split lock washers. Secure the brackets and rings to the side bar as shown in fig #1. When installing side bar on pickup truck you must use the two lower mounting holes on bracket rear support bracket. Do not fully tighten hardware at this time.

Step Three: Locate two 12mm hex bolts, two 12mm flat washers and two 12mm split lock washers. Remove the front and rear cab mount bolts located under the cab. Place the side bar under the vehicle and position each support bracket under the cab mounts. Secure the support brackets to the bottom of the cab mounts as shown in fig #2 & 3. Fully tighten all hardware at this time. Torque the 12mm x 120mm bolt to 50 ft. lbs, and the 12mm x 50mm to 30 ft lbs.

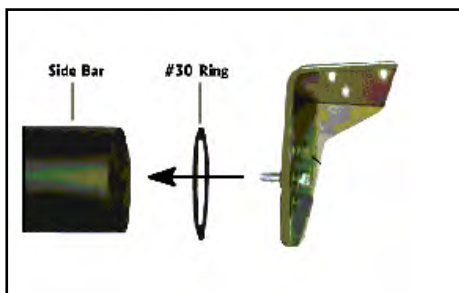


Fig #1

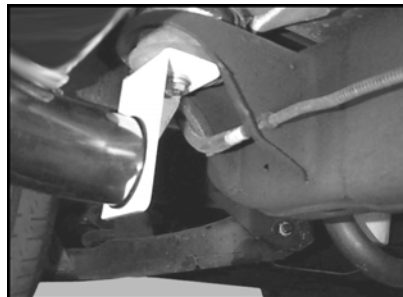


Fig #2



Fig #3

Photos are for reference only, actual brackets may be a little different.

Step Four: Repeat steps one through three on opposite side of vehicle.
Be sure to use all hardware supplied and tighten all bolts.