



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com/warranty.php

INSTALLATION INSTRUCTIONS

SIDE BAR PART #DZ 370251/370252/370253
2000-2004 DODGE DAKOTA

PARTS LIST

- | | |
|--------------------------------|----------------------------|
| (2) SIDE TUBES WITH STEPS | (8) 12mm Large Flat Washer |
| (2) FRONT MOUNT BRACKETS | (4) 12mm LOCK WASHER |
| (2) REAR MOUNT BRACKETS | (2) 12mm Hex Nuts |
| (2) FRONT SUPPORT BRACKETS | |
| (2) M12 x 50mm Hex Head Bolts | |
| (2) M12 x 60mm Hex Head Bolts | |
| (2) M12 x 140mm Hex Head Bolts | |

PROCEDURE

1. Begin installation by working on driver side of the vehicle
2. From underneath truck, loosen and remove body mount bolts that run upward through mounts into floorboard. Attach and secure Front Mount Bracket to underside of vehicles front body mount re-using isolator, and factory bolt. Hand Tighten.
3. Attach and secure Rear Mount Bracket to underside of vehicles rear body mount in same manner as the front.
4. Attach Front Support Bracket to back side of Front Mount Bracket using long bolt through frame hole by front bracket with the nut and washer at the top between the cab and frame. Align bracket with hole in bracket for mounting the side bar.
5. Attach Side Tube to Front and Rear Brackets using (1) 12mm x 50mm bolt, lock washer, and flat washer for each front bracket, and hand tighten. Align side bar with vehicle and Torque M12 bolts first to 65 ft-lbs and then tighten all remaining fasteners to complete the driver-side assembly.
6. Repeat process for passenger side of vehicle to complete installation.

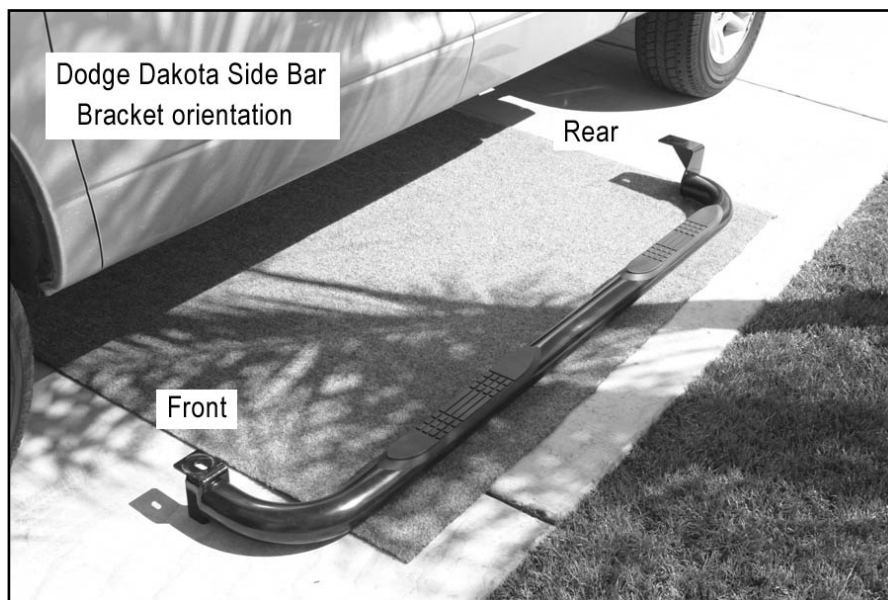


Fig. 1