



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com/warranty.php

INSTALLATION INSTRUCTIONS
3," 4" ROUND AND 4" OVAL BENT END SIDEBAR
99-09 FORD F250-550 REGULAR, SUPER & SUPER CREW CABS
PART # DZ 370307

PARTS LIST:

1	Passenger Side Bar	6	10mm Clip Nuts
1	Driver Side Bar	14	10-1.50mm x 40mm Hex Head Bolts
4	Mounting Brackets	22	10mm ID x 27mm OD x 3mm Flat Washers
4	1/2" x 2" Hex Head Bolts	14	10mm Lock Washers
4	1/2" Lock Washers	8	10mm Hex Nuts
4	1/2 x 1-1/2" OD x 1/8" Flat Washers		

PROCEDURE:


- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.**
- Locate the driver side front and rear mounting points under the vehicle on the pinch weld.
- Install the 10mm Clip Nuts (**Figure 1**). **NOTE:** The rear mount will required (2) Clip Nuts and the front only (1).
- Loosely attach the Driver Side Brackets to pinch weld using the included (2) 10mm x 40mm Hex Head Bolts, (4) 10mm Flat Washers, and (2) 10mm Lock Washers, (**Figure 2 & 3**).
NOTE: Pinch weld and side panel holes on the bracket must be horizontal when installing.
- Loosely attach the upper side of the Mounting Brackets to already installed Clip Nuts by using (2) 10-1.50mm x 40mm Hex Head Bolts, (2) 10mm Flat Washers, and 10mm Lock Washers on each Mounting Bracket, (**Figure 2 & 3**).
- Place Side Bar into position and loosely attach it to Mounting Brackets using the included (2) 1/2" x 2" Hex Head Bolts, (2) 1/2" Flat Washers and (2) 1/2" Lock Washers (**Figure 4 & 5**).
NOTE: Side Bar mounting hole on the brackets must be vertical.
- Level and align Side Bar with the side of the vehicle then tighten all hardware at this time.
- Repeat steps 2 to 7 for passenger side.
- Periodically check and retighten the hardware as necessary.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.


For gloss black finishes: Mild soap may be used to clean the Sidebar.

Front Driver Side Pictured

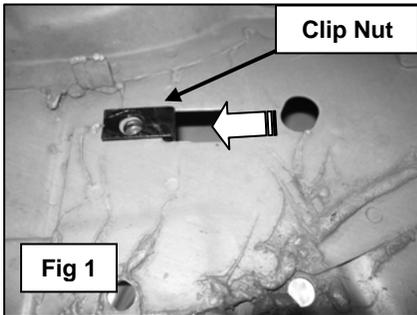


- 10mm Clip Nut
- 10mm x 40mm Hex Bolt
- 10mm Lock Washer
- 10mm Flat Washer

- (2) 10mm x 40mm Hex Bolts
- (2) 10mm Lock Washers
- (4) 10mm Flat Washers
- (2) 10mm Nuts

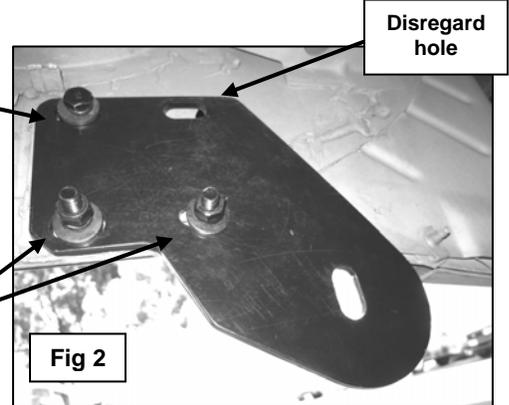


Rear Driver Side Pictured

- (2) Clip Nuts,
- (2) 10mm x 40mm Hex Bolts
- (2) 10mm Lock Washers
- (2) 10mm Flat Washers

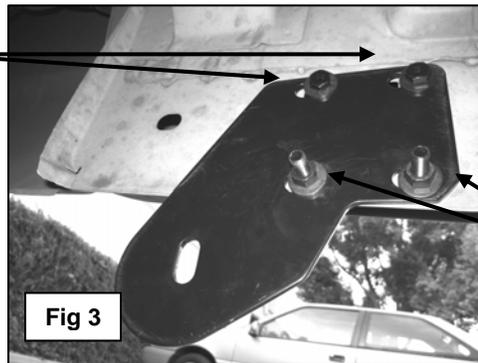


- (2) 10mm x 40mm Hex Bolts
- (2) 10mm Lock Washers
- (4) 10mm Flat Washers
- (2) 10mm Nuts

Rear Driver Side Pictured

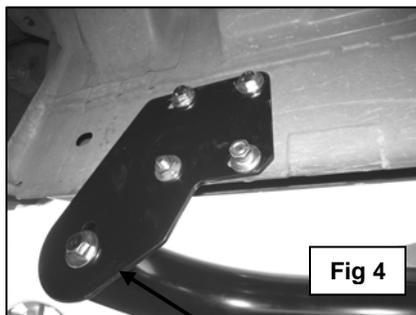

Front Driver Side Pictured

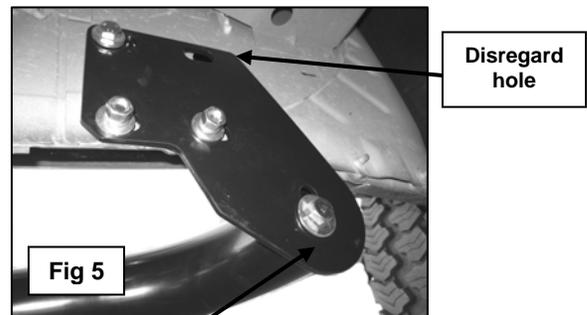

- 1/2" x 2" Hex Bolts
- 1/2" Lock Washer
- 1/2" Flat Washer