INSTALLATION INSTRUCTIONS


SIDE BAR PART # DZ 370391/370392/370393 99-08 FORD F250 / F350 SUPER CAB & SUPER CREW

PARTS LIST:

1	Passenger Side Bar	8	10mm Clip Nuts
1	Driver Side Bar	16	10-1.50mm x 40mm Hex Head Bolts
4	Mounting Brackets	24	10mm Flat Washers
4	1/2"-13*2" Hex Head Bolts	16	10mm Lock Washers
4	1/2" Lock Washers	8	10mm Hex Nuts
4	1/2" Flat Washers		

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.
- 2. Locate the driver side front and rear mounting points under the vehicle on the pinch weld.
- **3.** Install the 10mm Clip Nuts (*Figure 1*). **NOTE**: The rear mount will required (2) Clip Nuts and the front only (1).
- **4.** Loosely attach the Driver Side Brackets to pinch weld using the included (2) 10-1.50mm x 40mm Hex Head Bolts, (4) 10mm Flat Washers, and (2) 10mm Lock Washers (2 & 3)). **NOTE:** Pinch weld and side panel holes on the bracket must be Horizontal when installing.
- 5. Loosely attach the upper side of the Mounting Brackets to already installed Clip Nuts by using (2) 10-1.50mm x 40mm Hex Head Bolts, (2) 10mm Flat Washers, and 10mm Lock Washers on each Mounting Bracket (Figure 2 & 3)..
- **6.** Place Side Bar into position and loosely attach it to Mounting Brackets using the included (2) 1/2"Hex Head Bolts, (2) 1/2" Flat Washers, and (2) 1/2" Lock Washers (Figure 4 & 5). **NOTE:** Side Bar mounting hole on the brackets must be vertical.
- 7. Level and align Side Bar with the side of the vehicle then tighten all hardware at this time.
- **8.** Repeat steps 2 to 7 for passenger side.
- **9.** Periodically check and retighten the hardware as necessary.

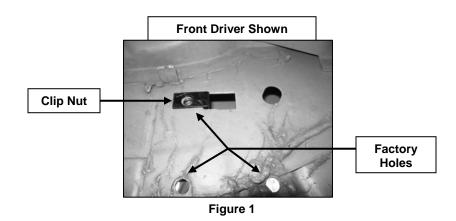


Page 1 of 2

Front Driver Side Bracket Shown Disregard Clip Nut, 10mm x 40mm Hex Bolt, 10mm hole Lock Washer, & 10mm Flat Washer 10mm x 40mm Hex Bolt, 10mm Lock Washer, 10mm Flat Washer, 10mm Nut

Figure 2



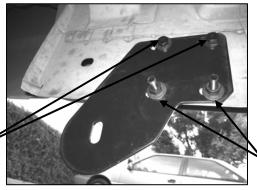

Bolt, 10mm Lock Washer, 10mm Flat Washer, 10mm Nut

Figure 3

1/2"*2" Hex Bolt, 1/2" Lock Washer, & 1/2" Flat Washer

Rear Driver Side Bracket Shown

Clip Nut, 10mm x 40mm Hex Bolt, 10mm

Lock Washer, & 10mm

Flat Washer

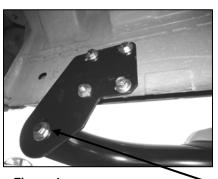


Figure 4

Front Driver Side Bracket Shown

10mm x 40mm Hex

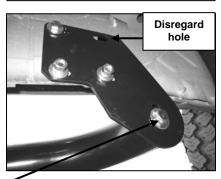


Figure 5