



**Before returning this product  
to the store of purchase**

**Contact Dee Zee if you experience the following problems:**

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

**1.800.779.2102**

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

**[www.deezee.com/warranty.php](http://www.deezee.com/warranty.php)**


# INSTALLATION INSTRUCTIONS

SIDEBAR PART #DZ 370631/370633

06-07 JEEP COMMANDER

## PARTS LIST:

1	Driver/Left Sidebar	4	½" x 2" Hex Head Bolt
1	Passenger/Right Sidebar	4	½" Lock Washers
1	Driver/Left Front Mounting Bracket (A)	4	½" ID x 1 3/8" OD x 3/32" Flat Washers
1	Passenger/Right Front Mounting Bracket (B)	2	10-1.50mm x 25mm Hex Head Bolts
1	Driver/Left Rear Mounting Bracket (C)	4	10-1.50mm x 30mm Hex Head Bolts
1	Passenger/Right Rear Mounting Bracket (D)	6	10mm Lock Washers
1	Double Welded Nut Plate (E)	6	10mm ID x 30mm OD x 3mm Flat Washers
2	Single Welded Nut Plate (F)		

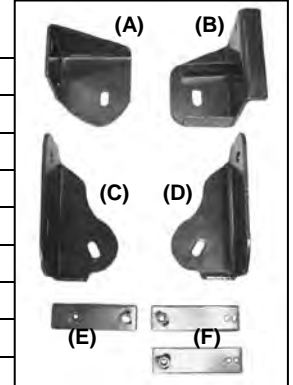

## PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. DO NOT ATTEMPT INSTALLATION ALONE; PERSONAL INJURY OR DAMAGE TO THE TRUCK MAY RESULT.
2. From underside of vehicle locate passenger control arm located by the rear side door. Insert (1) Single Welded Nut plate into control arm and align holes on the plate with factory holes on the control arm. **NOTE:** Make sure the welded nut on the plate is towards the outside/bottom of the control arm (Figure 1).
3. While holding the single welded plate in position, partially hang passenger side rear Mounting Bracket into position by inserting (1) 10mm x 25mm Hex Head Bolt, (1) 10mm Lock Washer, and (1) 10mm Flat Washer into upper/inner hole on the plate (Figure 2). **NOTE:** Do not attach bottom/outer hole at this time.
4. Locate passenger Sidebar. **NOTE:** To determine passenger and driver Sidebar note that one bend on the Sidebar is longer than the other one; the longer bend goes to the rear Mounting Bracket. Loosely attach rear bend on the Sidebar to previously attached Mounting Bracket using (1) ½" x 2" Hex Head Bolt, (1) ½" Lock Washer, and (1) ½" Flat Washer (Figure 2 & 3).
5. Once the passenger Sidebar is loosely install, proceed to attach (1) 10mm x 30mm Hex Head Bolt, (1) 10mm Lock Washer, and (1) 10mm Flat Washer into welded nut on the plate, which will be the lower/outer mounting location on the control arm (Figure 4). Do not tighten at this time.
6. Repeat steps 2 – 5 for driver/left rear Mounting Bracket.
7. **NOTE:** There are two different front Mounting Brackets, refer to figure below for bracket configuration.

### Driver/Left Front Mounting Bracket Installation:

8. Insert in an angle (1) Double Welded Nut Plate through bigger hole on the front floor panel of the vehicle and into position (Figure 5). Align holes on the plate with holes on the floor panel. **NOTE:** The smaller round factory hole towards the rear of the vehicle and the bigger factory hole will be your mounting holes.
9. Partially hang driver side front Mounting Bracket into position by inserting (2) 10mm x 30mm Hex Head Bolts, (2) 10mm Lock Washers and (2) 10mm Flat Washers into previously inserted Double Welded Nut Plate (Figure 6).

### Passenger/Right Front Mounting Bracket Installation:

10. Remove the two factory bolts on the air conditioning lines cover located by the front fender (Figure 8).
11. Position passenger front Mounting Bracket into position and partially hang it using the factory bolts removed in step 10 (Figure 9). Do not tighten at this time.
12. Attach front bend (smaller bend) on both Sidebars to already installed front Mounting Brackets using (1 ea) ½" x 2" Hex Head Bolt, (1 ea) ½" Lock Washer, and (1 ea) ½" Flat Washer (Figure 7 & 10). Do not tighten at this time.
13. Level and adjust Side Bars, and then tighten all hardware at this time now.
14. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

Passenger/Right Side Shown

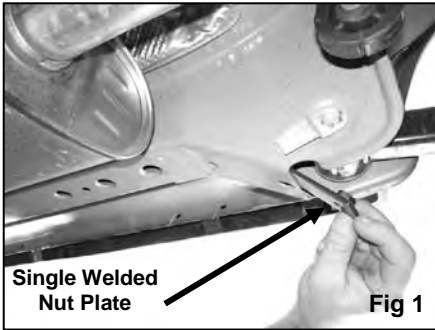


Fig 1

Passenger/Right Side Shown

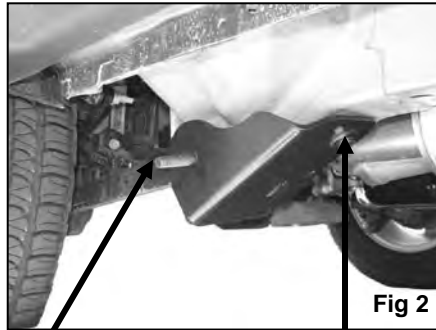


Fig 2

1/2" x 2" Hex Bolt,  
1/2" Lock, Washer,  
1/2" Flat Washer

10mm x 25mm  
Hex Bolt,  
10mm Lock,  
Washer, &  
10mm Flat  
Washer

Passenger  
Sidebar

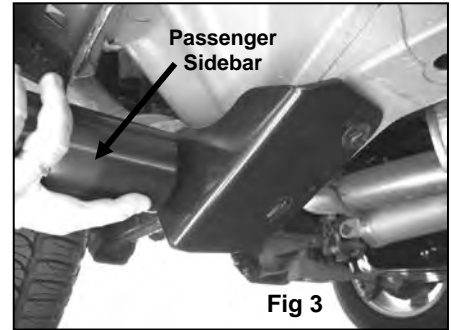


Fig 3

Passenger/Right Rear Mounting Bracket Shown

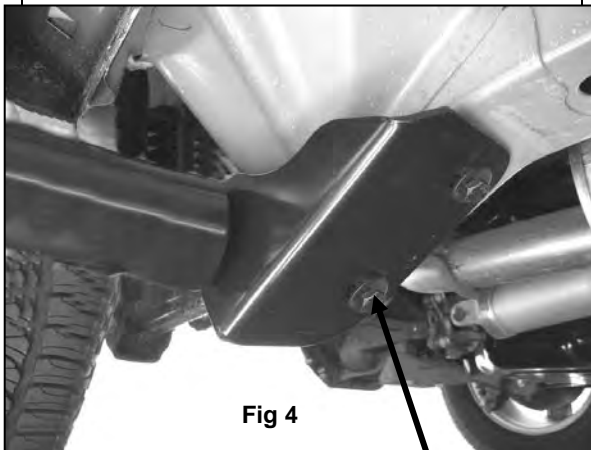


Fig 4

10mm x 30mm Hex Bolt,  
10mm Lock, Washer, &  
10mm Flat Washer

Driver/Left Side Shown

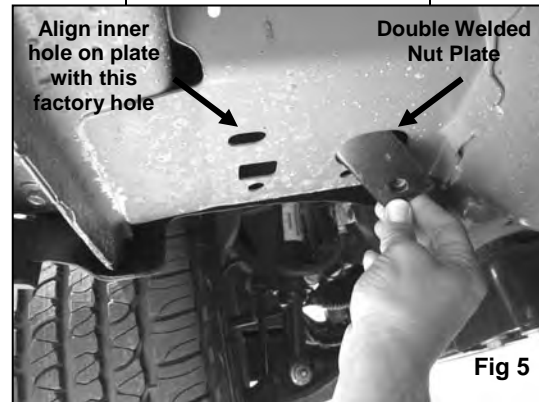


Fig 5

Driver/Left Front Mounting Bracket Shown



Fig 6

10mm x 30mm Hex Bolt,  
10mm Lock, Washer, &  
10mm Flat Washer

Driver/Left Front Mounting Bracket Shown


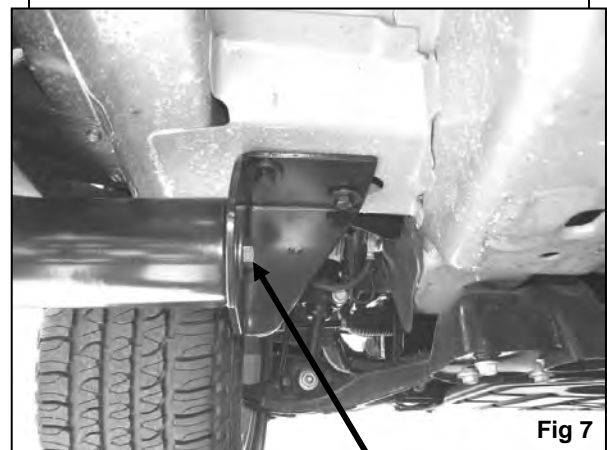



Fig 7

1/2" x 2" Hex Bolt,  
1/2" Lock, Washer,  
1/2" Flat Washer

Passenger/Right Side Shown

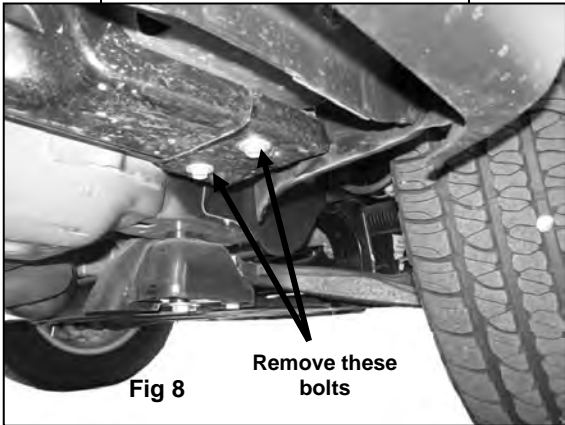

Passenger/Right Front Mounting Bracket Shown

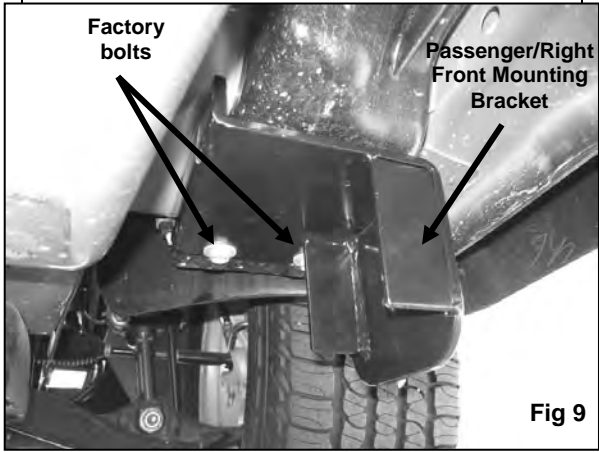

Passenger/Right Front Mounting Bracket Shown



(Sidebar)  
1/2" x 2" Hex Bolt,  
1/2" Lock Washer,  
1/2" Flat Washer

Installation Complete

