



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com/warranty.php

INSTALLATION INSTRUCTION
SIDE BAR PART#DZ 371211/371212/371213
02-08 DODGE RAM 1500/2500/3500 2/4WD Reg.Cab


PARTS LIST

- (2) SIDE TUBES WITH STEPS
- (2) FRONT MOUNT BRACKETS
- (2) REAR MOUNT BRACKETS
- (4) 1/2"-2"x13" hex bolts
- (8) 1/2" Flat Washers
- (4) 1/2" Split Washers
- (4) M12 Split Washers


PROCEDURE

1. Read and understand the instructions completely before beginning installation
2. Sidebars set consist of a driver and passenger side bar. Be sure to determine the correct side before installation.
3. Locate and remove the body mounting bolts from the vehicle as shown in pictures 1 & 2.
4. Assemble the Front and Rear Mount Brackets by using the body mounting bolts as shown in picture 3 & picture 4. Leave hardware loose.
5. Using the 1/2"-2"x13" hex bolts with respective washers, install the side bars as shown in pictures 5 & 6. Leave hardware loose.
6. Check to be sure Side Bars are properly aligned with the vehicle body. Tighten the Body mounting bolts and 1/2" Hex bolts. Repeat for passenger side.


Picture 1.

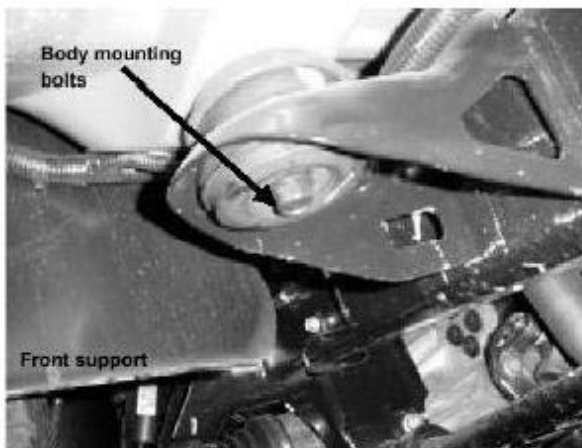

Picture 2.

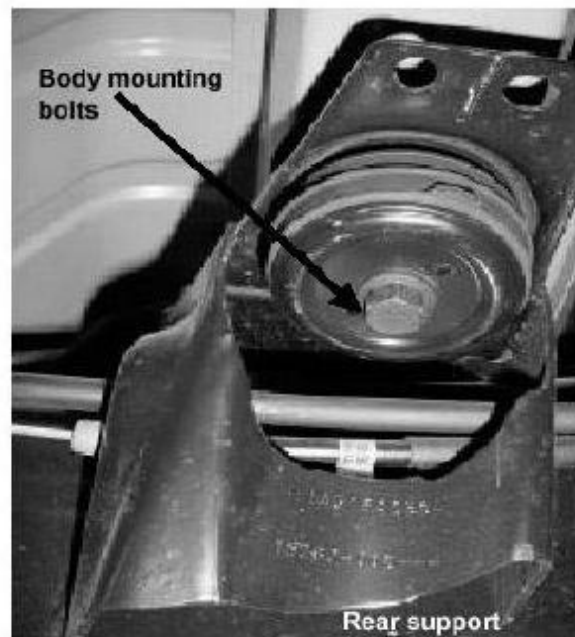

Picture 3

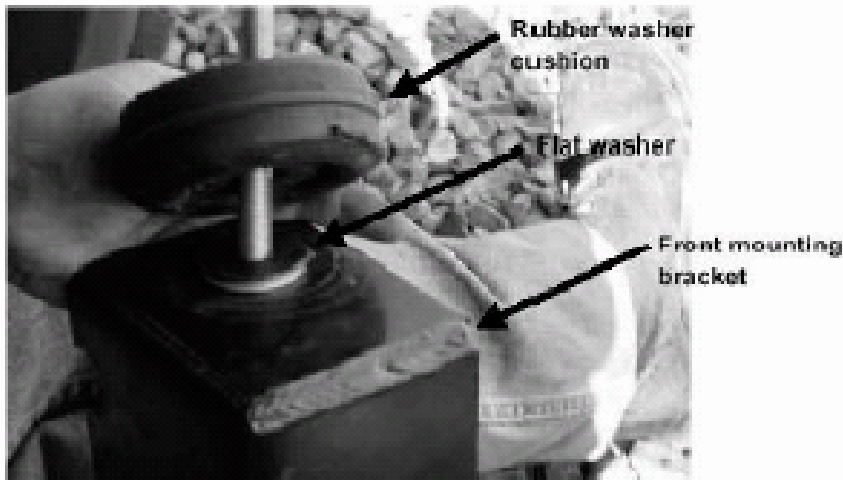


Picture 4



**Front mounting
bracket.
Driver side.**


Picture 6.

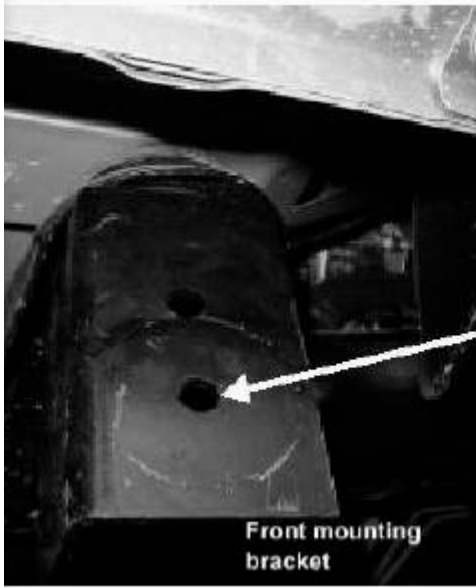

Bolt Sidebar on lower hole.

Front mounting bracket

Picture 7.

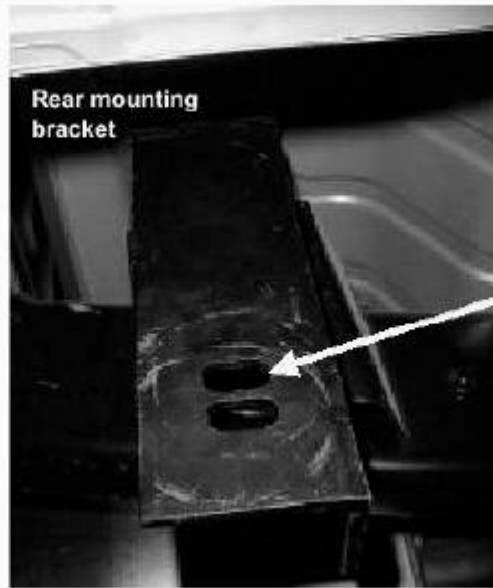

Rear mounting bracket

Bolt Sidebar on upper hole.



Driver side