



**Before returning this product  
to the store of purchase**

**Contact Dee Zee if you experience the following problems:**

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

**1.800.779.2102**

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

**[www.deezee.com/warranty.php](http://www.deezee.com/warranty.php)**

## Installation Instructions

3" Side Bar & 4" Oval Bend SIDE BAR PART# DZ 371247

Dodge Ram Mega Cab 2006-08

### PARTS LIST


Q'ty	Description	Q'ty	Description
4	1/2"*2" Hex Head Bolt	4	M12 Lock Washer
4	1/2" Flat Washer	6	M10 Hex Nut
4	1/2" Lock Washer	2	M10*40 Hex Head Bolt
4	M12*120 Hex Head Bolt	8	M10 Lock Washer
2	M10*25 Hex Head Bolt	10	M10 Oversize Flat Washer
4	M12 Oversize Flat Washer	2	M10*25 Bolt Plate
2	M10*40 Bolt Plate		

### PROCEDURE


1. Begin installation by working on driver side of the vehicle (refer to Figures 1. 1- 1.5)
2. From underneath truck, loosen and remove body mount bolts that run upward through mounts into floorboard. Attach and secure Front Mount Bracket to underside of vehicles front body mount (see Figure 1.3), re-using isolator, but replacing factory bolt with (1) 1/2"\*2" Hex Head bolt, (1) 1/2" LOCK WASHER, and (1) 1/2" FLAT WASHER. Also,
3. Attach and secure Rear Mount Bracket to underside of vehicles rear body mount in same manner as the front.
4. Attach and secure Center Brace brackets. See Figure 1.3 to know where to install the Center Brace Brackets.
5. Attach Front Brace Bracket to side of Front Mount Bracket using (1) M10X40mm bolt, (2) M10 flat washers, and (1) M10 hex nut ,(1) lock washer (see Figure 1.5). Place (1) 3/8" x 1 1/2" bolt with welded strap and (1) M12 flat washer through cut out in frame rail. Line up slot on the long arm of the Brace Bracket with this bolt and secure using (1) M10 flat washer and (1) M10 lock nut,(1) lock washer. Hand tighten.
6. Attach Side Tube to Front and Rear Brackets using(1) 1/2"\*2" Hex Head bolt, (1) 1/2" LOCK WASHER, and (1) 1/2" FLAT WASHER for each bracket, and hand tighten. Torque M12 bolts first to 65 ft-lbs and then tighten all remaining fasteners to complete the driver-side assembly.
7. Repeat process for passenger side of vehicle to complete installation.



## 1500/2500/3500 Front Brace

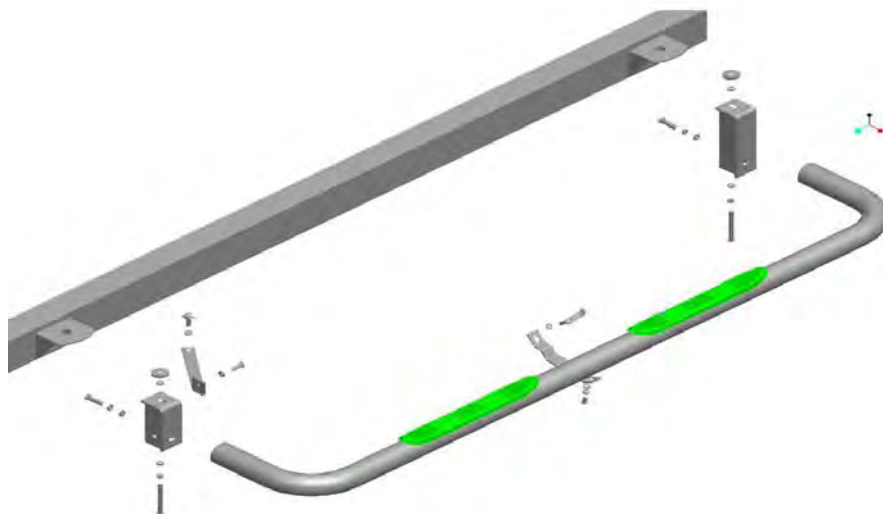

Attach center support bracket as shown in Fig.3-4. Place hooked T-bolt through body with threaded stud through hole. Secure bracket to bolt using M10 nut, lock-washer, and flat washer. Attach side bar to center support bracket with 3/8 bolt, lock washer, and flat washer

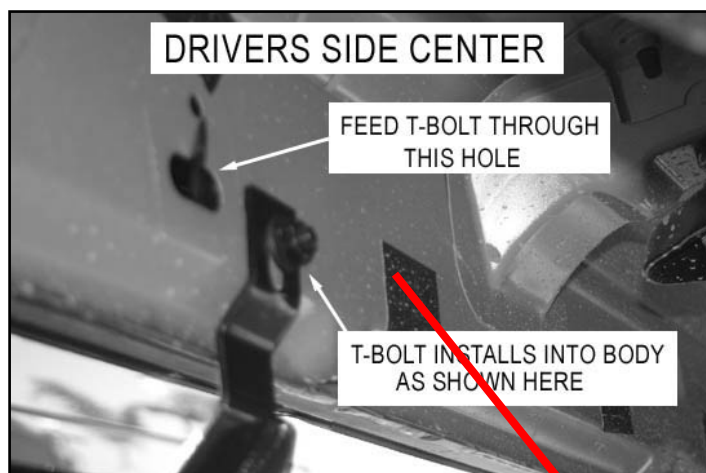

The customer should take off the black sticker on the middle of frame, and then they will see two holes there. Use the T-bolt ( bolt plate ) hook the center hole through the neighbor hole like the left picture above. After that, they can install the center bracket without any problem.  
Figure 1.3 –Driver-Side Front Assembly View (1500/2500/3500 Series set-up shown)

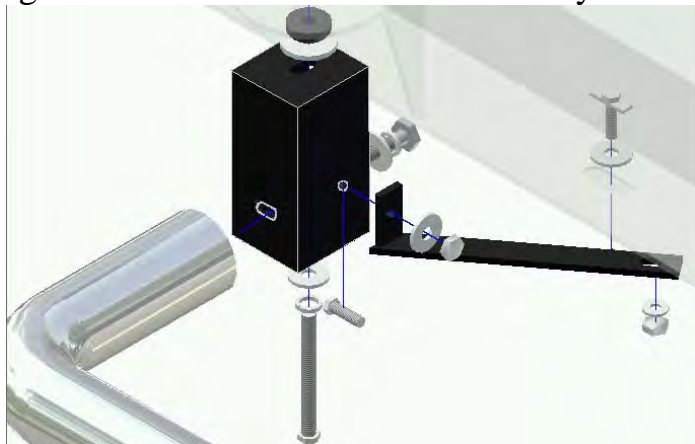


Figure 1.5 – 1500/2500/3500 Front Mount Assembly

