

# Before returning this product to the store of purchase

#### Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com/warranty.php

## Side Bar

#### PART#371271

### 04-05 Dodge Durango

QTY	DESCRIPTION
1	Side Bar, left side
1	Side Bar, right side
1	Hardware kit

**NOTE:** Please read this information before installing. Check components received with components listed above. **MINOR DRILLING REQUIRED** for installation of these Side bars. To obtain correct installation, we recommend you to follow these step by step installation instructions carefully. Please take care when installing this product to protect the finish and your investment.

Step One: Locate hardware kit. Check contents with the hardware listed below.

QTY	DESCRIPTION
2	Front Mounting Bracket
1	Rear Mounting Bracket-left
1	Rear Mounting Bracket-right
4	½" x 2" Hex Bolt-zinc plated
4	½" Lock washer-zinc plated
4	½' Flat washer-zinc plated
4	3" plastic rings

**Step Two:** Remove the front and rear body mount bolts.

**Step Three:** Locate the two short mounting brackets and loosely install them to the front body mount locations with the factory bolts as per Fig. 1


**Step Four**: Orient the rear mounting brackets as per Fig. 2 for the rear body mounts and attach with the factory bolts.

**Step Five**: Place the side bars into position. Using the  $\frac{1}{2}$ ' x 2" bolts, 3" plastic rings, and  $\frac{1}{2}$ " lock and flat washers, loosely attach the side bars to the brackets

Step Six: After checking to make sure the side bars are level and parallel with the sides of the vehicle completely tighten all hardware.

**Step Seven:** Periodically check and retighten the hardware as necessary.

IMPORTANT: Side bars have a 300 lb. weight capacity. To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish.

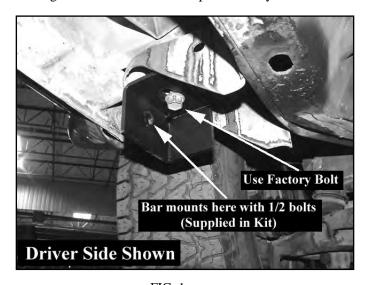

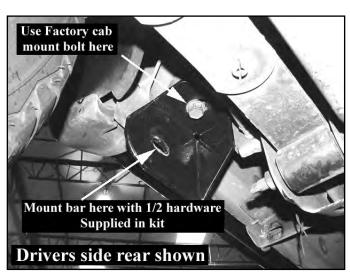


FIG. 1 FIG. 2