



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com/warranty.php

INSTALLATION INSTRUCTIONS


3" ROUND SIDEBAR WITH BEND

1999-2009 CHEVY SILVERADO REGULAR CAB

PART # DZ 370741/DZ 371511/DZ 371512/DZ 371513

PARTS LIST:

1	Driver/Left Sidebar	1	Passenger/Right side rear Mounting Bracket
1	Passenger/Right Sidebar	4	1/2" x 2" Hex Head Bolts
1	Driver/Left side front Mounting Bracket	4	1/2" Lock Washers
1	Passenger/Right side front Mounting Bracket	4	1/2" ID x 1-1/2" OD x 1/8" Flat Washers
1	Driver/Left side rear Mounting Bracket		

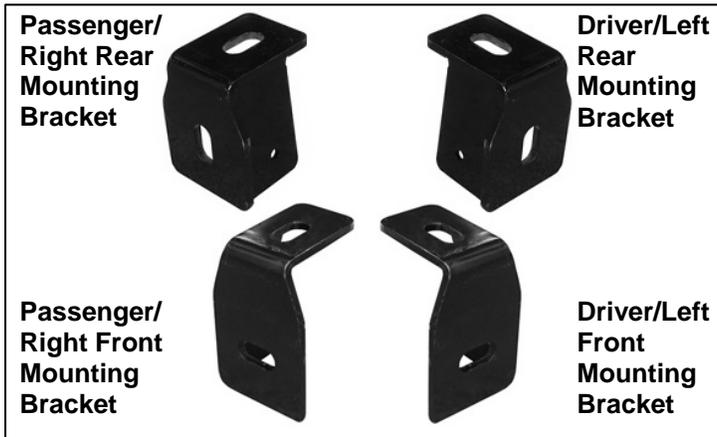

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
- From underside of vehicle, remove the driver side front body mount bolt, steel washer (if equipped), and rubber bushing, **(Figure 1)**.
- Select the driver side front Mounting Bracket. Insert the factory body mount bolt through the Mounting Bracket and into the steel washer, (if equipped), and rubber bushing. Hang the Mounting Bracket in position by partially threading the factory body mount bolt up into place, **(Figure 2)**. Repeat this step for driver rear Mounting Bracket, **(Figure 3)**. Snug but do not tighten hardware at this time.

NOTE: There are several different designs, (depending on model year), for the factory steel body mount bracket. The Sidebar Mounting Brackets can be switched, driver side to passenger side, to provide additional clearance between the gusset on the Mounting Bracket and the factory steel body mount bracket welded to the frame. The front Mounting Brackets however, are not interchangeable with the rear Mounting Brackets. To prevent unnecessary noise, adjust the position of the Mounting Brackets so that the Brackets do not come in contact with the factory steel body mount bracket.




- Carefully position the driver/left Sidebar up to the Mounting Brackets. Attach the Sidebar to the Mounting Brackets with the included (2) 1/2" x 2" Hex Bolts, (2) 1/2" Lock Washers and (2) 1/2" Flat Washers, **(Figure 4)**. Snug but do not tighten hardware at this time.
- Level and adjust the Sidebar, check Mounting Brackets for clearance between factory steel body mount brackets. Once satisfied with fit, tighten all hardware.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.

Driver/Left Sidebar installation pictured

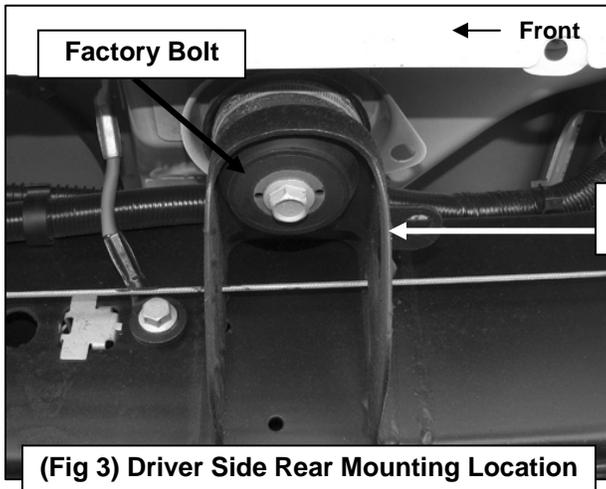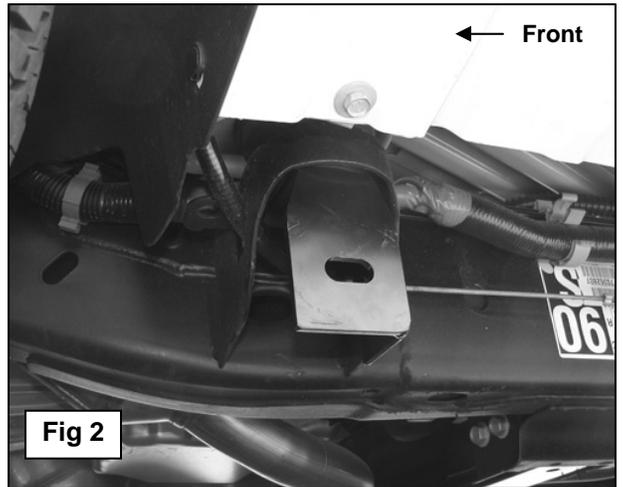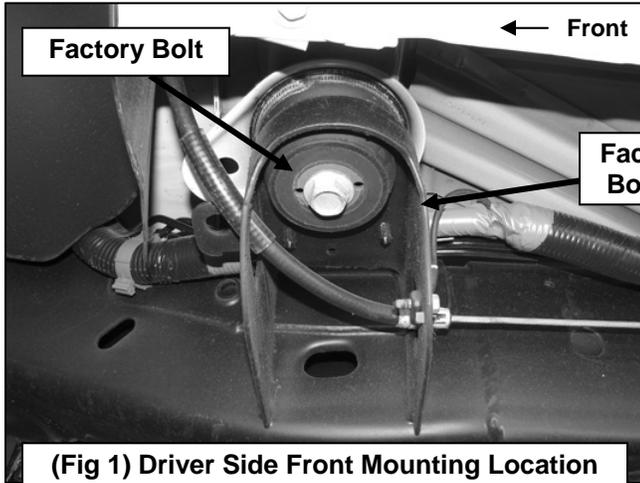

1/2" x 2" Hex Bolt
1/2" Lock Washer
1/2" Flat Washer

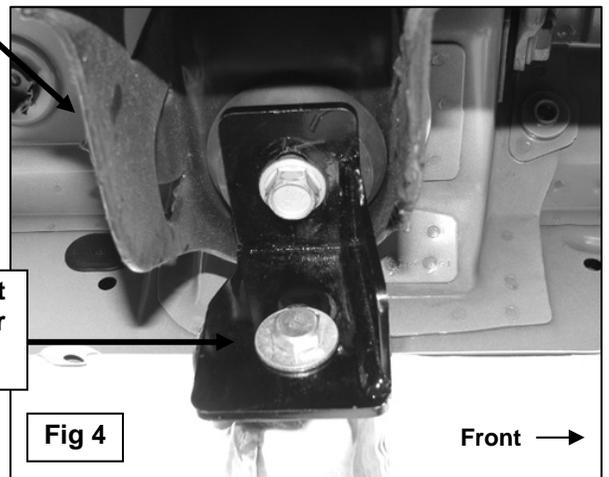

Driver Side rear mounting location
viewed from below the vehicle