



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday


Review complete warranty policy and register your product at:

www.deezee.com/warranty.php

INSTALLATION INSTRUCTIONS
3" SIDEBAR
99-08 CHEVY SILVERADO 1500/2500 EXT CAB
PART # 37152x

PARTS LIST:

1	Driver/Left Sidebar	4	1/2" x 2" Hex Head Bolts
1	Passenger/Right Sidebar	4	1/2" Lock Washers
2	Front Mounting Brackets	4	1/2" ID x 1 3/8" OD x 3/32" Flat Washers
2	Rear Mounting Brackets	4	10-1.50mm x 30mm Hex Head Bolts
1	Driver/Left Support Bracket	4	10mm Hex Nuts
1	Passenger/Right Support Bracket	4	10mm Lock Washers
		8	10mm ID x 20mm OD x 1.5mm Flat Washers
		2	50mm x 25mm Square Washers

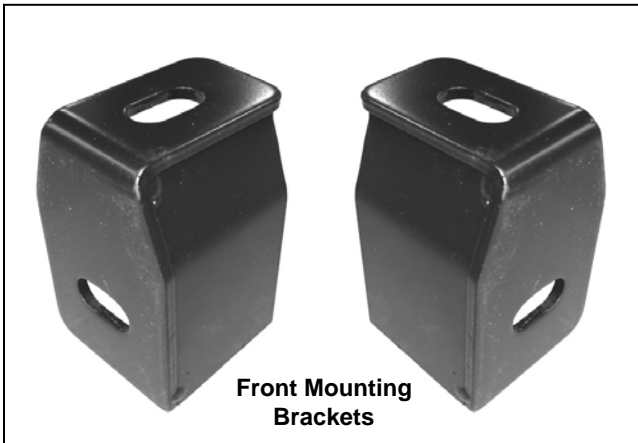

PROCEDURE:


- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
2. From underside of vehicle, remove the driver side body mount bolts. **NOTE:** Do not remove body mount bushings.
3. Partially install driver side front, center, and rear Mounting Brackets to vehicle using the factory body mount bolts removed in step two (**Figure 1 & 2**). **NOTE:** Make sure that the support brace on the Front Mounting Bracket is towards the front of the vehicle.
4. With help position Side Bar onto Mounting Brackets. Attach front and rear Mounting Brackets to Sidebar using the included (2) ½" x 2" Hex Head Bolts, (2) ½" Flat Washers, and (2) ½" Lock Washers (**Figure 1 & 2**). Do not tighten at this time.
5. From the inner side of the rear body mount, place the driver side Support Bracket onto rear wall of the body mount, then place the square washer on the outer side of the body mount wall and loosely attach them to body mount using the included (1) 10mm x 30mm Hex Head Bolt, (1) 10mm Lock Washer, (1) 10mm Hex Nut, (2) 10mm Flat Washer (**Figure 4 & 5**). **NOTE:** The passenger side Support Bracket mounts on the inner side on the front body mount wall.
6. Attach opposite side of Support Bracket to rear Mounting Bracket using the included (1) 10-1.50mm x 25mm Hex Head Bolts, (1) 10mm Hex Nuts, (1) 10mm Lock Washers, and (2) 10mm Flat Washers (**Figure 4 & 5**).
7. Level and adjust Side Bar properly; and then tighten all hardware at this time.
8. Repeat steps 2-7 for passenger Sidebar.
9. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Taillight Guard.


For gloss black finishes: Mild soap may be used to clean the Taillight Guard.

Driver Side Front Mounting Bracket Shown

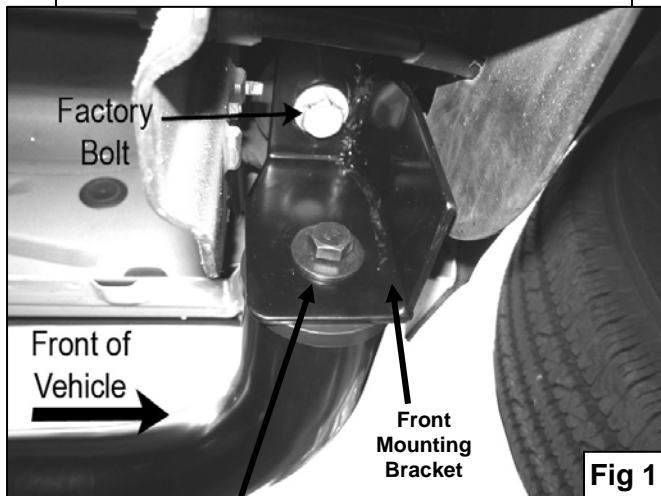


- 1/2" x 2" Hex Head Bolt
- 1/2" Lock Washer
- 1/2" Flat Washer

Driver Side Rear Mounting Bracket

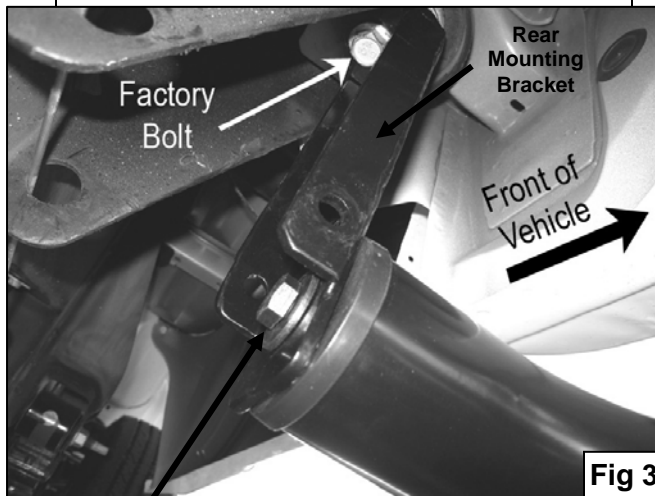

- 1/2" x 2" Hex Head Bolt
- 1/2" Lock Washer
- 1/2" Flat Washer


Driver Side Support Bracket Shown

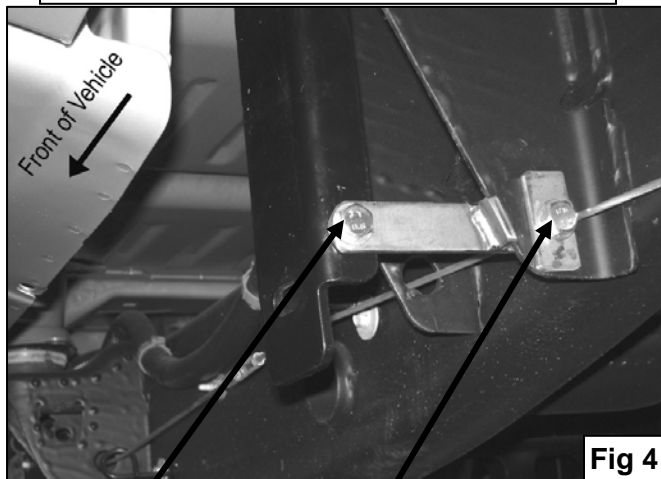

- 10mm x 30mm Hex Bolt
- 10mm Lock Washer
- 10mm Hex Nut
- 10mm Flat Washers

- 10mm x 30mm Hex Bolt
- 10mm Lock Washer
- 10mm Hex Nut
- 10mm Flat Washers
- Square Washer

Passenger Side Support Bracket Shown

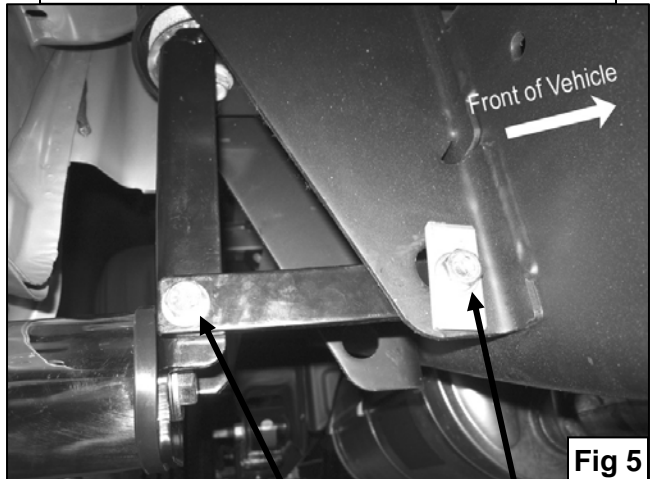

- 10mm x 30mm Hex Bolt
- 10mm Lock Washer
- 10mm Hex Nut
- 10mm Flat Washers
- Square Washer

- 10mm x 30mm Hex Bolt
- 10mm Lock Washer
- 10mm Hex Nut
- 10mm Flat Washers

