


**INSTALLATION INSTRUCTIONS**  
**SIDE BARS - 3" ROUND AND OVAL**  
**07 -10 JEEP WRANGLER 4 DOOR**  
**PART #DZ 371641/DZ 371643**



## Parts List

1	Driver/Left Sidebar	6	10mm ID x 34mm OD x 3mm Flat Washers
1	Passenger/Right Sidebar	2	8mm x 35mm Hex Bolts
1	Driver/Left Front Mounting Bracket	12	8mm x 25mm Hex Bolts
1	Passenger/Right Front Mounting Bracket	14	8mm Lock Washers
1	Driver/Left Center Mounting Bracket	12	8mm x 24mm OD x 2mm Flat Washers
1	Passenger/Right Center Mounting Bracket	2	8mm x 28mm OD x 3mm Large Flat Washers
1	Driver/Left Rear Mounting Bracket	12	6mm x 25mm Button Head Bolts
1	Passenger/Right Rear Mounting Bracket	24	6mm ID x 18mm OD x 1.6mm Flat Washers
6	10mm Nut Plates	12	6mm Nylon Lock Nuts
6	10mm x 35mm Hex Bolts	1	4mm Allen Wrench
6	10mm Lock Washers		

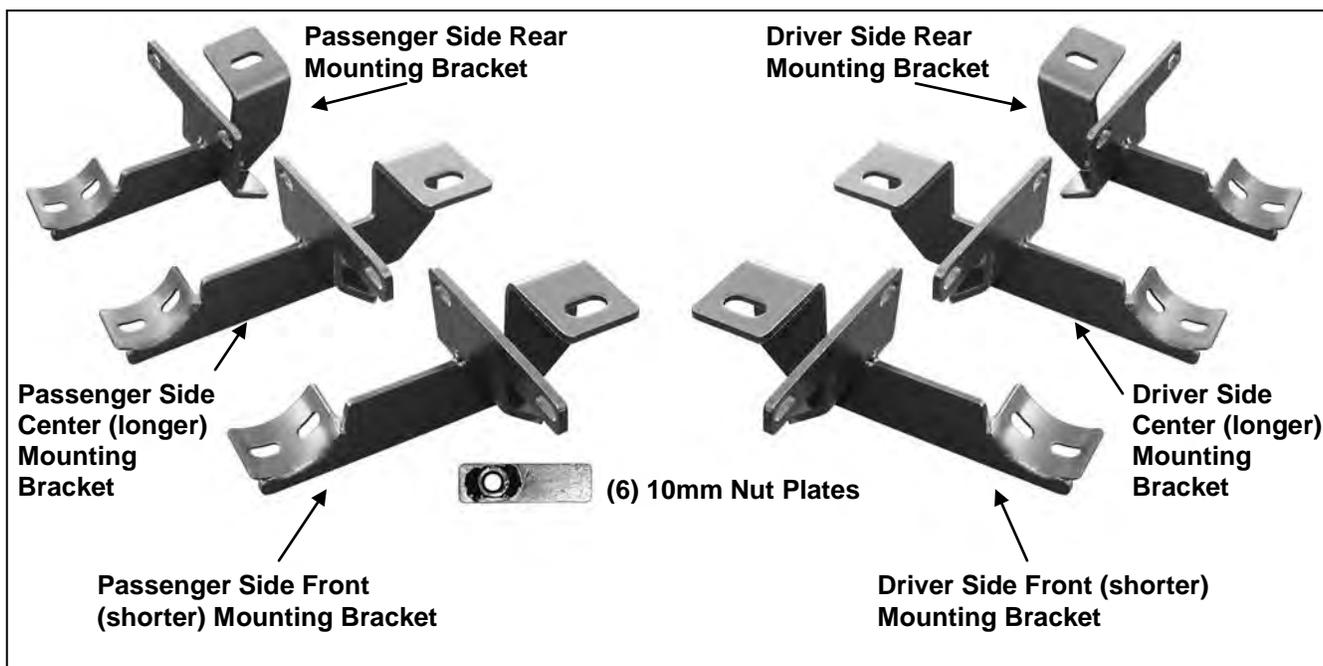

## PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. DO NOT ATTEMPT INSTALLATION ALONE; PERSONAL INJURY OR DAMAGE TO THE VEHICLE MAY RESULT.**
- Starting at the passenger side front, **(Figure 1)**, select the front Mounting Bracket and line up the (2) holes in the mounting tab on the Bracket with the (2) factory holes in the pinch weld. Bolt the Bracket to the back of the pinch weld with the supplied (2) 6mm x 25mm Button Head Bolts, (4) 6mm Flat Washers and (2) 6mm Nylon Lock Nuts, **(Figure 2)**. Do not tighten hardware at this time.
- Insert (1) 10mm Nut Plate up and into the square hole in the frame panel with the welded nut facing up, **(Figure 2)**. Line up the nut on the Nut Plate with the hole in the Bracket. Bolt the Bracket to the Nut Plate with (1) 10mm x 35mm Hex Bolt, (1) 10mm Lock Washer and (1) 10mm Flat Washer, **(Figure 3)**. Repeat Steps 2 - 3 to install the Passenger Side Center Mounting Bracket.
- Moving to the rear mounting location, remove any insulation covering the 8mm threaded hole in the floor panel. Line up the mounting tab on the Bracket with the (2) holes in the pinch weld

and bolt the Bracket in place as described in Steps 2 - 3. Bolt the Bracket to the threaded hole with (1) 8mm x 35mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm x 28mm OD x 3mm Large Fender Washer, **(Figure 4)**.

**IMPORTANT NOTE!** On a few 2010 vehicles, the factory has eliminated the threaded hole required for the rear mounting bracket installation. In those instances, insert (1) 10mm Nut Plate into the factory hole in the floor panel, move the plate so that the nut is centered over the hole and attach the Mounting Bracket as described in Steps 2 - 3, **(Figure 2 & 3)**. Two extra Nut Plates and appropriate hardware have been provided.


5. Once all three Mounting Brackets are securely in position, place the Sidebar onto the Mounting Brackets and secure it with the included (6) 8mm x 25mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm Flat Washers, **(Figure 5)**. Snug all hardware but do not tighten at this time.
6. Adjust and level the Sidebar and tighten all hardware.
7. Repeat Steps 2 - 6 for driver/left Sidebar installation.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.


**For gloss black finishes:** Mild soap may be used to clean Sidebar.

***Passenger Side Installation Pictured***

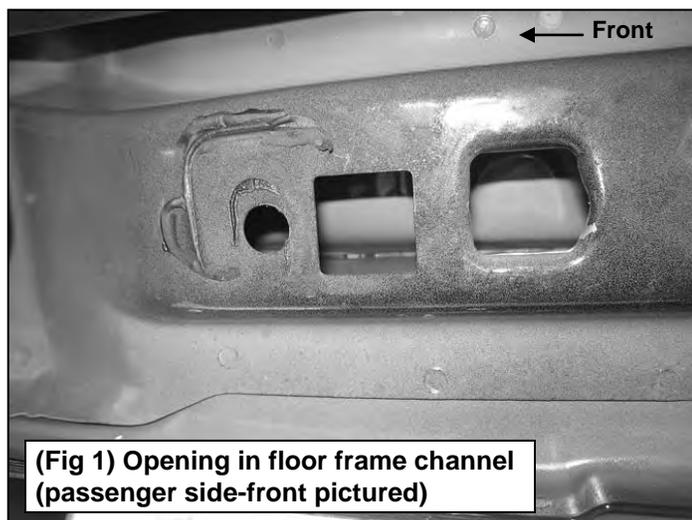


- (2) 6mm x 25mm Button Head Bolts
- (4) 6mm Flat Washers
- (2) 6mm Nylon Lock Nuts

Insert 10mm Nut Plate into opening and line up nut with mounting hole on Bracket


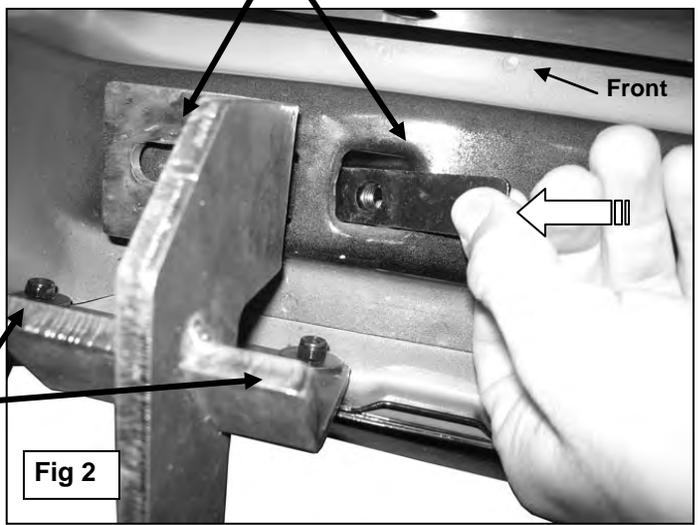


### Passenger Side Installation Pictured

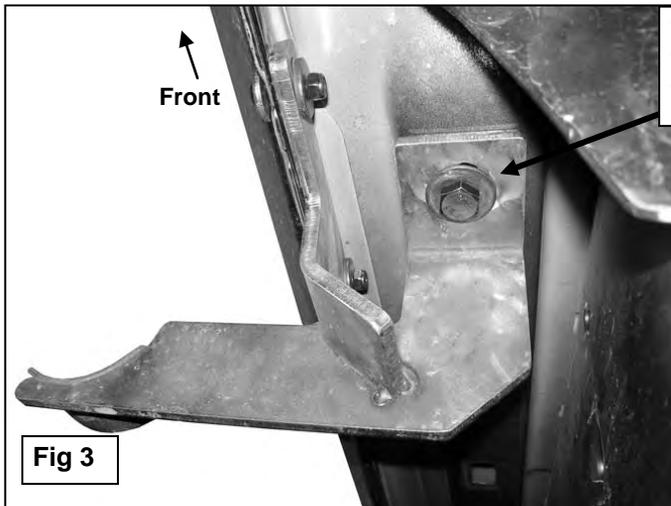

8mm x 25mm Hex Bolt  
8mm Lock Washer  
8mm x 28mm OD x 3mm Large Flat Washer

Insert hardware into factory threaded hole (if equipped) or see Step 4 for more information regarding Rear Mounting Bracket installation

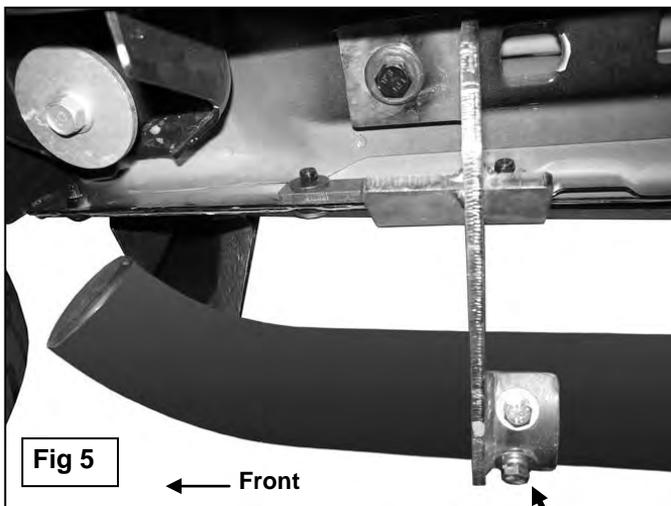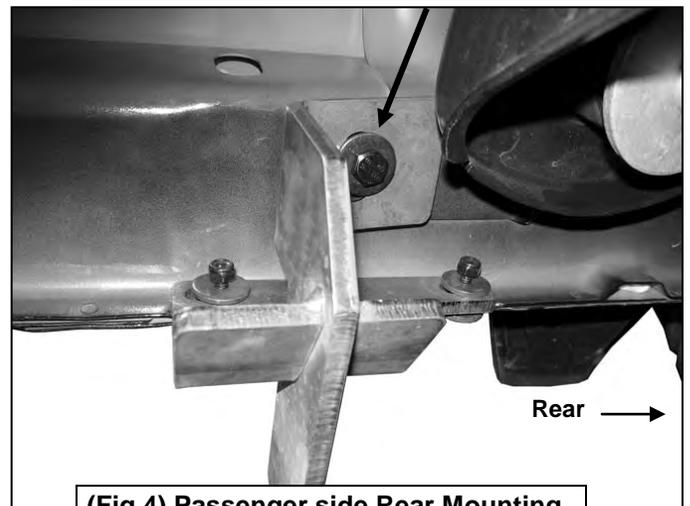

(2) 8mm x 25mm Hex Bolts  
(2) 8mm Lock Washers  
(2) 8mm Flat Washers

