



**Before returning this product  
to the store of purchase**

**Contact Dee Zee if you experience the following problems:**

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

**1.800.779.2102**

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

**[www.deezee.com/warranty.php](http://www.deezee.com/warranty.php)**


# INSTALLATION INSTRUCTIONS

SIDE BAR PART #DZ 371841/371843

05-08 TOYOTA TACOMA DOUBLE CAB/EXT. CAB


## PARTS LIST:

1	Driver/Left Sidebar
1	Passenger/Right Sidebar
1	Driver/Left Front Mounting Bracket (C)
1	Passenger/Right Front Mounting Bracket (D)
1	Driver/Left Middle Mounting Bracket (B) Only for Double Cab
1	Passenger/Right Middle Bracket (E) Only for Double Cab
1	Driver/Left Rear Mounting Bracket (A)
1	Passenger/Right Rear Mounting Bracket (F)
24	8-1.25mm x 30mm Hex Head Bolts (only 16pcs bolts required for Ext. Cab)
24	8mm Lock Washers (only 16pcs required lock washers for Ext. Cab)
24	8mm ID x 22mm OD x 3mm Flat Washers (only 16pcs flat washers required for Ext. Cab)

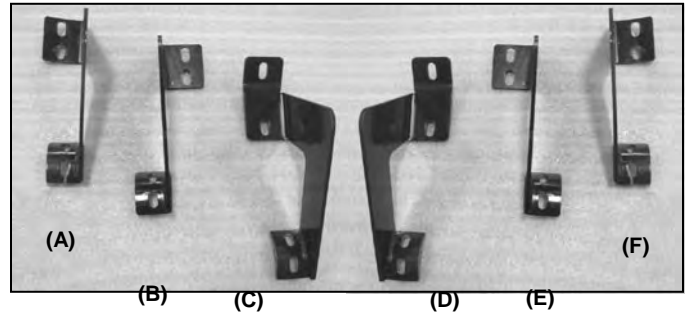

## PROCEDURE:

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. DO NOT ATTEMPT INSTALLATION ALONE; PERSONAL INJURY OR DAMAGE TO THE TRUCK MAY RESULT.
2. From underside of vehicle, remove plastic plugs from passenger/right side panel.
3. Partially hang front passenger/right side Mounting Bracket with the included (2) 8mm x 30mm Hex Head Bolts, (2) 8mm Lock Washers, and (2) 8mm Flat Washers (Figure 1). Repeat this step for passenger/right middle and rear Mounting Brackets (Figure 2 & 3).
4. Locate the Passenger Side Bar and carefully place it on the previously installed Mounting Brackets. **NOTE:** To determine passenger and driver side bar, measure the distance from the bend to the step on both sides of the side bar. The step farther away from the bend mounts to the front of the vehicle. **WARNING!** Do not slide Side Bar back and forth on the Mounting Brackets; this may damage the finish on the Side Bar.
5. Align holes on the Side Bar with holes on the Mounting Brackets. Attach Side Bar to Mounting Brackets with the included (6) 8-1.25mm x 30mm Hex Head Bolt, (6) 8mm Flat Washers, and (6) 8mm Lock Washers (Figure 4). Do not tighten at this time.
6. Level and adjust Side Bar; then tighten all hardware at this time.
7. Repeat Steps 2-6 for Driver Side Bar.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

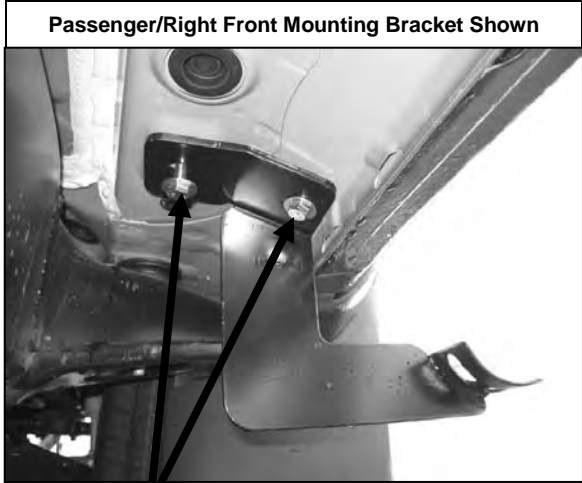


8mm x 30mm Hex Bolts,  
8mm Lock Washers, &  
8mm Flat Washers

Figure 1



8mm x 30mm Hex Bolts,  
8mm Lock Washers, &  
8mm Flat Washers

Figure 2

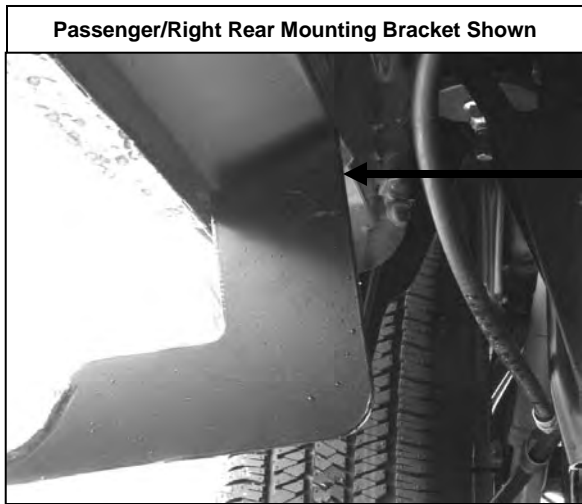

8mm x 30mm Hex Bolts,  
8mm Lock Washers, &  
8mm Flat Washers

Figure 3



8mm x 30mm Hex Bolts,  
8mm Lock Washers, &  
8mm Flat Washers

Figure 4



Figure 5