



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com/warranty.php

INSTALLATION INSTRUCTION

SIDE BAR PART#371951/371952/371953

06-07 HONDA RIDGELINE


PARTS LIST

(1) PASSENGER SIDE BAR	(12) M8X25mm HEX BOLTS
(1) DRIVER SIDE BAR	(12) M8X30mm HEX BOLTS
(1) PASSENGER SIDE FRONT BRACKET	(24) M8 FLAT WASHERS
(1) PASSENGER MIDDLE BRACKET	(24) M8 LOCK WASHERS
(1) DRIVER SIDE REAR BRACKET	(1) DRIVER SIDE MIDDLE BRACKET
(1) PASSENGER REAR BRACKET	(1) DRIVER SIDE FRONT BRACKET

PROCEDURE

- 1、 Begin installation by working on driver side of the vehicle(refer to Figure 1)
- 2、 Locate existing holes under vehicle. These will have plastic tabs in place, so remove to get to existing holes needed .Install Mount Brackets with M8X25 MM hex bolt and hardware .Leave semi loose for adjustment.
- 3、 Fasten side tube to mount brackets using M8x25MM hex bolts and hardware. Hand tighten side tube to all three brackets
- 4、 Tighten down body mount bolts.
- 5、 Repeat Process for passenger side of vehicle to complete installation

Figure 1

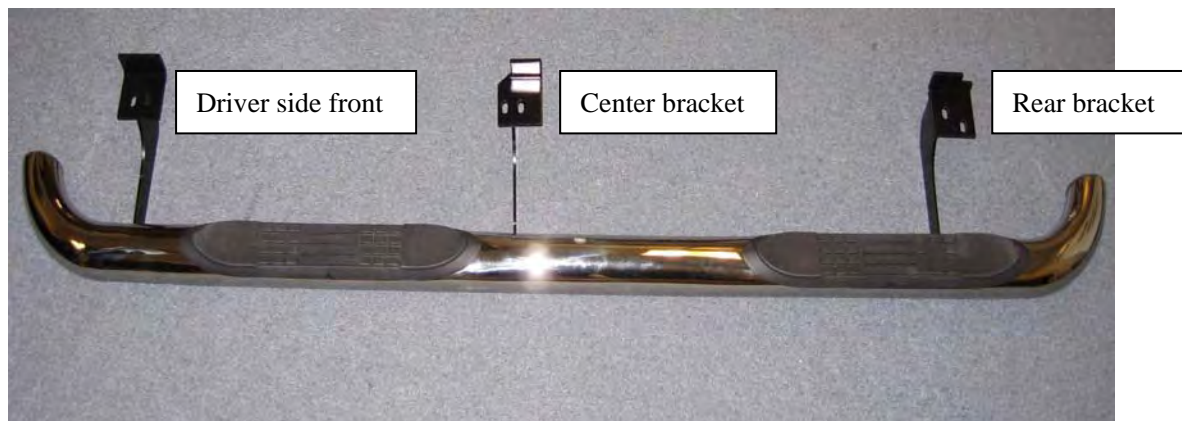

FINISH PROTECTION-OUR PRODUCT HAVE A HIGH FINISH THAT MUST BE MAINTAINED SUCH AS ANY OTHER HIGH FINISH PRODUCT ON THE VEHICLE. PROTECT THE FINISH WITH A NON-ABRASIVE AUTOMOTIVE WAX. THE USE OF SOAP, POLISH, OR WAX THAT CONTAINS ABRASIVES IS DETRIMENTAL, AS THE COMPOUNDS SCRATCH THE FINISH AND OPEN IT TO CORROSION.

DISCLAIMER- BUYER ASSUMES ALL RISK AND LIABILITY WHATSOEVER FROM THE INSTALLATION AND USE OF OUR PRODUCT. OUR PRODUCT ARE SOLD AS DECORATIVE ACCESSORIES AND SHOULD NOT BE RELIED UPON AS PROTECTION FOR THE VEHICLE OR OCCUPANTS IN THE EVENT OF A COLLISION OR ROLL OVER. ASSUMES NO LIABILITY FOR

INJURY, LOSS, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN THE EVENT OF A COLLISION OR ROLLOVER.