



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com/warranty.php


INSTALLATION INSTRUCTIONS

SIDE BAR

07 TOYOTA TUNDRA REG CAB
PART NUMBER DZ 372811 / DZ 372813

PARTS LIST:

1	Driver/Left Sidebar	8	8-1.25mm x 30mm Hex Head Bolts
1	Passenger/Right Sidebar	8	8mm Lock Washers
1	Driver/Left Front Mounting Bracket	8	8mm ID x 22mm OD x 3mm Flat Washers
1	Passenger/Right Front Mounting Bracket		
1	Driver/Left Rear Mounting Bracket		
1	Passenger/Right Rear Mounting Bracket		

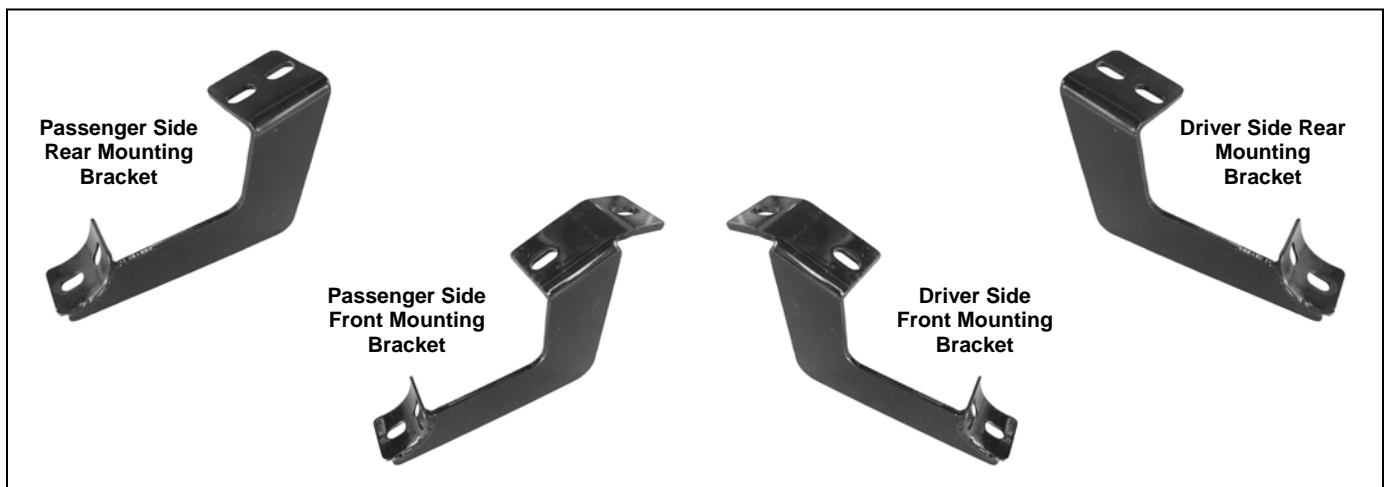

PROCEDURE:


1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY.
2. Determine the mounting location underneath the vehicle's body. Remove the existing bolts from the front side panel and rear side panel. **NOTE:** There is only one Bolt by the front flare, two by the center of the cabin and two by the rear flare. You would need to remove one bolt from the center location to use on the front mounting location.
3. Partially hang front passenger/right Mounting Bracket with factory bolts removed in step two (Figure 1). Repeat this step for passenger rear Mounting Bracket (Figure 2). **NOTE:** Refer to Figure above for bracket configuration.
4. Locate the Passenger Side Bar and carefully place it on the previously installed Mounting Brackets. **WARNING!** Do not slide Side Bar back and forth on the Mounting Brackets; this may damage the finish on the Side Bar.
5. Align the holes on the Side Bar with the holes on the Mounting Brackets. Attach Side Bar to Mounting Brackets with the included (4) 8-1.25mm x 30mm Hex Head Bolt, (4) 8mm Flat Washers, and (4) 8mm Lock Washers (Figure 3). Do not tighten at this time.
6. Level and adjust Side Bar; then tighten all hardware at this time.
7. Repeat Steps 2-6 for Driver Side Bar.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean the Sidebar.


Front Driver Side Shown

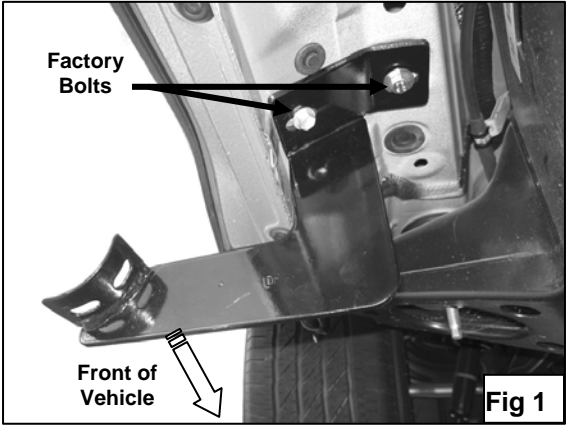

Rear Driver Side Shown

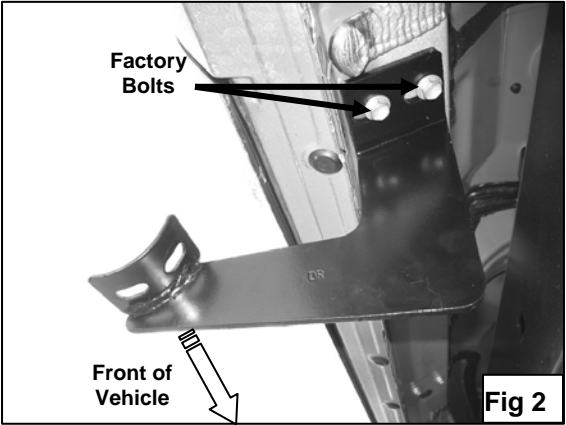

8mm x 25mm Hex Bolts
 8mm Lock Washers
 8mm Flat Washers

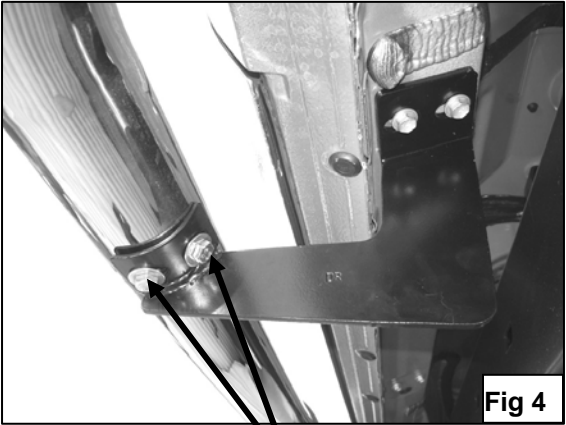

8mm x 25mm Hex Bolts
 8mm Lock Washers
 8mm Flat Washers

