



**Before returning this product  
to the store of purchase**

**Contact Dee Zee if you experience the following problems:**

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

**1.800.779.2102**

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

**[www.deezee.com/warranty.php](http://www.deezee.com/warranty.php)**

# INSTALLATION INSTRUCTIONS

## GRILLE GUARD PART# DZ500274/500275

### 97-04 Dodge Dakota/98-03 Dodge Durango

**Step One:** Locate the hardware kit and check the contents of with the hardware listed below.

QTY	DESCRIPTION
2	M10 x 1" hex bolts, zinc plated
2	M10 hex nuts, zinc plated
2	M10 lock washers, zinc plated
4	M10 oversized flat washers, zinc plated
4	M12 x40mm hex bolts, zinc plated
4	M12 lock nuts, zinc plated
8	M12 flat washer, zinc plated
1	lower mounting bracket, left side
1	lower mounting bracket, right side
2	upper mounting brackets

**Step Two:** Locate the two factory bolts that hold the main bumper bracket in place on each side of the vehicle. Remove the nuts on them one side at a time. Orient the brackets as per Fig.#1 and loosely reinstall the nuts.

**Step Three:** Open the hood and remove the two innermost upper bumper bolts. Orient the upper support brackets as per Fig.#2. Loosely reinstall the factory bumper bolts.

**Step Four:** Place the front guard up to the vehicle with the lower mounting brackets going to the outside of the side plates.

**Step Five:** Make final adjustments to the alignment of the guard and tighten all the bolts at this time. (NOTE: Make sure the guard does not interfere with the opening and closing of the hood.)

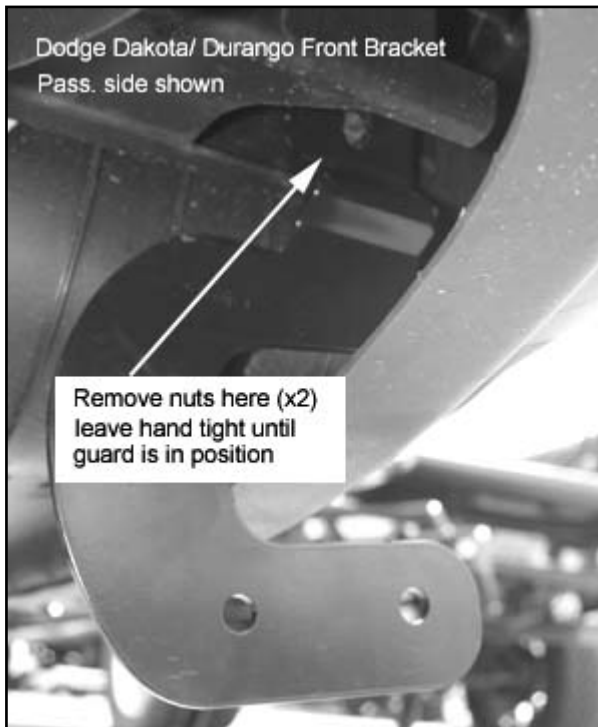


FIG. 1

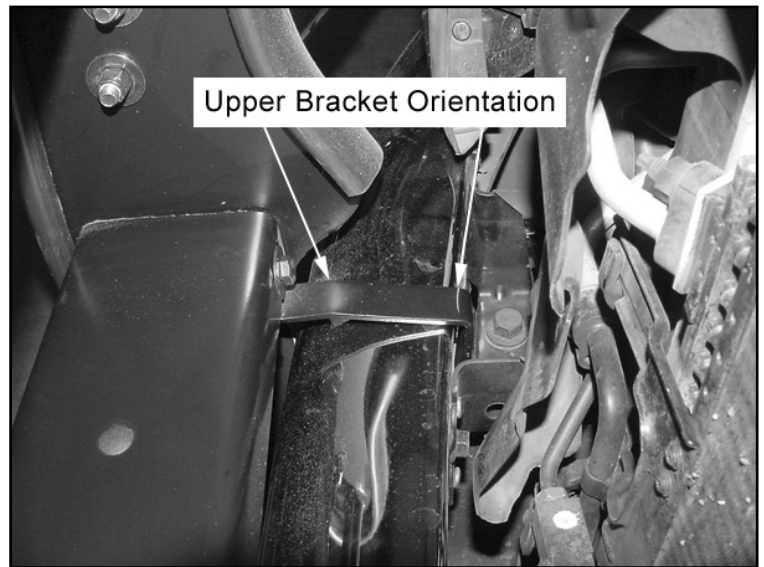


FIG. 2

