



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:

www.deezee.com/warranty.php

Installation Instructions

One-piece Front Guard PART#DZ 501394/501395

05-06 Ford Super Duty

QTY	DESCRIPTION
1	One-piece front guard
1	Mounting Bracket, left side
1	Mounting Bracket, right side
6	M12-1.75x 50mm hex bolts, zinc plated GR5
12	M12 flat washers, zinc plated USS
6	M12 hex lock nuts, zinc plated

NOTE: Please read this information before assembling. Check components received with components listed above. **NO DRILLING IS REQUIRED.** Complete step by step instruction sheets will be found on the following pages.

Illustrations are for reference only, styles vary with application. Please proceed to next page of the instruction sheet.

IMPORTANT: To obtain correct installation, we recommend you to follow these step by step instructions carefully.

Please take care when assembling and installing this product to protect the finish and your investment. To protect your investment, wax this product after installing. Regular waxing is recommended. Do not use any type of polish or wax that contains abrasive that could damage the finish.

Step One: Locate the mounting brackets and orient them as per the illustration. Remove the two bumper bracket bolts that are shown in fig #1. Position the left mounting bracket into place and secure the bracket to the frame as shown in fig #1 using the factory bolts. Do not fully tighten hardware at this time. Repeat this procedure on the right side.

Step Two: Position the front guard between the mounting brackets and loosely attach with the M12 hardware.

Step Three: After making sure the guard is level and square to the vehicle, completely tighten all hardware at this time.

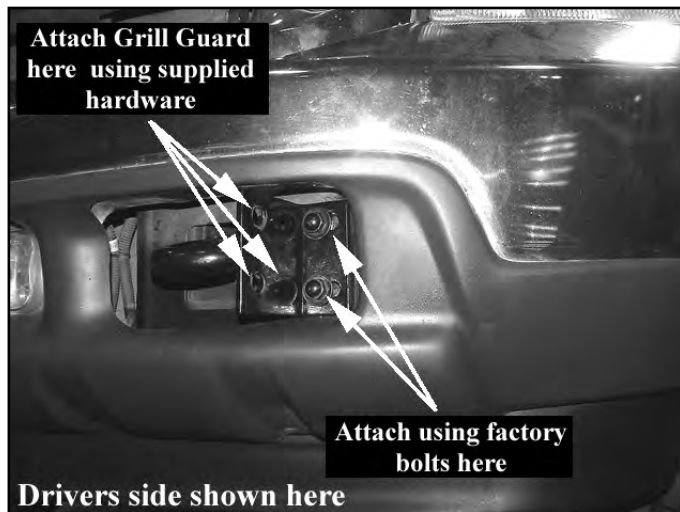


FIG. 1