



**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102

Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:


www.deezee.com

Dee Zee Full Front Box Protector

Installation Instructions for Screw type mount

A

**Full Front
Box Protector**

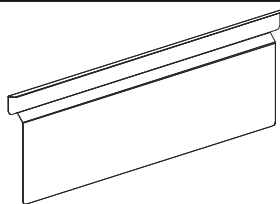


**Note: Picture may vary
from actual product.**

X1

B

#8 Phillips Head Screws

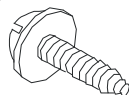

QTY: 4



or

QTY: 8

Tools Required:

Outils Nécessaires:

Phillips Screwdriver

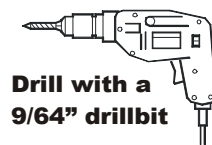



**Drill with a
9/64" drillbit**

1a

Place the full front box protector up to the front of your vehicle box as shown below.

Placez le plein protecteur avant de cadre jusqu' à l'avant de votre cadre de véhicule comme montré ci-dessous.

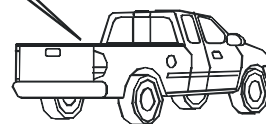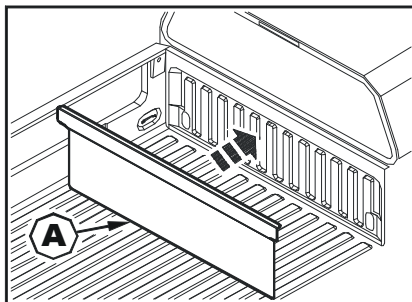



1b

Drill either two or four evenly spaced 9/64" holes through the top and bottom of the full front box protector (A) as shown below.

Forez deux ou quatre 9/64" également espacés ; trous par le dessus et le bas du plein protecteur avant de cadre (a) comme montré ci-dessous.



**Drill with a
9/64" drillbit**

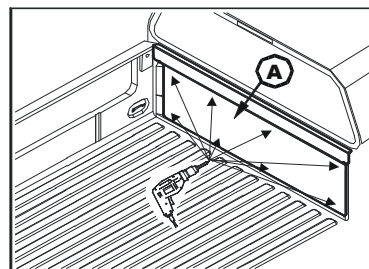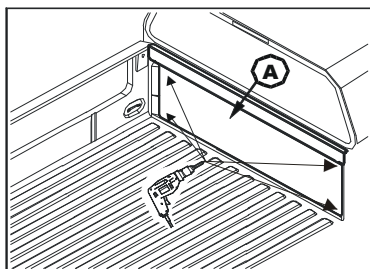



1c

Secure the full front box protector (A) into place by using the provided #8 x 1/2" phillips head screws (B).

Fixez le plein protecteur avant de cadre (a) dans l'endroit en utilisant le #8 fourni X 1/2 " les vis Phillips de tête (b).




**Phillips
Screwdriver**

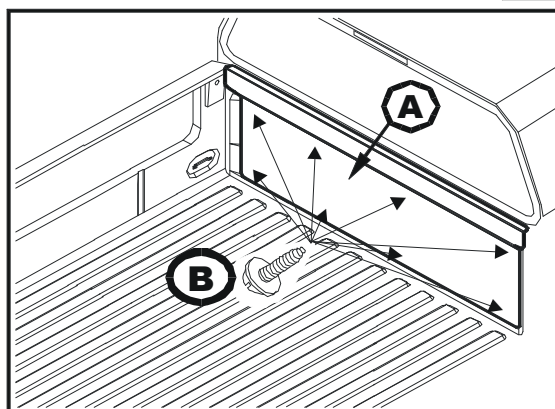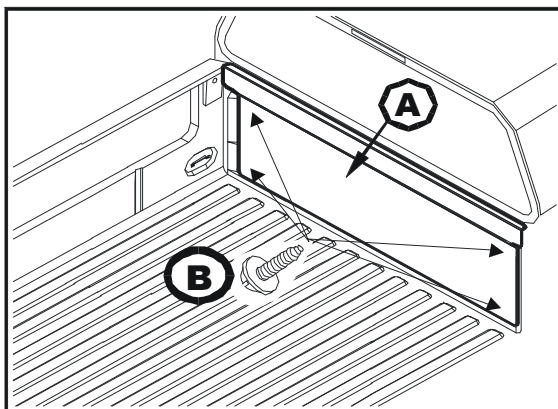

Dee Zee Full Front Box Protector

Installation Instructions for Tape type mount


A
Full Front
Box Protector

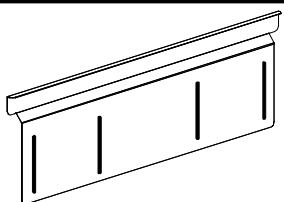

Note: Picture may vary
from actual product.

X1

B
Alcohol
Pads

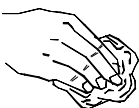


X2

1a

Peel the backing off of the tape on the full front box protector (A).

APPLICATION TEMPERATURE: Ideal tape application temperature range is 70 degrees Fahrenheit to 100 degrees Fahrenheit (21 degrees Celsius to 38 degrees Celsius).

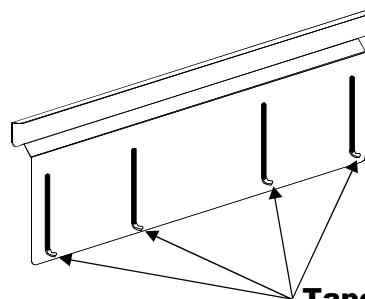

**Tape Locations
(Peel Backing)**


1b

Clean the front of the truck box and then place the full front box protector (A) up to the front of the truck box and press into place.

SURFACE PREPARATION: Tapes will stick to most clean, and well - unified surfaces. Typical surface cleaning solvents are a 50/50 isopropyl alcohol (rubbing alcohol) / water mixture. Follow solvent manufacture's precautionary warnings and suggested handling procedures when using solvents.

RUB DOWN PRESSURE: Bond strength is dependent upon the amount of adhesive-to-surface contact developed. Firm application pressure develops a better adhesive contact and thus improves the bond strength.

DWELL TIME: After application, the bond strength increases and approaches the ultimate bond strength 72 hours at 70 degrees Fahrenheit (21 degrees Celsius).

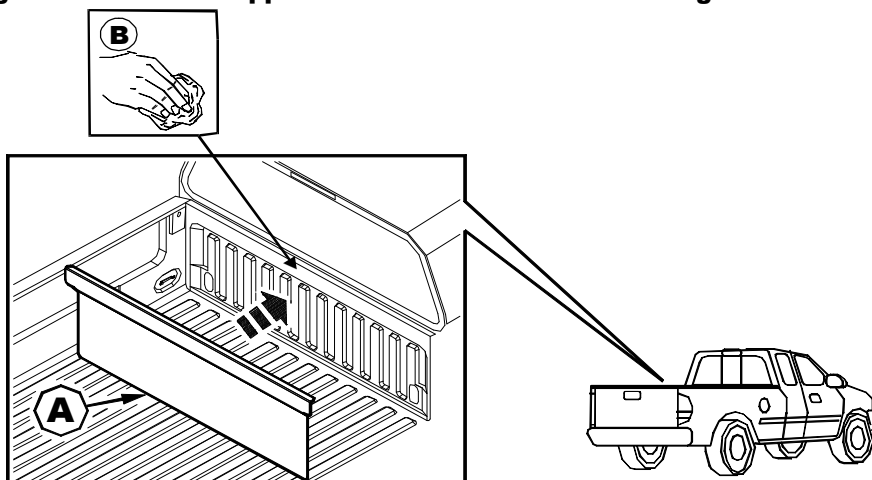

Cleaning instructions: Clean all Dee Zee aluminum accessories with a mild detergent. Dee Zee stainless steel accessories should have an application of high quality automotive wax applied to them to maintain a longer shine.

If you should incur any problems with the installation of this product, please feel free to call us at 1-800-779-8222. So that we may better serve you when you call, please have the W/O#, SEQUENCE#, and the DATE from the labels on the outside of the box.