

If you have any comments or concerns,
 please feel free to contact our
 customer service department at:
 Toll-free: 1-800-835-0438
 OR
 Email: info@gofia.com

SEAT COVERS
 BY



FEATURING

SUPER-GRIP®

THE SLIP RESISTANT FASTENING SYSTEM

INSTALLATION INSTRUCTIONS
 FOR

TR42-17, Oe32-17, SP82-17, SL62-17

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

INSTRUCTIONS:

A) CUSHION COVERS:

- | | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> 1. Center cover on seat 2. Lift cushion halfway up 3. Insert straps through crevice and buckle | <ol style="list-style-type: none"> 4. Attach velcro to carpet on underside of cushion 5. Adjust all straps, buckles and velcro to equalize tension |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

B) BACKREST COVER – 40 PORTION:

- | | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> 1. Remove headrests (see NOTES) 2. Slip cover over backrest. 3. Place latch through opening provided | <ol style="list-style-type: none"> 4. Smooth cover tightly from top to bottom 5. Insert flaps through crevice and attach to velcro at back 6. Re-install headrest (see NOTES) |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

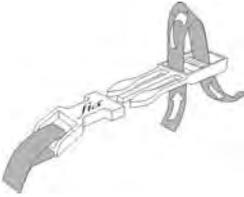
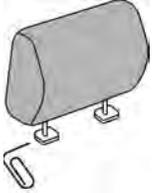
C) BACKREST COVER – 60 PORTION:

- | | |
|--------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"> 1. Repeat steps 1 – 4 2. Secure velcro on the inside edge of armrest well | <ol style="list-style-type: none"> 3. Insert flaps through crevice and attach velcro at back 4. Re-install headrest (see NOTES) |
|--------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|

D) ARMREST COVER:

- | | |
|------------------------------------------------------------------------------|--------------------------------------------------------------------|
| <ol style="list-style-type: none"> 1. Slip cover over armrest | <ol style="list-style-type: none"> 2. Attach velcro |
|------------------------------------------------------------------------------|--------------------------------------------------------------------|

NOTES:

<p>1) SELF-LOCKING SUPER-GRIP® BUCKLE:</p> 	<p>2) HEAD REST REMOVAL:</p> <p>A) - Insert paper clip into holes at base to release - Lift off</p> <p style="text-align: center;">OR</p> <p>B) - Push in side release buttons - Lift off (If unable to remove consult dealership)</p> 
<p>3) RE-INSTALLATION OF HEADRESTS:</p> <ul style="list-style-type: none"> - Locate headrest base and put a small hole in the fabric to accommodate each of the posts - Replace headrests 	

WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438
 Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com