

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**

THE SLIP RESISTANT FASTENING SYSTEM INSTALLATION INSTRUCTIONS  
FOR

TR49-18, Oe39-18, SL69-18, SP89-18

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST**

- 1) Remove head rest (see note)
- 2) Slip armrest through the opening in cover
- 3) Slip cover over backrest and pull down firmly
- 4) Recline backrest to most flat position
- 5) Attach bottom seat cover to carpeting on backrest
- 6) Place backrest in up position
- 7) Pull side velcro behind the seat and fasten to bottom seat cover
- 8) Tuck in back cover material between the molded plastic and backrest
- 9) Adjust velcro for a uniform fit
- 10) Replace headrests (see note)

**B) CUSHION**

- 1) Move seat to most forward position
- 2) Center cover on the seat
- 3) Pass the front strap under seat and buckle to back flap
- 4) Pass side straps through crevice between the molded plastic and the seat
- 5) Buckle straps to back flap
- 6) Adjust straps and buckles to equalize tension

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**



**3) RE-INSTALLATION OF HEADRESTS**

- Locate headrest base and put a small slit in the stretch fabric to accommodate each of the posts
- Stretch fabric will not run
- Replace headrests


**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release  
- Lift off

**OR**

- B) - Push in side release buttons  
- Lift off

(If unable to remove consult dealership)

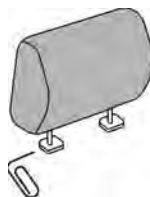

**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**

