




Installation diagram for: **SYSTEM #17269**

1996-1999 HONDA CIVIC

2 & 4 DOOR MODELS • EXCEPT 1999 CIVIC SI



	PACKING LIST	
<u>Qty</u>	<u>Description</u>	Part #
1 1	Muffler Assembly Stainless Tip	952062-135 ST339

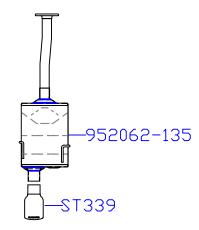

08/11/09

Removal:

- Raise the vehicle up on a hoist or rack to working height. If you do not have access to a hoist or rack raise the vehicle and support securely with jack stands.
- 2) Support the muffler with a jack stand or muffler stand and separate the muffler hangers from the rubber mounts on the vehicle. A lubricant such as WD-40 or lithium grease may ease removal.
- Use a 12mm wrench to remove the two bolts at the flange connection in front of the muffler. Carefully lower the stand and remove the muffler assembly from under the vehicle and set aside.

Installation:

- Before installing anything, prep the clamps supplied in the hardware kit by removing the nuts, and applying a thick lubricant such as white grease or anti-seize to the threads.
- Slide the inlet pipe of muffler assembly #952062-135 over the rear axle and into the 2) same location as the stock muffler. Tilt the muffler enough to allow the hangers to slide into the rubber mounts on the vehicle.
- After the hangers are in the mounts, slide the muffler forward to connect the two flanges together and reinstall the two bolts. Tighten securely.
- Place stainless tip **ST339** onto the muffler outlet and adjust to the desired position. Tighten the clamp securely.
- If you live in a geographical area that has harsh winters or sees a great deal of precipitation, the use of high temperature paint over the welded areas can help to prevent surface rust and premature corrosion.