


# Hellwig PRODUCTS.com

559-734-7451 800-367-5480 FAX 559-734-7460

## INSTALLATION INSTRUCTIONS REAR STABILIZER BAR "99-04" PT CRUISER

Thank you for purchasing a quality Hellwig Product.

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

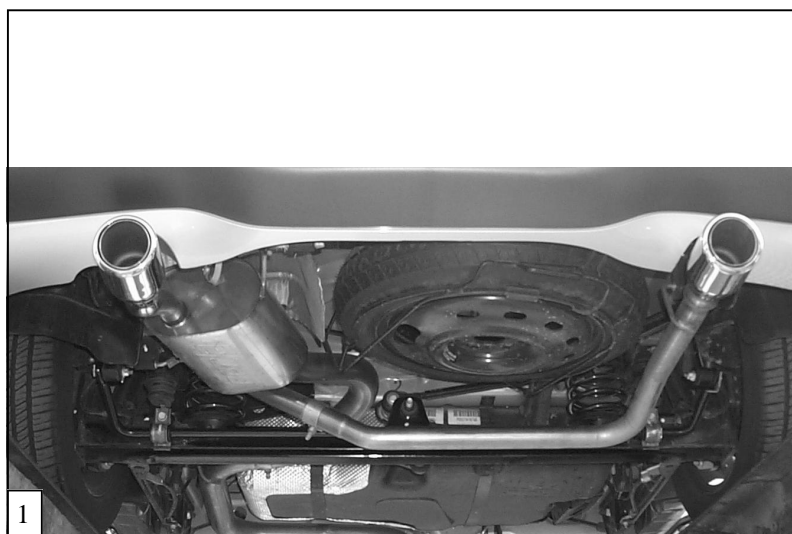

### TORQUE TABLE

**BOLT SIZE:** 3/8" = 20-30 ft. lbs. - 7/16" = 35-45 ft. lbs. - 1/2" = 50-70 ft. lbs. - 9/16" = 70-90 ft. lbs.

**SAFETY:** BEFORE STARTING YOUR INSTALLATION, BE SURE TO SET PARKING BRAKE AND CHOCK TIRES.

**NOTE:** TO EASE INSTALLATION AND TO PROPERLY ADJUST THE BAR, THE WEIGHT OF THE VEHICLE MUST BE ON THE SUSPENSION, AS IF DRIVING DOWN THE ROAD. DO NOT RAISE VEHICLE BY THE FRAME.

**NOTE:** THIS SWAY BAR IS DESIGNED TO REPLACE THE FACTORY INSTALLED REAR SWAY BAR USING THE FACTORY MOUNTING HARWARE.

1. Locate and rear factory installed anti sway bar. Do not discard the factory end links, D-bushing U-plates and the mounting bolts as they will needed to install the new rear sway bar. SEE PHOTO ONE ( 1 ).
2. Install the D-shaped poly bushings on the new sway bar in as the same location as the factory sway bar.
3. Position the rear sway bar onto the rear mounting brackets and install the U-plates on the D-bushings using the factory bolts that were removed in step one ( 1 ). SEE PHOTO ( 2 & 3 ). **Leave loose at this time.**
4. Raise the sway bar arms to the factory end links and install with the factory mounting bolts. SEE PHOTO ( 2 ).
5. Align the sway bar to be centered and properly fastened to the end links. Torque all mounting hardware to the factory specifications.
6. After one week of driving recheck your installation. Recheck on a monthly regular basis thereafter.

**ATTENTION INSTALLER:** BE SURE THAT THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL IMORTANT NOTE CARDS AND THE WARRANTY FORM

# **Hellwig** **PRODUCTS.com**

559-734-7451 800-367-5480 FAX 559-734-7460

## **PARTS LIST**

**RSB KIT # 7657**

**“99-04” PT CRUISER**

<b>PART #</b>	<b>QTY</b>	<b>DESCRIPTION</b>
<b>21207657</b>	<b>1</b>	<b>( 3/4" ) SWAY BAR</b>
<b>111000651</b>	<b>2</b>	<b>( 3/4" ) POLY BUSHING</b>
<b>135000657</b>	<b>1</b>	<b>INSTRUCTION SHEET R-7657 ( R-657 )</b>