


1. Determine a suitable mounting point on the tow vehicle.
2. Locate a grounding point and clean dirt and rustproofing from the area. Ground the white wire.
3. Connect remaining wires. See diagram enclosed.

NOTE: Locate wires on vehicle by function only. Color coding is not standard among all manufacturers.


TIPS:

- Grease applied to the trailer wiring terminals on a regular basis will help prevent corrosion.
- A heavy duty flasher may be required to eliminate rapid flashing.
- Always unplug boat trailer connector before backing trailer into the water.

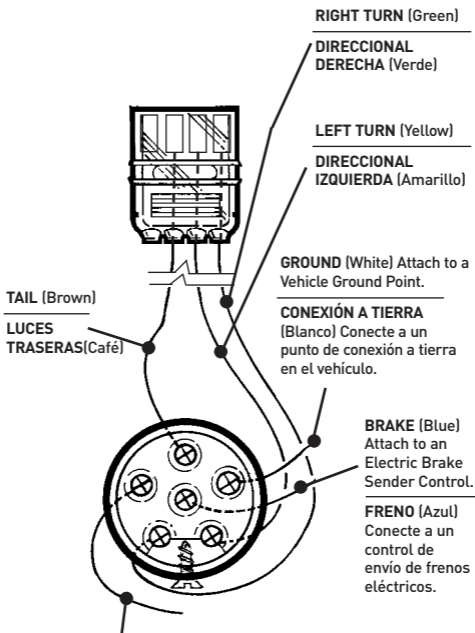

BATERÍA (Rojo) Conductor auxiliar de energía. Conecte al bloque de fusibles o conductor de batería fundido.

VIEW LOOKING AT FRONT OF PLUG
VISTA MIRANDO EL FRENTE DEL ENCHUFE

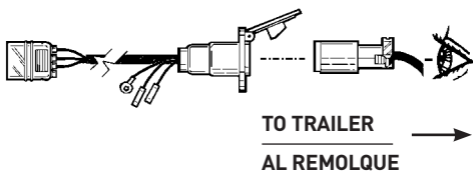

1. Determine un punto de montaje apropiado en el vehículo de remolque.
2. Localice el punto de conexión a tierra y limpie la suciedad y anticorrosivos del área. Conecte a tierra el cable blanco.
3. Conecte los cables restantes. Vea el diagrama adjunto.

NOTA: Localice los cables en el vehículo por función solamente. Los códigos de color no son los mismos entre todos los fabricantes.

CONSEJOS:

- La aplicación frecuente de grasa a las terminales de los cables del remolque ayudará a prevenir la corrosión.
- Se puede requerir una luz intermitente de alta potencia para eliminar una intermitencia demasiado rápida.
- Siempre desenchufe el conector del remolque de botes antes de regresar el remolque al agua.