
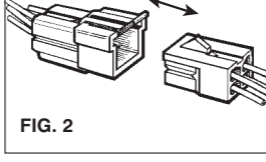


#47725

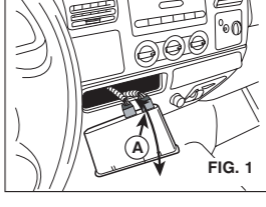

1. Remove storage compartment to the left of ash tray.
2. Remove connector (Fig. 1 / A) from back of storage compartment.
3. Plug the connector into the vehicle connector (Fig. 2).
4. Attach / splice wires to a brake control using the wiring code provided.
5. Test all functions.

WIRE CODE

White wire.....Ground

Blue wire.....Electric brake

Black wire.....Battery

Red wire.....Stop lamp switch

NOTE: Wire to brake control by function only. Color coding is not standard among all manufacturers. To ensure proper installation, read brake control instructions thoroughly.

-
1. Mueva el compartimiento para almacenaje hacia la izquierda del cenicero.
 2. Quite el conector de atras del compartimiento de almacenaje.
 3. Enchufe el conector dentro del conector del vehículo (Fig. 2).
 4. Sujete / empalme cables al control de frenos usando el código de cableado proporcionado.
 5. Pruebe todas las funciones.

CÓDIGO de CABLEADO

Cable blanco.....Tierra

Cable azul.....Freno eléctrico

Cable negro.....Batería

Cable rojo.....De luces de pare

NOTA: Instale el control de frenos por función solamente. El código de color no es igual entre todos los fabricantes.

Para asegurar una instalación correcta, lea completamente las instrucciones para el control de frenos.