


# #52006

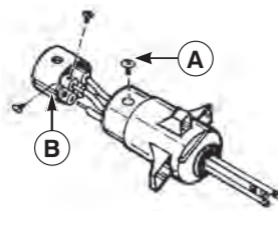

1. Loosen the set screw (A) on the vehicle end socket and remove the socket from housing. Route wiring through socket housing. Strip wires 1/4" and tightly secure them to socket terminals. Align socket keyway with housing key (B) and insert socket into housing. Tighten set screw.
2. Plug trailer in to vehicle and test all functions.

## LOCATE WIRES BY FUNCTION ONLY

- White wire..... Attach to good ground  
Yellow wire.... Attach to left turn  
Green wire .... Attach to right turn  
Brown wire ... Attach to the taillight

- 
1. Afloje el tornillo (A) en el vehículo enchufe y retire el enchufe de la caja. Deslice los cables a través de la caja. Pele 6 mm de los extremos de los cables y asegúrelos a las terminales. Alinee el enchufe con la llave (B) de la caja e inserte el enchufe dentro de la caja. Apriete los tornillos.
  2. Conecte en al remolque y revise el sistema de luces para la operación correcta.

## LOCALICE LOS CABLES POR FUNCIÓN SOLAMENTE

- Cable blanco .... Conecte a una buena conexión a tierra  
Cable amarillo..... Conecte a la direccional izquierda  
Cable verde..... Conecte a la direccional derecha  
Cable café ..... Conecte a las luces traseras