


#53085



1. Under the dash, to the left of the steering column, locate the electrical junction box (FIG. 1) .
2. Remove the lid to expose the mating connection for the brake control harness located on the left-hand side of the box (FIG. 2).
3. Plug in mating connector and replace junction box cover.
4. Attach/splice wires to a brake control using the wiring codes provided

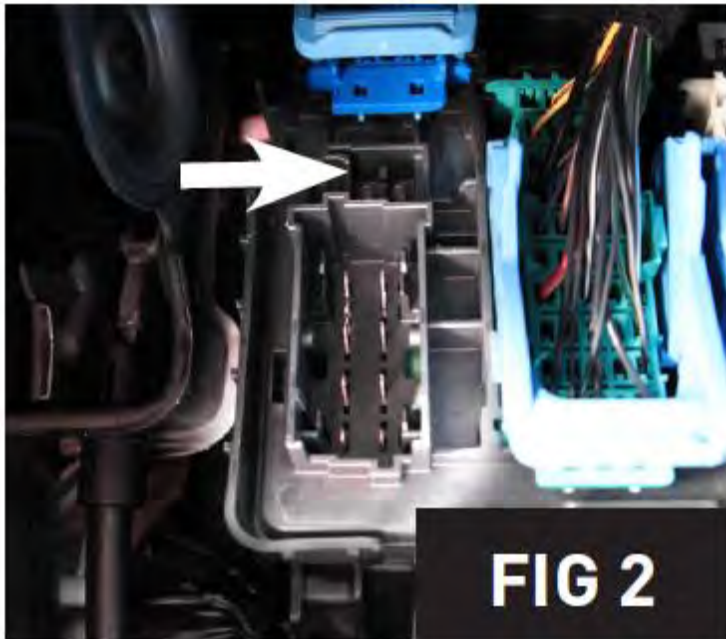

Wiring Codes

White Wire.. Ground

Blue Wire... Electric Brake

Black Wire..Battery

Red Wire.....Stop Lamp Switch

NOTE: Wire to brake control by function only. Color coding is not standard among all manufacturers. To ensure proper installation, read brake control instructions thoroughly.